



Simply Better Connections

VW3620

36 × 20 Modular Video Wall
Processor
User Manual

Compliance Statements

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Warning

Operation of this equipment in a residential environment could cause radio interference.

Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.



KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이
점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로
합니다.

Industry Canada Statement

This Class A digital apparatus complies with Canadian ICES-003.

CAN ICES-003 (A) / NMB-003 (A)

HDMI Trademark Statement

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



RoHS

This product is RoHS compliant.

User Information

Online Registration

Be sure to register your product at our online support center:

International	http://eservice.aten.com
---------------	---

Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Caution: There is a risk of explosion if the battery is replaced by an incorrect type. Always dispose of used batteries according to the relevant instructions.

Product Information

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	http://www.aten.com
---------------	---

Package Contents

Check to make sure that all of the components are present and in good order. If anything is missing or was damaged in shipping, contact your dealer.

VW3620

The VW3620 package consists of:

- ◆ 1 VW3620 36 × 20 Modular Video Wall Processor
- ◆ 1 power module
- ◆ 1 power cord
- ◆ 1 cable strap
- ◆ 1 user instructions

VW784 / VW884

The 4-Port 4K HDMI Input Board for VW Series / 4-Port 4K HDMI Output Board for VW Series package consists of:

- ◆ 1 VW784 4-Port 4K HDMI Input Board for VW Series / VW884 4-Port 4K HDMI Output Board for VW Series
- ◆ 1 user instructions

Contents

Compliance Statements	ii
User Information	iv
Online Registration	iv
Telephone Support	iv
User Notice	iv
Product Information	v
Package Contents.....	v
VW3620.....	v
VW784 / VW884.....	v
About this Manual	xi
Conventions	xii

1. Introduction

Overview.....	1
VW3620	1
VW784 / VW884.....	2
Features	3
VW3620	3
VW784 / VW884.....	4
Compatible Browsers	5
Optional Equipment	5
Components	6
VW3620 Front View	6
VW3620 Side View	7
VW3620 Rear View	8
VW784 Front View	10
VW884 Front View	11

2. Hardware Setup

Transporting and Storing the Unit	13
Installing the Power Module.....	14
Adjusting the Cable Strap.....	18
Installation	19
Installing the Input / Output Boards	22
Rack Mounting	24

Mounting with Brackets	25
------------------------------	----

3. Front Panel Operation

Overview	29
Front Panel Pushbuttons	30
Front Panel LCD	31
Standby Mode	31
Idle Screen	31
LCD Password	32
Menu	34
System Info	35
Mode	36
Timeout	36
Change Password	37
Settings	38
Baud Rate	38
EDID Mode	39
OSD	39
Network	40
F/W upgrade	41
Local Output	44
Zone View	45
Single Source View	45
Array Source View	46
Profile	47

4. Browser Operation

Overview	49
Logging In	49
Display Configuration	51
Main Page	56
Menu Bar	57
Setting the Standby Mode	57
Source Array	58
Scheduling	59
Create a Scheduled Task	59
Scheduled Tasks Management	62
Design Mode	63

Understanding Display Zones	63
Understanding Profiles and Profile List.	63
Interactive Functions on Design Mode Tab	63
Multiview Window Management	70
Create a Multiview Window.	70
Configure a Multiview Window	72
Customized Video Source.	73
Profile Management	74
Creating a Profile	74
Edit a Profile	75
Apply a Profile	76
Preview	77
Delete a Profile	78
System Settings	79
Overview	80
General	81
Port Settings.	82
HDCP	83
Source Settings	83
Zone Settings.	84
Scaler Resolution	84
Port Name	86
EDID	87
EDID Mode.	88
EDID & CEA Description	89
CEC	90
HDR	91
Status	92
4K60 Mode Configuration	93
Enable 4K60 Mode	93
Maintenance	96
System Setup	97
User Account	98
Add a New User.	98
Edit / Delete an Existing User.	100
Network.	101
Security	103

5. Tablet Control

Overview	105
Logging In	105
Profile List Operation	108
Opening a Profile.	108
Editing a Profile	109
Single Source Operation.	111
Adding a Window	111
Video Source Management	112
Multiview Window Configuration.	114
Create a Multiview Window	114
Editing / Deleting a Multiview Window	116
Window Behavior and Adjustment.	118
Adding an Image	118
Layout Management	119
Resizing.	119
Cropping.	120

6. Device Chaining

Overview	123
Hardware Setup	123
Connection Rule	123
Backup Mode.	123
Expansion Mode	124
Example System Architecture	125
Browser Operation	126
Chain Status	126
Chain Mode	127
Device Chain Configuration	128
Enabling Chain Mode.	128
Disabling Chain Mode.	130
Chain Mode Behavior and UI Restrictions.	132
Backup Mode	132
Expansion Mode	132
Chain Mode Recovery & Sync Notifications	134
Primary Disconnection	134
Primary Restored	136

7. CLI Commands

Overview	139
Connecting to the Video Wall Processor via Telnet	139
Connecting to the Video Wall Processor via RS-232	140
Command Guidelines	141
Verification	141
Commands	142
Switch Port Command	142
Load Profile Commands	143
EDID Mode Command	144
CEC Command	145
Read Command	146
Reset Command	146
Reboot Command	146
Baud Rate Command	147
Echo Command	147
Fan Speed Command	148
Alert Command	149
Standby Mode Command	150

Appendix

Safety Instructions	151
General	151
Rack Mounting	153
Technical Support	154
International	154
Specifications	155
VW3620	155
VW784 / VW884	157
ATEN Warranty Policy	158

About this Manual

This manual covers all aspects of installation, configuration and operation of the VW3620 36 × 20 Modular Video Wall Processor. An overview of the information found in the manual is provided below.

Chapter 1 Introduction introduces you to the VW3620 and its components. Its purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2 Hardware Setup describes how to set up the hardware for your Modular Matrix Solution installation.

Chapter 3 Front Panel Operation explains the fundamental concepts involved in operating the VW3620 at the local site via the front panel LCD display using pushbuttons.

Chapter 4 Browser Operation provides a complete description of the Modular Matrix Solution's web Graphical User Interface (GUI), and how to use it to remotely configure and operate the Modular Matrix Solution.

Chapter 5 Tablet Control describes how to control and configure the VW3620 using the tablet browser interface, where the user flow and UI responses may differ slightly from the PC browser version.

Chapter 6 Device Chaining explains how to set up and manage device chaining on the VW3620. The procedures and interface elements described here apply to both Backup and Expansion modes. Depending on the chain configuration, the behavior of the system and the level of control available to each unit (Primary or Secondary) may vary.

Chapter 7 CLI Commands provides a complete list of the serial control protocol commands used via RS-232 or Telnet.

Appendix provides specifications and other technical information regarding the VW3620.

Note:

- ◆ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the device or to any other connected devices.
 - ◆ The VW3620 product firmware may have been updated with new features after the release of this manual. For an up-to-date VW3620 user manual, visit <http://www.aten.com/global/en/>
-

Conventions

This manual uses the following conventions:

- Monospaced Indicates text that you should key in.
- [] Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
1. Numbered lists represent procedures with sequential steps.
- ◆ Bullet lists provide information, but do not involve sequential steps.
- > Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start > Run means to open the *Start* menu, and then select *Run*.
-  Indicates critical information.

Chapter 1

Introduction

Overview

VW3620

Purpose-built to meet the increasingly stringent system performance requirements in mission-critical applications, the VW3620 is a 7U, modular True 4K video wall processor with 7 input slots, 5 output slots, and 2 function board slots, which also work as input board slots, to support up to 36 input sources and 20 display terminals while being able to handle True 4K sources* without delay. Advanced 4K@60 4:4:4 scaling technology plus the signal processing capability allow the VW3620 to deliver astonishing, accurate True 4K imagery. The hot-swappable, redundant CPU control board and dual power modules add an extra level of reliability. With input / output cards and cooling fan module also coming hot-swappable, the VW3620 guarantees 24/7 operation and easy maintenance in scenarios where system malfunction or shutdown is unacceptable.

Note: By enabling the 4K@60 mode, you are able to play the video at 4K resolution (3840 × 2160) and 60 fps (frames per second) from port A and port C of the selected input card (VW784), which supports up to four 4K@30Hz inputs or two 4K@60Hz inputs.

Thanks to ATEN's cutting-edge windowing technology, the VW3620 supports multiple video walls with varying resolutions. Nearly restriction-free window placement functionality allows source cropping, overlap, and more, displaying a tailored view of every piece of crucial information. Organization logos, color schemes, calendar, clock, and scrolling text can be added to the video walls to widely broaden applications. Moreover, the VW3620 can be configured and controlled via various methods to overcome geographical limitations, from RS-232, Ethernet, the front panel buttons, web GUI to RESTful API. Integration with ATEN Control System and the 3rd party devices is allowed through its RS-232 and Ethernet interfaces as well as the support for RESTful APIs.

The VW3620's unrivalled video wall processing power, configurability and reliability have made it suitable for a range of mission-critical video wall applications, including command centers, control rooms, public security organizations, governments, or other large-scale digital signage scenarios such as exhibitions, broadcasting, and education organizations.

VW784 / VW884

VW784 / VW884 is a 4-port 4K HDMI input / output board built to work with VW3620 Modular Video Wall Processor, with VW784 taking 4 HDMI sources and VW884 enabling routing of 4 HDMI signals to 4 displays, meeting the increasingly stringent video wall requirements in mission-critical applications. With the support for Seamless Switch™, the VW784 / VW884 allows real-time video switching and stable signal transmission.

The EDID Expert™ technology enables the selection of optimum EDID settings for smooth power-up, high quality display and use of the best video resolutions across different screens. A True 4K scaler is built into VW884 to handle different video resolutions. In addition, the VW784 / VW884 supports hot-swappable installation to give system integrators great flexibility and efficiency for maintenance.

Features

VW3620

- ◆ Processes up to 36 input sources and manages up to 20 displays in any sizes at varying resolutions from a single 7U chassis
- ◆ Modular construction with 7 input slots, 5 output slots, and 2 function board slots, which also work as input board slots, to meet various expansion needs
- ◆ FPGA hardware architecture—handles True 4K input sources, supports near-zero-second seamless source switching, and transmits high quality video streams without delay
- ◆ True 4K@60 scalability with 4:4:4 signal processing—supports custom resolutions and enables upscaling of video signals for crystal clear, accurate imagery regardless of the display size or type from LED, LCD, DLP, to other large screens
- ◆ Reliable 24/7 operation with hot-swappable, redundant CPU control board and dual power modules, and hot-swappable input / output cards and cooling fan module
- ◆ HDMI (Deep Color, True 4K); HDCP 2.2 compliant
- ◆ Powerful windowing technology for nearly restriction-free content placement—outputs signals in real-time in customizable layouts, such as PiP, PbP, source cropping, overlapping, and spreading across multiple screens, and in any sizes based on the correct aspect ratio
- ◆ Seamless Switch™—unifies video formats to provide continuous video streams, real-time switching and stable signal transmissions
- ◆ Powerful windowing technology for nearly restriction-free content placement—outputs signals in real-time in customizable layouts, such as PiP, PbP, source cropping, overlapping, and spreading across multiple screens, and in any sizes based on the correct aspect ratio
- ◆ Supports Multiview—content source monitoring in 2 × 2 or 4 × 4 layouts from a single display
- ◆ Customizable elements to enhance organization identity and video wall presentation including logos, color schemes, calendar, clock, and scrolling text
- ◆ Direct control via RS-232 / Ethernet connection and the front panel buttons
- ◆ Remote control via intuitive Web GUI to preview input signals in real-time and control outputs including content placement and management of up to 4 canvases

- ◆ Local HDMI output—monitoring of video input signals and video wall layouts via Single / Array mode at up to 1080p in real-time from one display
- ◆ Integration with ATEN Control System and the 3rd party devices via RS-232 / Ethernet / RESTful API
- ◆ Built-in USB Type-A ports—video wall background image change and firmware upgrade
- ◆ Supports FrameSync—avoids image tearing by synchronizing the scaler output frame rate to the input signal frame rate
- ◆ EDID Expert™—selects optimum EDID settings for smooth power-up, high-quality display and use of the best video resolution across different screens
- ◆ Supports SSH to strengthen data and information protection
- ◆ Perfect for mission-critical video wall applications, including command centers, control rooms, public security organizations, governments, or other large-scale digital signage scenarios

VW784 / VW884

- ◆ Works with VW3620 to take 4 HDMI sources (VW784) and enable routing of 4 HDMI signals to 4 displays (VW884) for optimum flexibility
- ◆ Supports resolutions up to 4K for superior video quality
- ◆ True 4K @ 60 Hz scalability—supports custom resolutions and enables upscaling of signals for crystal clear, accurate imagery regardless of the display size or type from LED, LCD, DLP, to other large screens (VW884)
- ◆ Supports HDR, HDR+, and Dolby Vision
- ◆ Seamless Switch—unifies video formats to provide continuous video streams, real-time switching, and stable signal transmissions
- ◆ EDID Expert—selects optimum EDID settings for smooth power-up and the highest quality display
- ◆ HDMI (Deep Color, 4K); HDCP 2.2 Compatible
- ◆ Supports hot-swappable installation for great system integration flexibility and maintenance efficiency
- ◆ Output rates matched to input rates to prevent lagging and freezing, ensuring stable, smooth video display
- ◆ Consumer Electronics Control (CEC)

Compatible Browsers

In order to achieve the best performance, the browsers listed in the table below are recommended to be used with the VW3620 Web GUI.


OS	Java Version	Browser
Windows 10 (64 bit)	V1.8.0_391 (64 bit)	Chrome
		Edge
		Firefox
		Opera
Windows 10 Enterprise (64 bit)		IE
MAC 14.1	Safari	

Optional Equipment


Purchase optional equipment such as a secondary power module, fan, or rack mount kit to get the most out of your ATEN Video Wall Processor. For more information, go to <https://www.aten.com/global/en/>

Components

VW3620 Front View

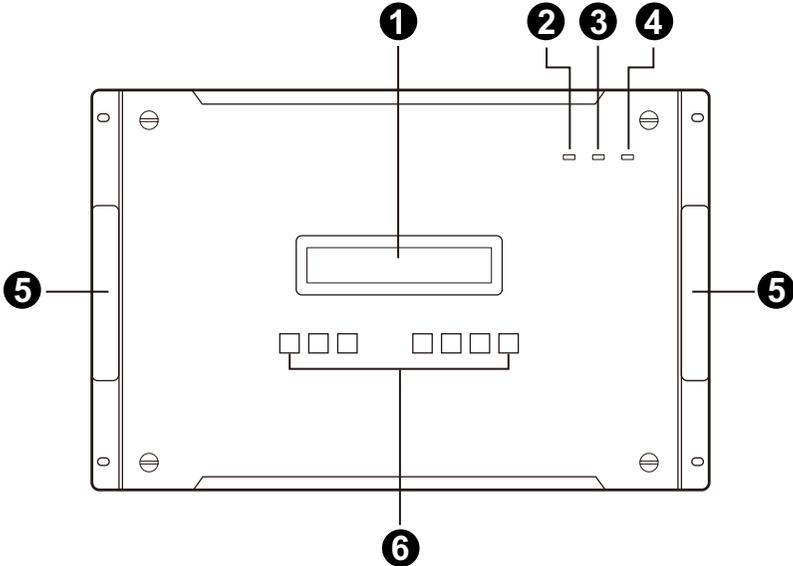


No.	Component	Description
1	LCD display	The LCD display shows the options for configuring and operating the VW3620. See <i>Front Panel Pushbuttons</i> , page 30, for details.
2	alarm LED	The LED lights red to indicate that a system error occurred. To obtain details for the issue, log in to the Web GUI. The alarm LED goes off once the system error is fixed.
3	redundant power LED	The LED lights green to indicate that the redundant power module is in operation.
4	primary power LED	The primary power LED gives the following status: <ul style="list-style-type: none"> ◆ lights green Indicates that the primary power module is in operation. ◆ blinks Indicates that the unit is in sleep mode.
5	handles	The two front handles are used to install the unit into a rack.
6	function pushbuttons	Use the pushbuttons to control and configure the options available to the unit. See <i>Front Panel Pushbuttons</i> , page 30, for details. Note: The pushbuttons have LEDs that light to indicate they have been selected.

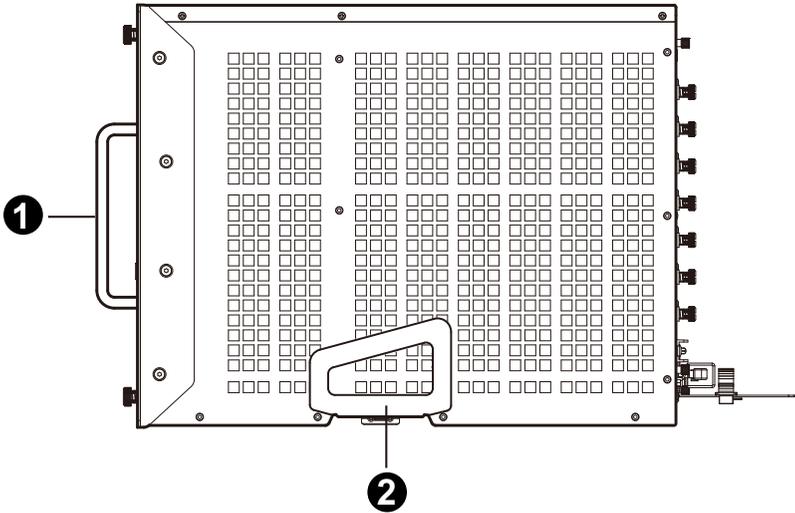VW3620 Side View

No.	Component	Description
1	handles	The two front handles are used to install the unit into a rack.
2	recessed handles	The two side handles are used to transport the unit. Push in to lock and unlock the handles so that they can be used to carry the unit and be tucked away when not in use.


VW3620 Rear View

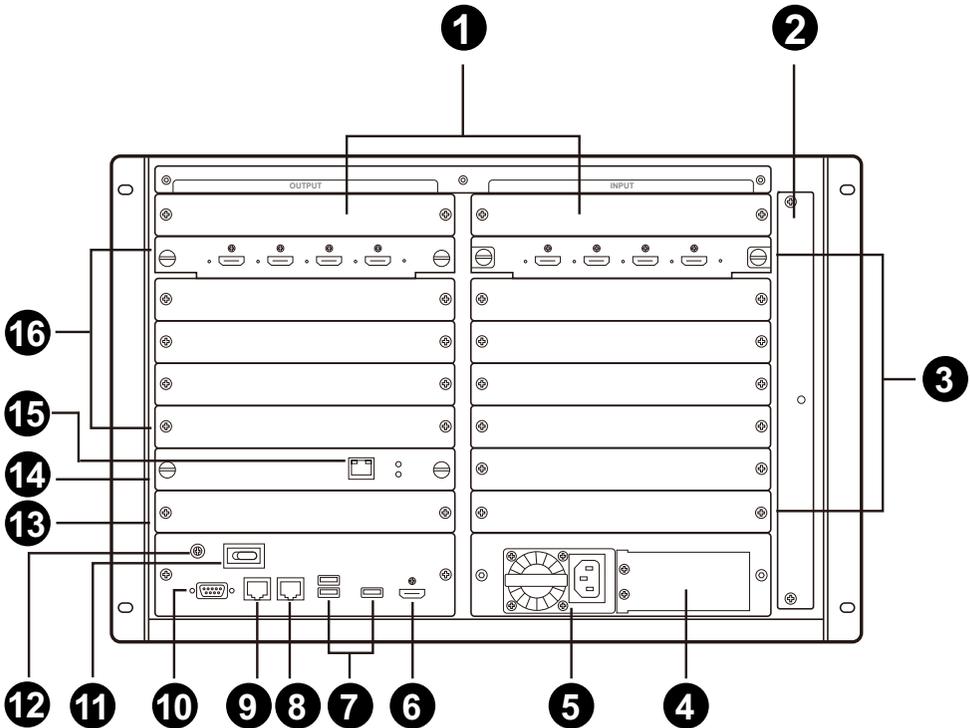

No.	Component	Description
1	function board / video input board slots	Optionally install the VW784 video input board(s) to the function board / video input board slot(s) for expansion.
2	fan module	The fan module is used for cooling down the unit that generates heat in operation.
3	video input board slots	Optionally install the VW784 video input board(s) to the video input board slot(s) for expansion.
4	redundant power slot	Optionally install an additional power supply for redundant power protection. For more information about the power module, visit the product web page.
5	primary power module	Connect the supplied power cord to the unit's primary power socket. See <i>Installing the Power Module</i> , page 14 for how to install the power module to the VW3620 video wall processor.


No.	Component	Description
6	system HDMI local output	Connect to an HDMI-enabled display for monitoring, previewing, and controlling the real-time content.
7	USB Type-A ports	Connect your data storage device(s) to the USB Type-A port(s). Currently the USB ports support storage and firmware upgrade.
8	RJ-45 port (chain out)	Connect to the RJ-45 port (chain in) of the next VW3620 to daisy-chain the units. Note: See <i>Device Chaining</i> , page 123 for details.
9	RJ-45 port (chain in)	Connect to the RJ-45 port (chain out) of the last VW3620 to daisy-chain the units. Note: See <i>Device Chaining</i> , page 123 for details.
10	RS-232 serial port	Connect a PC or an ATEN Control Box to the RS-232 serial port for controlling the unit.
11	grounding terminal	Attach the grounding wire here.
12	power switch	Use the power switch to power the unit on and off.
13	redundant CPU slot	Optionally install the CPU board to VW3620's redundant CPU slot for hot-standby operation.
14	primary CPU board	Connect the Ethernet port of the primary CPU board to the network using an Ethernet cable.
15	Ethernet port	In order to access the VW3620's web Graphical User Interface (GUI), the VW3620 must be connected to the network. The cable that connects the VW3620 to your LAN plugs in here. For further details, see <i>Installation</i> page 19.
16	video output board slots	Optionally install the VW884 video output board(s) to the video output board slot(s) for expansion.

VW784 Front View

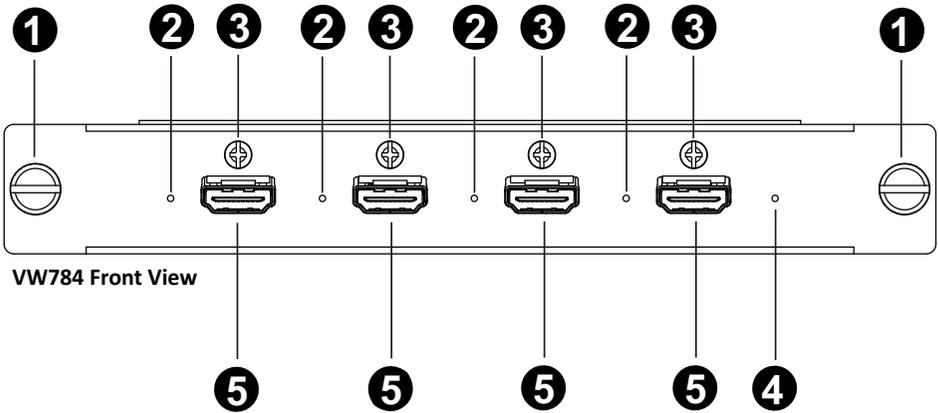

VW784 Front View

No.	Component	Description
1	thumb screws	Tighten the screw by turning it clockwise while loosen the screw by turning it anticlockwise.
2	link LEDs	Light up to indicate stable connection with the connected source devices.
3	ATEN LockPro™ screws	Optionally secure an ATEN LockPro™ to hold the HDMI cable in place and prevent it from falling off.
4	status LED	Indicate the working status of the unit.
5	HDMI out	Connect with your video display device(s) using an HDMI cable.

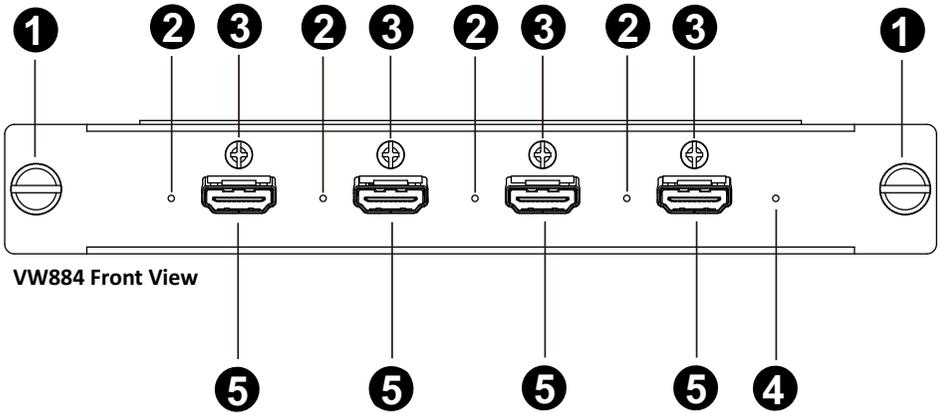VW884 Front View

No.	Component	Description
1	thumb screws	Tighten the screw by turning it clockwise while loosen the screw by turning it anticlockwise.
2	link LEDs	Light up to indicate stable connection with the connected source devices.
3	ATEN LockPro™ screws	Optionally secure an ATEN LockPro™ to hold the HDMI cable in place and prevent it from falling off.
4	status LED	Indicates the working status of the unit.
5	HDMI out	Connect with your video source device(s) using an HDMI cable.

This Page Intentionally Left Blank

Chapter 2

Hardware Setup




1. Important safety information regarding the placement of this device is provided on page 151. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

Transporting and Storing the Unit

Its important to properly transport and store the VW3620. Follow the instructions below to avoid damaging the VW3620 due to improper handling.


When not rack mounted, the VW3620 should be placed on a flat and level surface with the bottom side down. The unit should never be placed with the front, rear or sides facing the ground.

Not for transportation

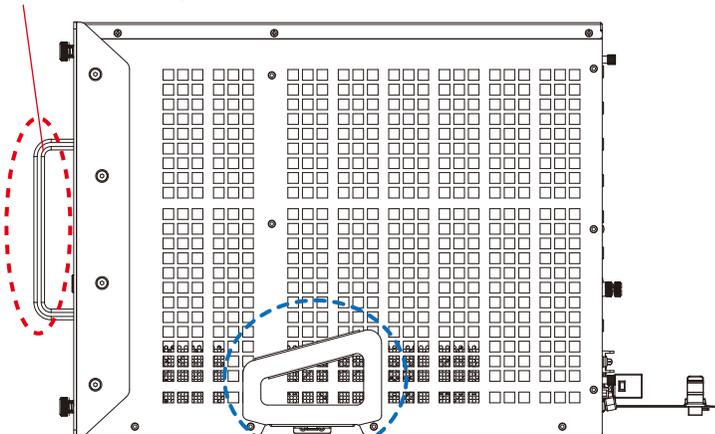

To transport the unit, use the recessed handles, but not the 2 front handles.


Installing the Power Module

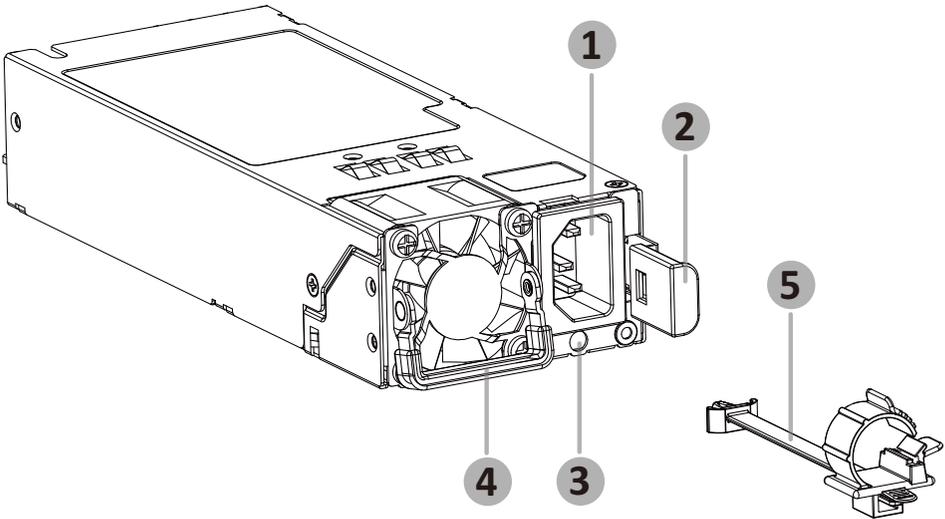


No.	Item	Description
1	3 prong socket	Plugs in the supplied power cord here.
2	power module release lever	Press the lever to detach the power module from the VW3620 video processor.
3	strap mounting hole	Plugs the cable strap here.
4	power module handle	Uses the handle to slide the power module in or out of the VW3620 video wall processor.
5	cable strap	Attaches the cable strap onto the power module and uses it to secure the power cable that connects to the power module.

To install the power module to the VW3620 video wall processor, do the following:


1. Attach the cable strap to the power module by inserting it into the strap mounting hole.

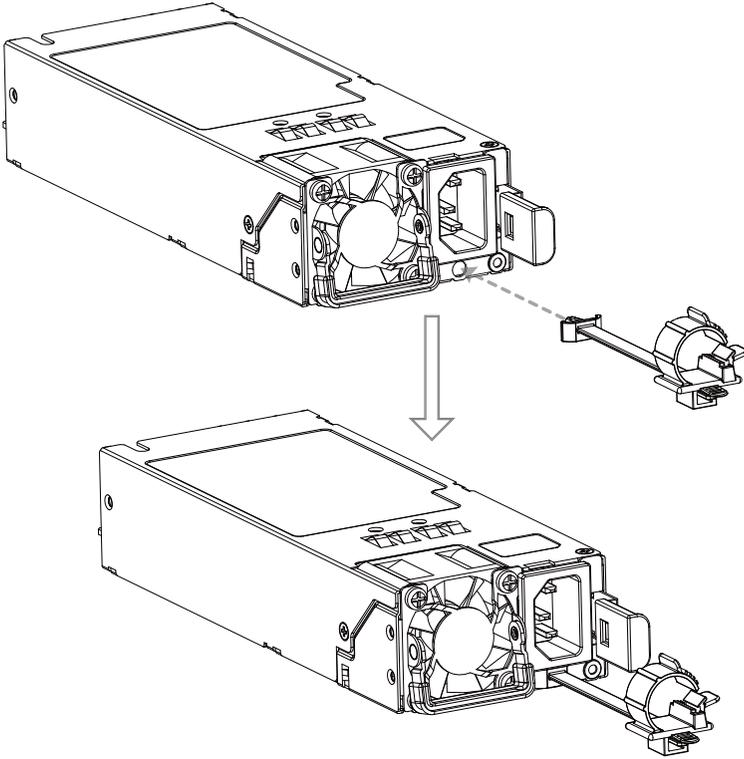


2. Install the power module to a power slot on the rear side of the VW3620 video wall processor:
 - a) To install the power module to the primary power slot, follow the description as step 3 instructs.
 - b) To install the power module to the redundant power slot, remove the slot cover first.

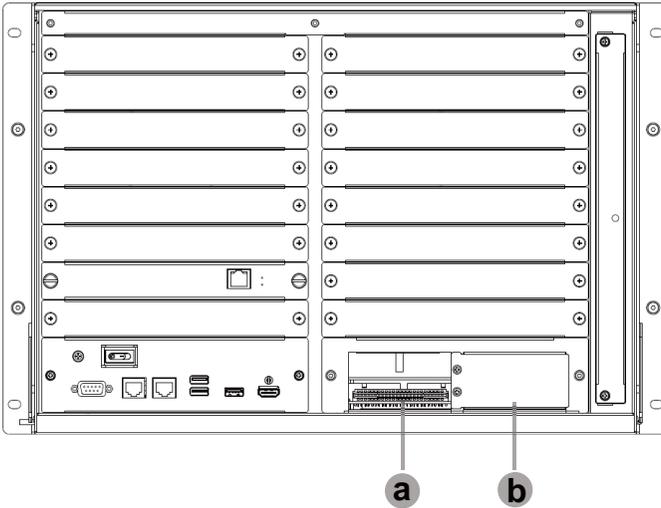



3. Slide the power module to the power slot. A click sound is made once the power module is properly installed.

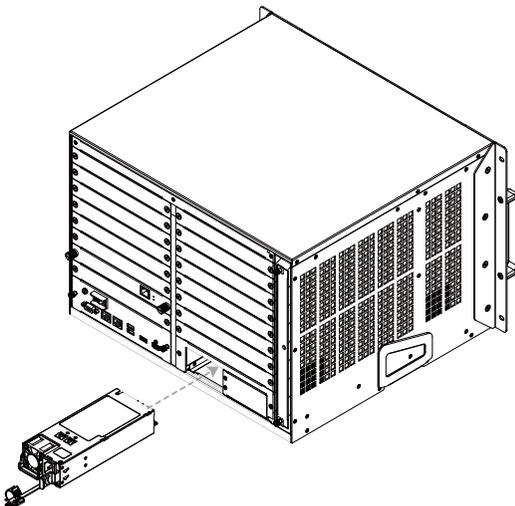

4. Plug the power cord into the 3 prong socket of the power module.

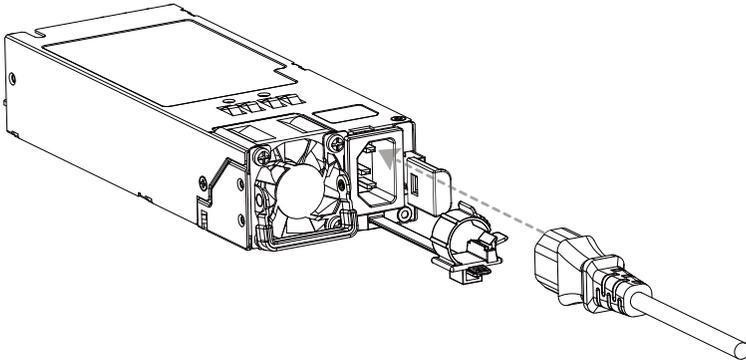


5. Secure the power cord by moving the buckle to the strain relief side of the power cord.

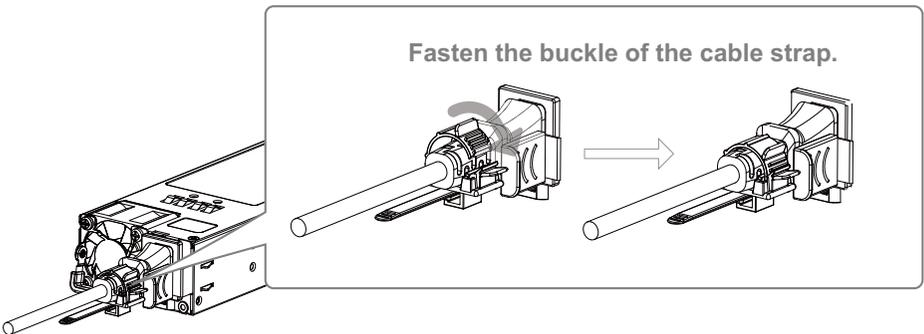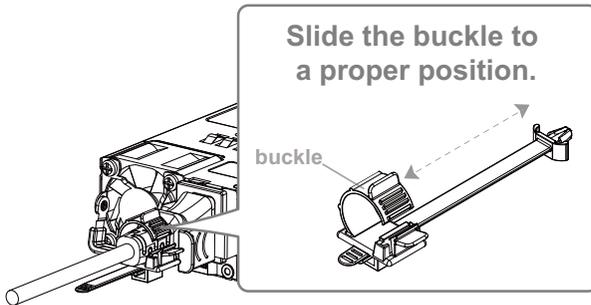


Adjusting the Cable Strap

To loosen the buckle of the cable strap, press the buckle detach lever to unlock the buckle. To adjust the position of the buckle, push down on the locking release lever and move the buckle toward or backward to your preferred position.

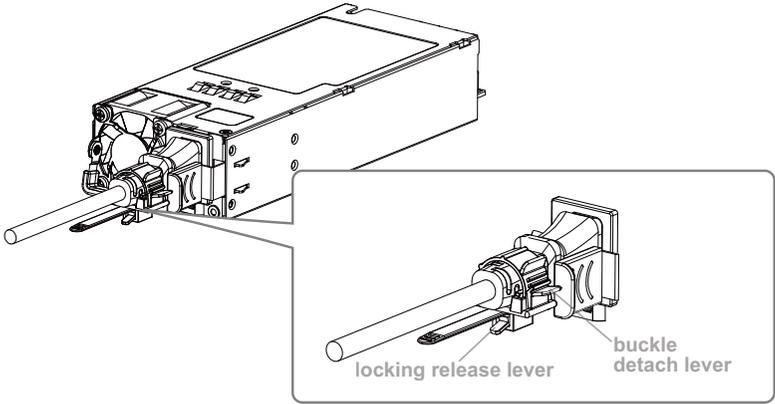

Installation

Follow the steps below to safely install devices to the VW3620.

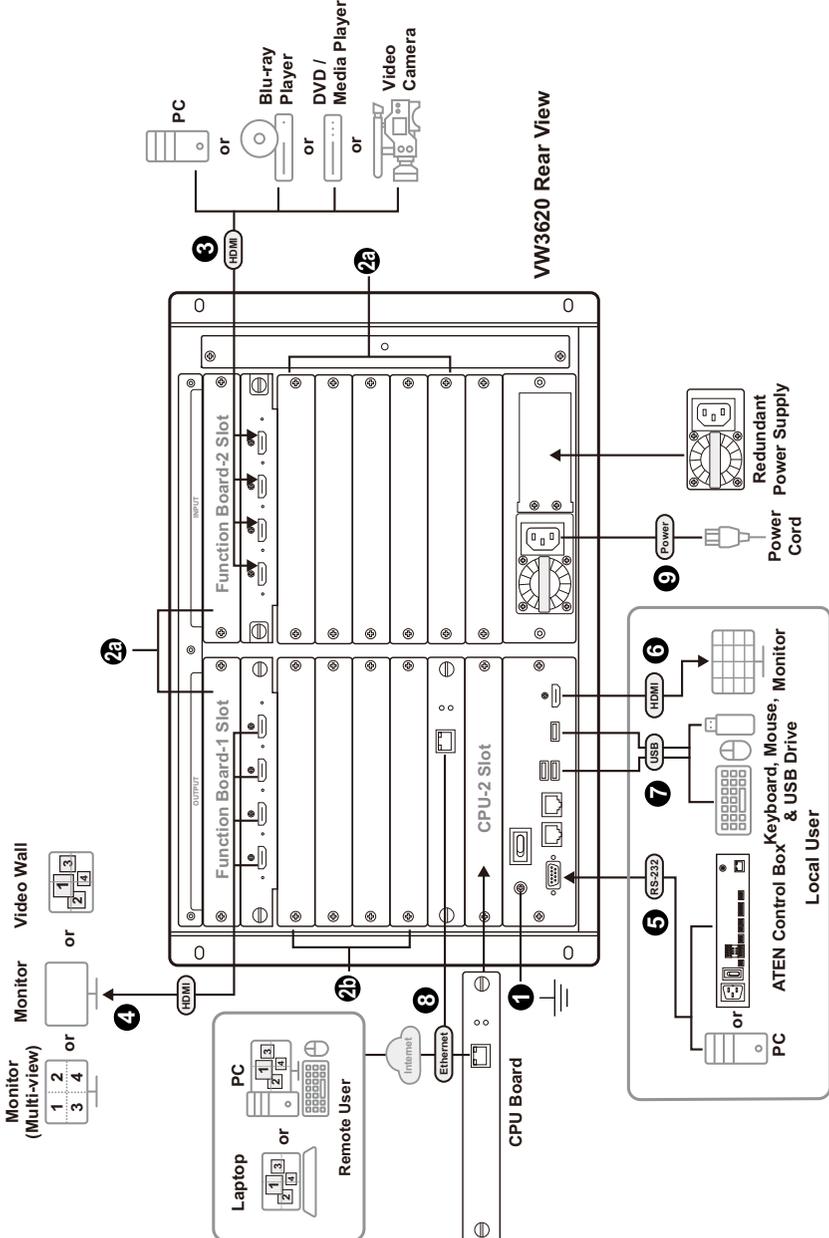

Note: 1. Install the power module onto the unit in advance. See *Installing the Power Module*, page 14, for details.

2. Make sure all the equipment you are connecting to the unit is turned off and disconnected from the power source.
-

1. Use a grounding wire to ground the unit by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.

Note: Do not omit this step. Proper grounding helps prevent damage to the unit from surges or static electricity.

2. Optionally install the video input boards/video output boards to the VW3620 for expansion.
 - a) Install the VW784 video input board(s) to the **video input board slot(s)** or the **function board/video input board slot(s)**.
 - b) Install the VW884 video output board(s) to **video output board slot(s)**.
3. Connect your video source device(s) to the HDMI input port(s) of the VW784 video input board(s).
4. Connect your video display device(s) to the HDMI output port(s) of the VW884 video output board(s).
5. (Optional) To control the VW3620 via serial communication, connect your PC or ATEN Control Box to the unit's RS-232 port.
6. (Optional) To monitor, preview, and control the real-time content, connect an HDMI-enabled display to the system HDMI local output port.
7. (Optional) To upgrade firmware, set the video wall background image, or store the log event data, connect your data storage device(s) to the USB Type-A port(s).

8. (Optional) To remotely operate the VW3620 via the Web GUI, connect the Ethernet port of the primary CPU board to the network using an Ethernet cable.

Note: 1. Optionally install the CPU board to VW3620's redundant CPU slot for hot-standby operation.

2. Secondary CPU board is not part of the standard VW3620 package. For more information on supported CPU boards, go to <https://www.aten.com/global/en/>.
-

9. Connect the supplied power cord to the unit's primary power socket after powering on all other connected equipment.

Note: 1. For redundant power, plug in a power module to the redundant power slot.


2. Secondary power modules are not part of the standard VW3620 package. For more information on supported power modules, go to <https://www.aten.com/global/en/>.
-

10. Turn on the unit's *power switch* (refer to page 9), and the *primary power LED* (refer to page 6) lights green to indicate the unit is powered on.

Installing the Input / Output Boards


To install the VW784 video input board / VW884 video output board into the VW3620 video wall processor, follow the steps below.

1. Remove the slot cover on the rear side of the VW3620 video wall processor.

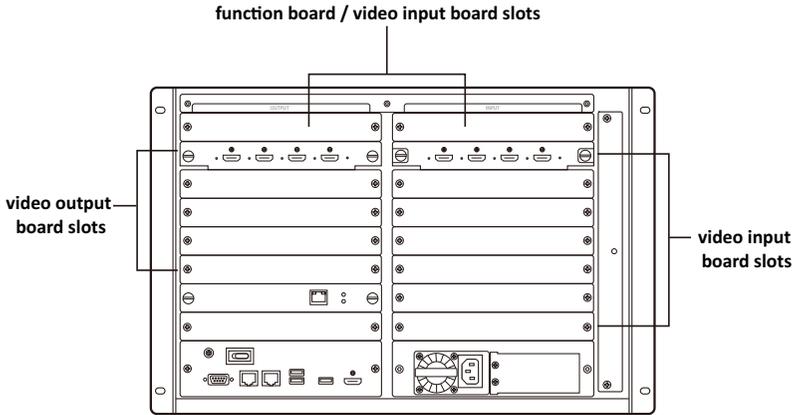


2. Insert the VW784 input board / VW884 output board into the slot of the VW3620.


- ◆ Install the VW784 video input board(s) to the **video input board slot(s)** or the **function board/video input board slot(s)**.

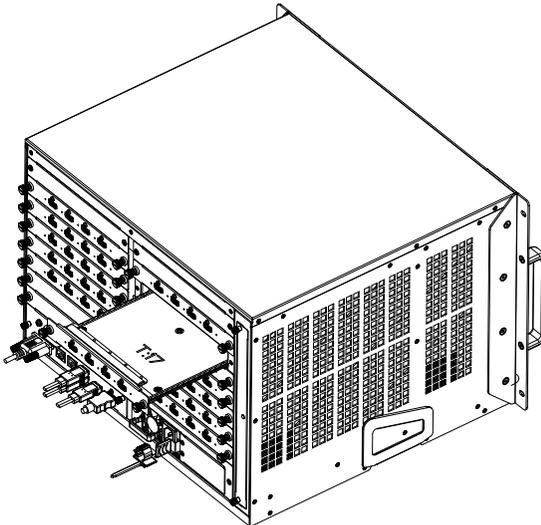

- ◆ Install the VW884 video output board(s) to **video output board slot(s)**.

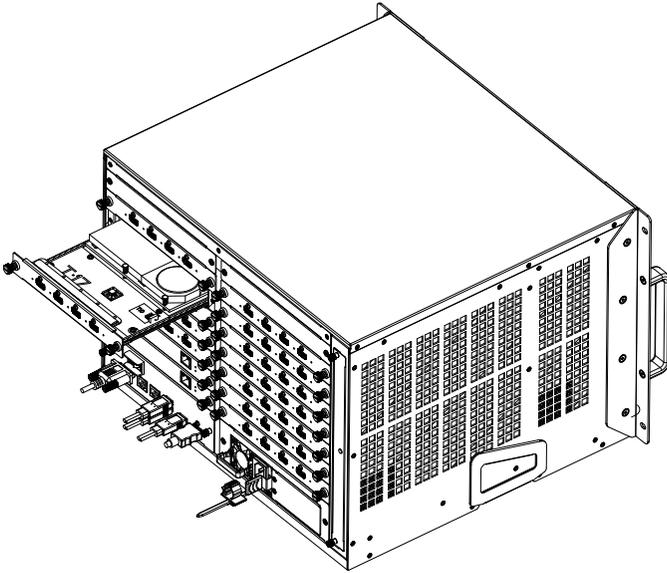

3. Give a little push to get the VW784 video input board / VW884 video output board till it is completely seated in the slot.
4. Apply force to each thumb screw head till it is in place, and then tighten the thumb screw by turning it clockwise.

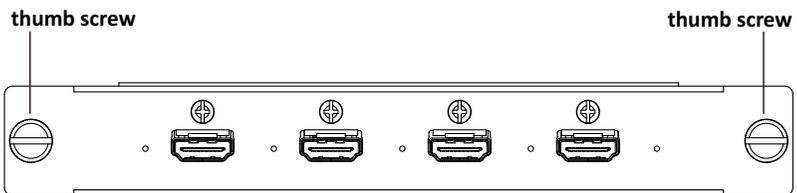

5. Repeat the above steps to install additional I/O boards.


To remove the VW784 video input board / VW884 video output board:

1. Alternately loosen each thumb screw.
2. Hold the two thumb screws and then gently pull out the VW784 input board / VW884 output board.

Rack Mounting

The VW3620 Video Wall Processor can be mounted in a 19" (1U) system rack. For the most convenient front panel operation at the local site, mount the unit at the front of the rack, as follows:

1. Position the unit in the front of the rack, and align the holes of the unit's built-in mounting brackets with the holes in the rack.
2. Use screws to attach the unit to the rack.

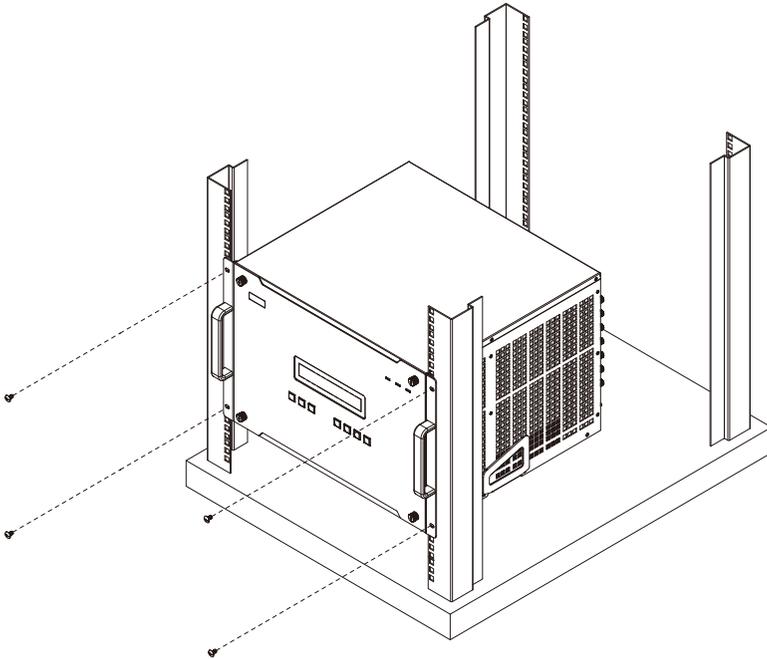


Note: To ensure the VW3620 has sufficient air flow, do not stack items around the unit. Proper air flow ensures safe operation and prevents the unit from overheating.

Mounting with Brackets


You can also use mounting brackets to install the VW3620, as shown below.

Note: The Easy Installation Mounting Kit is not included with the package. To purchase a mounting kit please contact your dealer.


1. Screw the mounting brackets to the rack, as shown in the diagram.

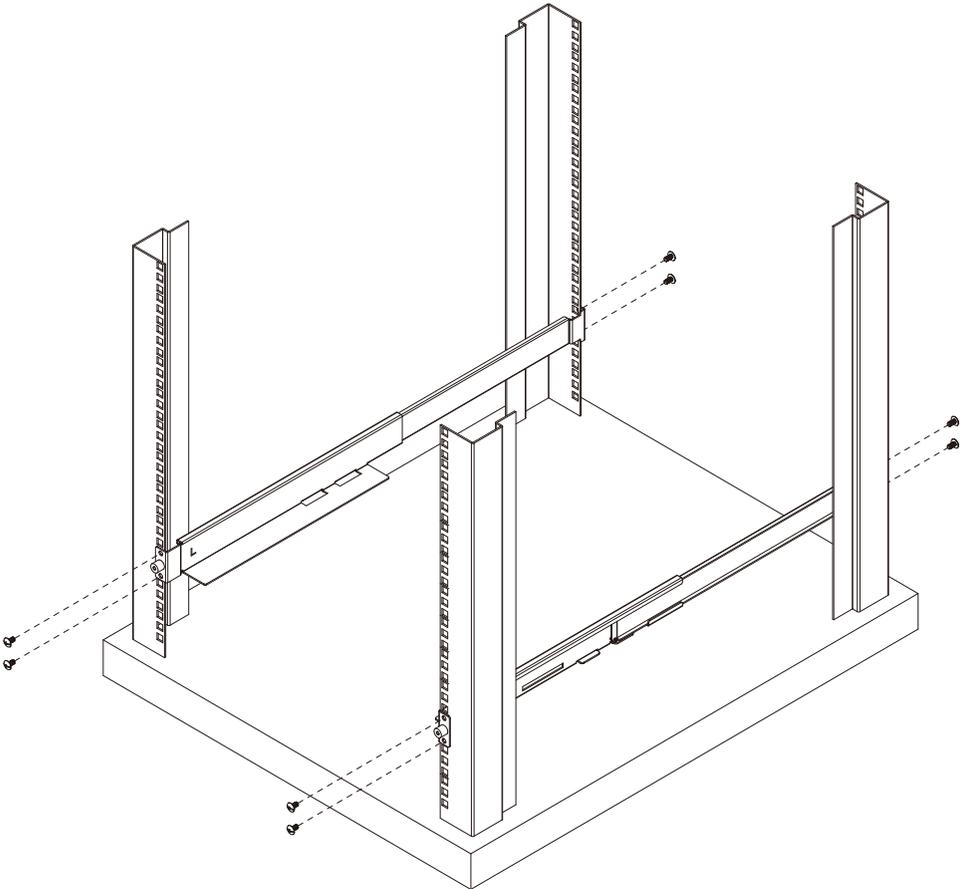

2. Push in and lock the recessed handles, and then slide the unit along the brackets.

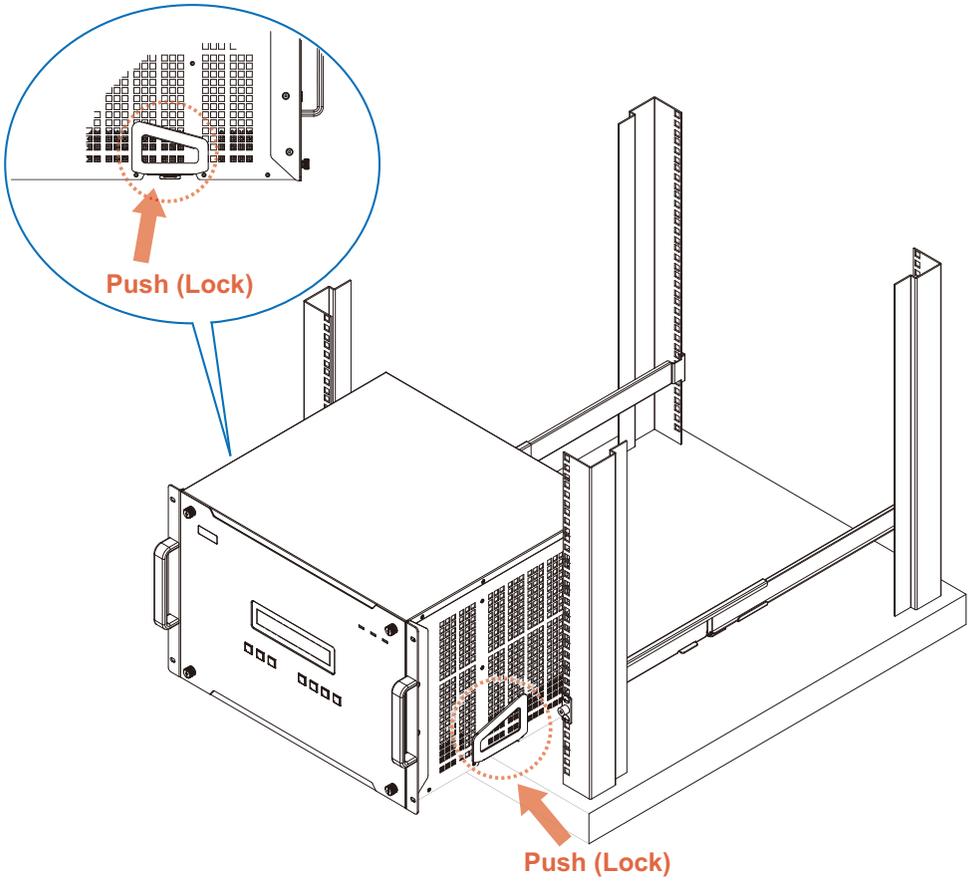

3. Screw the front panel to the rack.

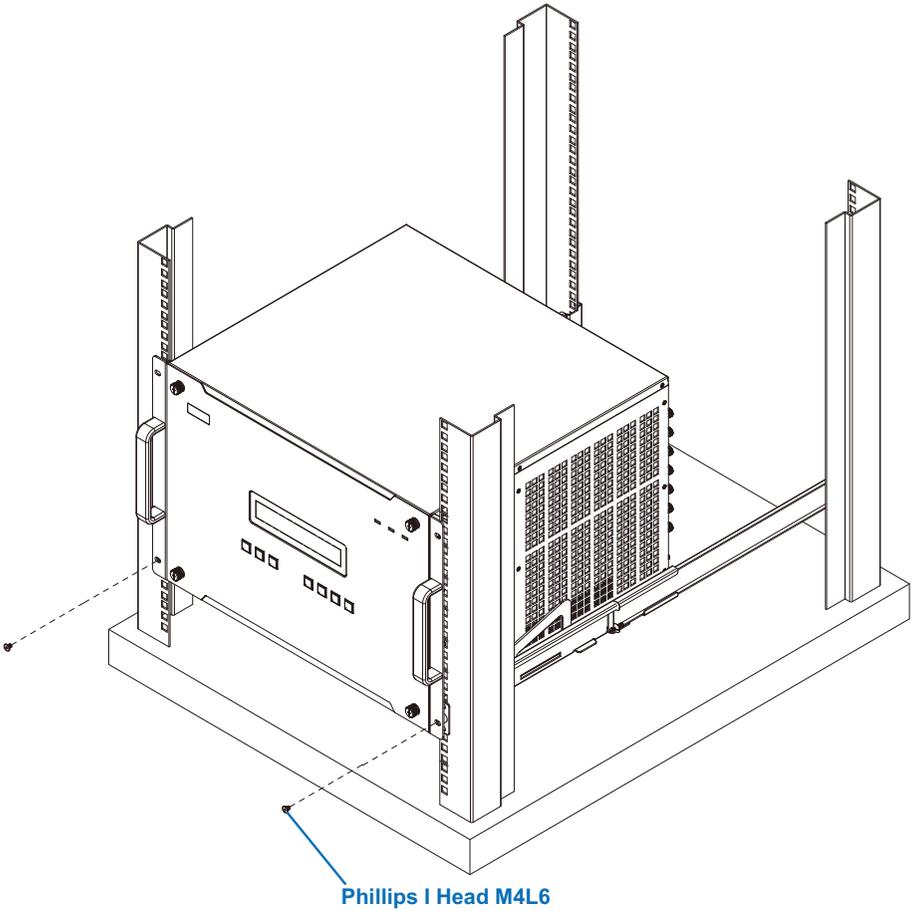

Note: To ensure the VW3620 has sufficient air flow, do not stack items around the unit. Proper air flow ensures safe operation and prevents the unit from overheating.


This Page Intentionally Left Blank

Chapter 3

Front Panel Operation


Overview

The Video Wall Processor installation can be configured and operated locally via the VW3620 front panel LCD and pushbuttons.

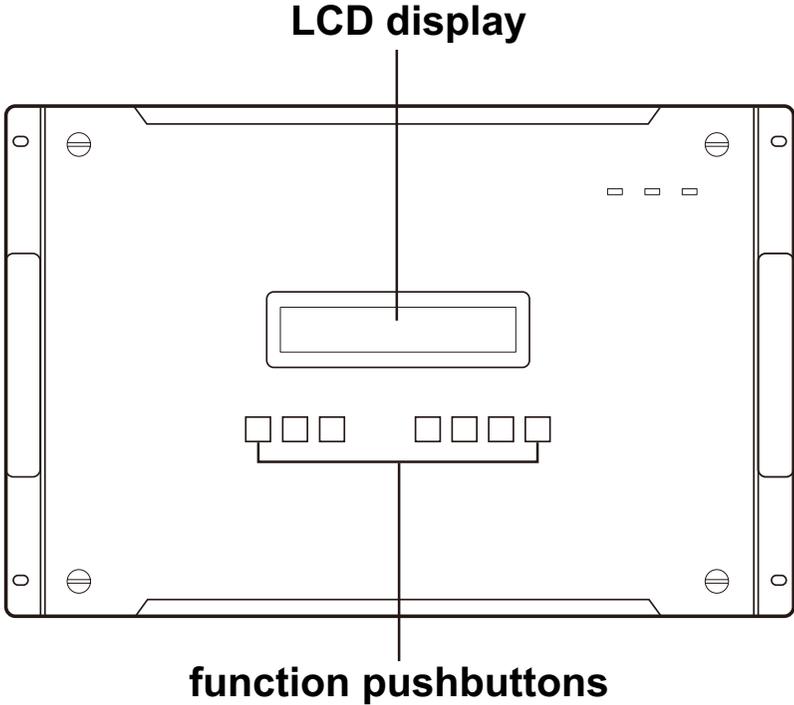

Front Panel Pushbuttons

The VW3620 front panel has easy-to-use pushbuttons for selecting which video source shows on which display. Please note the following front panel button operations:

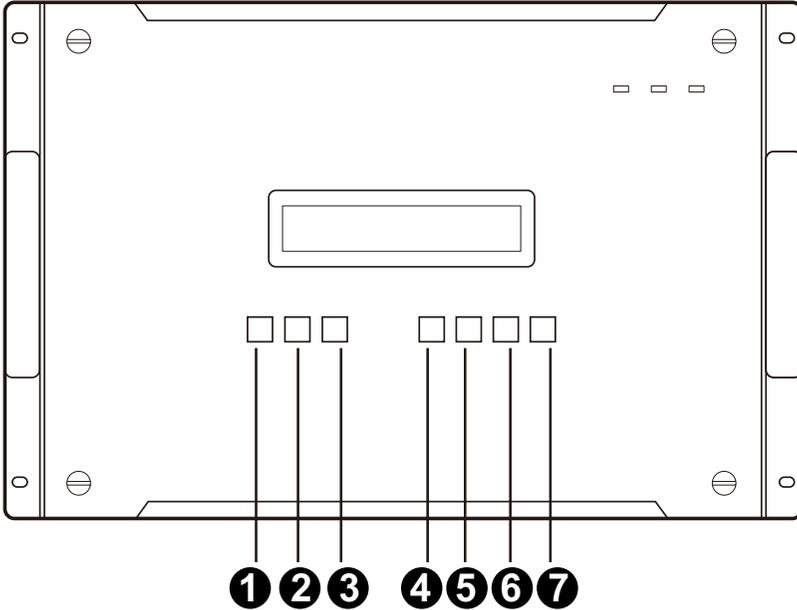


No.	Button	Description
1	Local Output	To configure and preview the content through the HDMI-enabled display connected to the unit's system HDMI local output port
2	Up	To work as the navigation button to scroll through the options listed on the on-screen display
3	Down	To work as the navigation button to scroll through the options listed on the on-screen display
4	Profile	To view, load, and apply the profile(s) that you set in the Web GUI
5	Menu	To enter the main menu screen
6	ESC	To cancel an option or go back to the previous menu screen
7	Enter	To confirm the selection

Front Panel LCD

The VW3620 features an LCD display for convenient configuration. This allows you to perform operations such as viewing the IP settings, configuring the settings of EDID/OSD/ network, selecting security settings, and loading/saving connection profiles. If the VW3620 has been configured to require a password for local operation, you need enter the 4-digit password to unlock the LCD display first. See *LCD Password*, page 32 for how to unlock the password-protected LCD display.

Standby Mode

If the unit is not actively being used, it enters standby mode. To wake up the unit, follow the on-screen instruction to press the **Enter** button, and the unit will be woken up and the LCD display enters the idle screen.

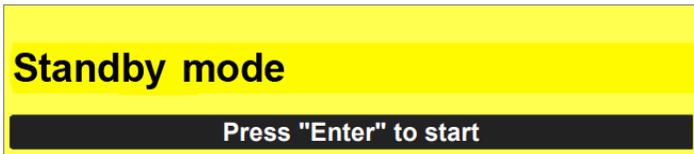

Idle Screen

When the unit is not performing any function, the idle screen is displayed with the following information shown on it:



- ◆ **Date & Time**
The current date and time. You can change the setting through the VW3620 Web GUI.
- ◆ **IP Address**
The IP address of this unit. Open a supported browser on the PC which connects to the network the same with this unit, and enter this IP address to log in to the Web GUI for further configurations.

- ◆ **Firmware Version**

The current firmware version installed on the unit. To upgrade the firmware, please go to the main menu screen > F/W upgrade. See *F/W upgrade*, page 41 for details.

When the LCD display is locked, a lock icon is displayed on the upper-left corner of the screen. To leave the locked idle screen, follow the on-screen instruction to press any button to start, enter your password to continue if a password is required, and finally press the **Enter** button to unlock. If no password is required, simply press any button and then the **Enter** button. See *LCD Password*, page 32, for details.



LCD Password

By default, the password protection is disabled. Please press any button to start, and then press the **Enter** button to unlock the LCD display.

If the password protection is enabled, do the following to enter a 4-digit password to unlock the on-screen display:



1. Press any button to start, and you will enter the screen that requires you to enter the password.
2. Input your password using the **Up** or **Down** buttons to cycle through the digits. Once the digit is selected, press the **Enter** button to advance to the next digit.

Note: To clear the current digit and go back to the previous digit, press the **ESC** button.

3. Press the **Enter** button to submit the 4-digit password to unlock the LCD display.

-
- Note:** 1. The VW3620 password can be any four digit combination between 0000 to 9999.
2. If you enter an incorrect password, the Incorrect Password screen shows up. Press the Enter button to return back to the enter password screen and try again.



Menu

Press the **Menu** pushbutton to access the main menu screen and use the navigation buttons (the **Up** arrow or the **Down** arrow) to cycle through the menu options as illustrated below:

▶ **1.System Info**
2.Operation Mode
3.Security
4.Settings **1/2**

▶ **5.F/W Upgrade** **2/2**

Menu Option	Description
System Info	Shows the system information of this VW3620.
Operation Mode	Configures the input source and the output layout.
Security	Configures the password protection for the LCD display.
Settings	Configures the unit's settings of the EDID mode / OSD / network.
F/W Upgrade	Upgrades the firmware of the VW3620 through local operation.

System Info

On the main menu screen, use the navigation buttons to select System Info and press the **Enter** button to enter the system info screen, the following information are listed:

- ◆ IP address
- ◆ Submask
- ◆ Gateway
- ◆ Firmware version
- ◆ Model name
- ◆ Manufacturer

Press the navigation buttons to switch between page 1 and page 2. Press the **Enter** button or the **ESC** button to return back to the main menu screen. To change the unit's IP address, the submask, and the gateway, please go to the main menu screen > Settings > Network. See *Network*, page 40 for details.

Operation Mode

On the main menu screen, use the navigation buttons to select Operation Mode and press the **Enter** button to enter the submenu to select the zone to be configured, and depending on the mode the unit currently applies, you may enter the submenu(s) as the table below shows:

Mode	Submenu(s) / Action(s)		
Video Wall Mode	Change Input	Select the <i>window</i> to be edited	Select the <i>input source</i>
	Resolution		
	Background	Background	Default
			Black the uploaded image(s)
Load from USB Storage			
Independent Mode	Change Input	Select the <i>output display</i> to be edited	Select the <i>input source</i>
	Resolution	Select the <i>output display</i> to be edited	Select the <i>resolution</i>

Press the **Enter** button or the **ESC** button to return back to the previous page. Security

Enter the submenu of Security, and you can further configure the password-related settings for the VW3620.

- ▶ **1.Mode: Auto Lock with Password**
- 2.Time out: 1min**
- 3.Change Password**

Mode

The VW3620 offers the following three security modes for user to select:

- ▶ **1.Never Lock**
- 2.Auto Lock**
- 3.Auto Lock with password (selected)**

Mode	Description
Never Lock	The VW3620's LCD display is not locked and it can be operated by any user.
Auto Lock	The VW3620 will automatically locks the LCD display when it has been unlocked for a certain period of time which can be set through the main menu > Security > Timeout .
Auto Lock with Password	The VW3620 will automatically locks the LCD display when it has been unlocked for a certain period of time which can be set through the main menu > Security > Timeout . To unlock the LCD display, you need to input the 4-digit password. See <i>LCD Password</i> , page 32.

Please note that the current selected mode is marked with the word selected.


Timeout

The VW3620 LCD display enters the idle screen (see *Idle Screen*, page 31) after it times out. On the Timeout option screen, select between 1 minute, 3 minutes, and 10 minutes to determine how long the LCD display stays unlocked. The current selected option is marked with the word selected.

Change Password

Follow the steps below to change the 4-digit password for unlocking the VW3620's LCD display:

1. Enter the old password by using the navigation buttons (the **Up** arrow or the **Down** arrow) to cycle through the digits. Once the digit is selected, press the **Enter** button to advance to the next digit. You can clear the current digit and go back to the previous digit by pressing the **ESC** button.

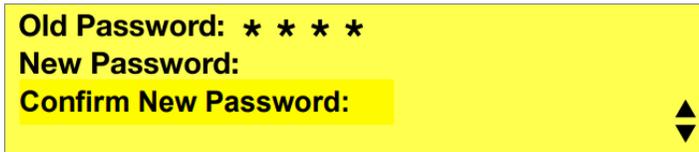

Old Password: * * * *

New Password:

Confirm New Password: ▲▼

Note: The flashing asterisk (*) indicates the current position that will respond to input the digit.

2. Submit the old password by pressing the **Enter** button, and you will advance to the next step to input your new password.


If the old password you just submitted is incorrect, a warning message as the figure below shows up. Follow the on-screen instruction to press the **Enter** button to go back to the step to input the old password again.



Incorrect Password

Press "Enter" to close dialog

3. Input your new password and then press the **Enter** button to go to the next step to confirm the new password. Confirm the new password by inputting it again and then press the **Enter** button to submit your change.

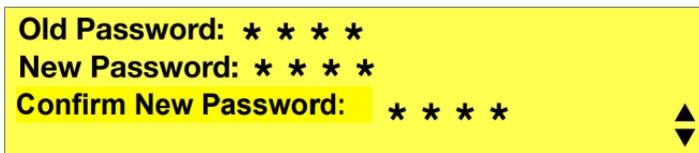


Old Password: * * * *

New Password: * * * *

Confirm New Password: * * * * ▲▼

If the confirm password you input does not match the new password, a warning message shows up. Press the **Enter** button to close the message and return back to the step to input the new password again.

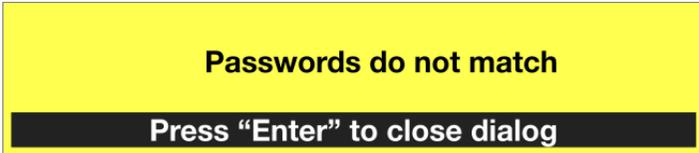

4. The password is successfully changed. Press the **Enter** button to go back to the main menu screen.



Settings

The baud rate, EDID, OSD, and network features are adjusted from the Settings screen.

Baud Rate

Use the navigation buttons (the **Up** arrow or the **Down** arrow) to cycle through the options and press the **Enter** button to make your selection. The baud rate options are:

- ◆ 9600
- ◆ 19200
- ◆ 38400
- ◆ 115200

Please note that the current selected baud rate is marked with the word selected.

EDID Mode

EDID (extended display identification data) is used to apply a preset video configuration (EDID Mode), which utilizes the best resolution across different monitors. To adjust the EDID mode, do the following:

1. Go to the main menu screen > Settings > EDID Mode.
2. Select the EDID mode from the options:

EDID Option	Description
Port 1	EDID data read from port 1 is passed to all video sources. The system will enforce the Default EDID setting if port 1 is not occupied
Default	ATEN's default EDID data is passed to all video sources by default when the system is powered on.
Customized	This mode allows user-defined EDID configurations for optimum output.

Please note that the current selected EDID mode is marked with the word selected.

OSD

The On-Screen Display or OSD feature enables the information about the input source, the output port, and the window(s) to appear on the display device's screen. To configure the OSD settings, do the following:

1. From the Settings screen, use the navigation buttons (the **Up** arrow or the **Down** arrow) to select OSD and press the **Enter** button to access its submenu.
2. Select to enter the option menu of Output ID, Input ID, and Window ID respectively, and choose whether to show or hide the ID. You can set to reveal or conceal all the 3 ID information at a time by directly selecting Show All or Hide All on the OSD submenu.



Network


To change the unit's IP address, the submask, and the gateway, do the following:

1. Go to the main menu screen > Settings > Network.



▶ **IP: 10.3.23.145**
Submask: 255.255.255.0
Gateway: 10.3.0.7

2. Select to access the setting screen of the item to be changed and the screen displays the current IP address / submask / gateway information.

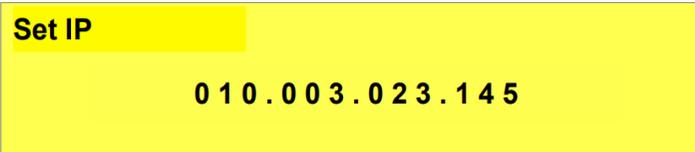


Set IP

0 1 0 . 0 0 3 . 0 2 3 . 1 4 5


3. The flashing digit identifies the one you are changing. To modify the parameters:
 - ◆ Use the navigation buttons (the **Up** arrow or the **Down** arrow) to cycle through the digits.
 - ◆ Once the digit is determined, press the **Enter** button to advance to the next digit.
 - ◆ Use the **ESC** button to go back to the previous digit without deleting the current one.
 - ◆ To return to previous page, press the **ESC** button when editing the first digit, or long press on the **ESC** button when being at any digit position.

-
- Note:**
1. The address consists of four decimal numbers whose range is from 0 to 255, and the first digit of each decimal numbers only ranges from 0 to 2.
 2. If the numbers you configured exceeds the limitation of 255, it will be automatically modified to be 255.
 3. If the address you set starts with 000, it will be automatically modified to be 001.
-

- After all the four numbers are determined, press the **Enter** button to submit your change, and a confirmation screen appears. Use the navigation buttons to select the option Save your changes and then press the **Enter** button to continue.

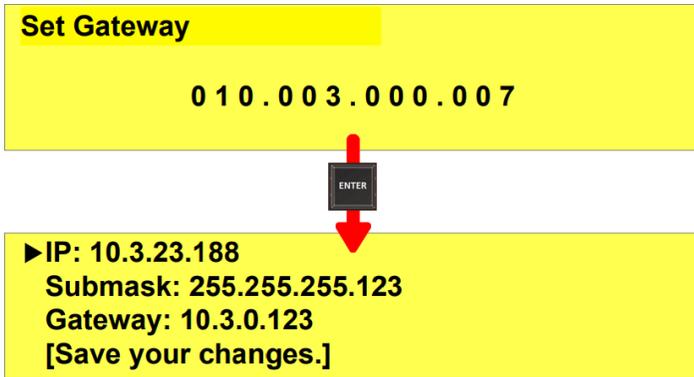

- Press the **Enter** button again to close the dialog that reminds you the change is saved and return to the Network screen.

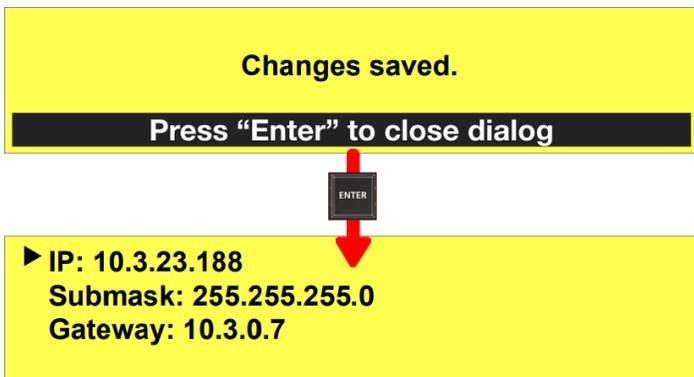

F/W upgrade

To upgrade the firmware of the VW3620 video wall processor through local operation:

- Connect a USB drive which contains an up-to-date firmware file to the USB port on the rear side of the unit. See *USB Type-A ports*, page 9.


2. Access the main menu screen > F/W Upgrade. Press the **Enter** button to load the firmware file from the connected USB drive.



3. The unit starts to load the firmware file and detect whether the firmware version is valid.
 - ◆ If the firmware file is invalid, a message screen shows up to remind you to check the firmware file. Simply press the **Enter** button to close the dialog and try again.



- ◆ If the firmware file is detected and confirmed valid, the unit starts to upgrade its firmware. During the upgrade process, do not power off the VW3620.

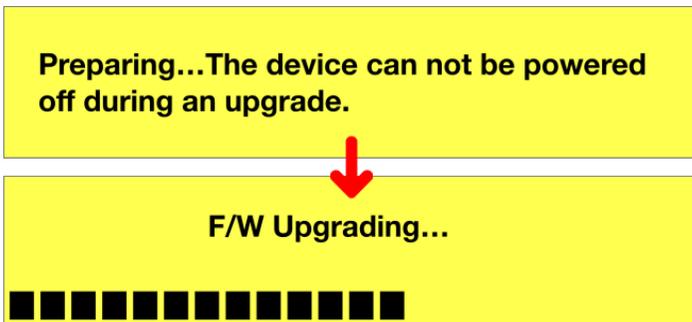


4. Once the upgrade is completed, the LCD display shows the message as illustrated below. Press the **Enter** button to return to the unlocked idle screen.



Local Output

The pushbutton **Local Output** allows you to monitor the video input signals and the video wall layouts in real time through the display device connected to the unit's system HDMI local output port.

Press the **Local Output** button, and the LCD display shows the current selected mode and its related feature options as illustrated below:

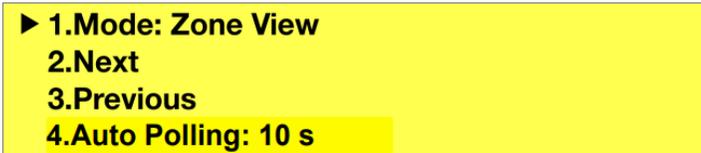

Item	Description
Mode	Enter the subscreen of Mode to select the mode you'd like to check: <ul style="list-style-type: none"> ◆ Zone View ◆ Single Source View ◆ Array Source View
Next	Switch to the next zone or video source. Please note that this function is unavailable in Array Source View.
Previous	Switch to the previous zone or video source. Please note that this function is unavailable in Array Source View.
Auto Polling	To have a playback of the zones or video sources. Please note that this function is unavailable in Array Source View.

On the **Local Output** menu screen, you can do the following:

- ◆ Use the navigation buttons (the **Up** arrow or the **Down** arrow) to cycle through the menu options.
- ◆ Press the **Enter** button to access the selected option's submenu screen, or take the selected action.
- ◆ Press the **ESC** button to return to the previous page.

Zone View

By selecting Zone View, you will see the output screen similar to the following:



Select Next / Previous using the navigation buttons and press the **Enter** button to switch to the next or previous zone. Enter the option menu of Auto Polling to determine the duration each zone is played.

- ▶ 1.Off
- 2.10s
- 3.30s
- 4.60s

Single Source View


- ▶1.Mode: Single Souce View
- 2.Next
- 3.Previous
- 4.Auto Polling: 10 s

In Single Source View, the output screen displayed on the display device connected to the unit's system HDMI local output port is similar to the figure below:



Select Next / Previous using the navigation buttons and press the **Enter** button to switch to the next or previous input video source. Enter the option menu of Auto Polling to determine the duration each input video is played.

Array Source View

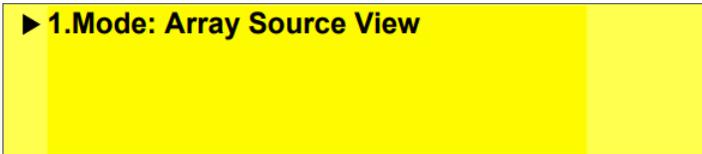

In Array Source View, it displays all your input video sources:



Profile

A profile is a set of settings that defines the input to output connections and configured by users in VW3620 Web GUI.

▶ **Zone A: P1**
Zone B: - -
Zone C: P4
Zone D: P3

Press the **Profile** pushbutton to enter the Profile menu, and select the zone to preview using the navigation buttons and the **Enter** button. The LCD panel displays a list of profiles. Use the navigation buttons to cycle through the profiles, and press the **Enter** button to apply the selected profile.


▶ **P1 (selected)**
P3
P4
P5 1/3

Depending on the arrangement of the display monitors you configured for your zone(s) in VW3620 Web GUI, the preview screen shows on the display device connected to the unit's system HDMI local output port may as the following:

- ◆ Video Wall



- ◆ Independent Display

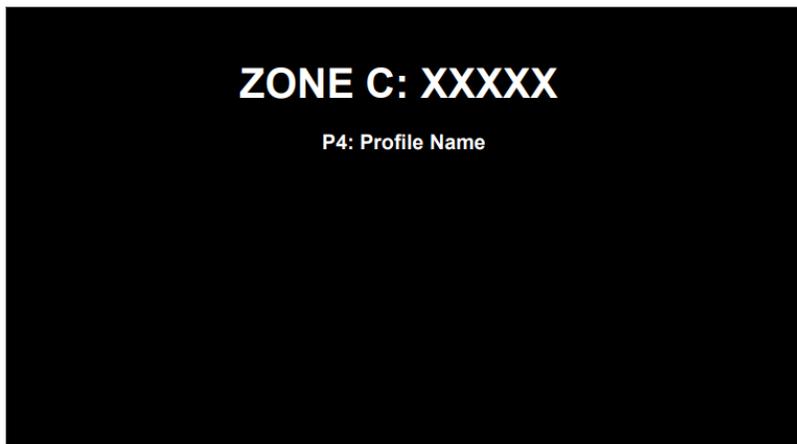

Chapter 4


Browser Operation

Overview

The VW3620 can be configured over a standard TCP/IP connection via its built-in Graphical User Interface (GUI). Because it can be accessed from anywhere over a network or the Internet, operators can easily log in via web browser. Security is ensured by password protection and user-configurable time-out. For full details see the sections that follow.

Logging In

To access the Web GUI, type the VW3620's IP address into the address bar of any browser. If a Security Alert dialog box appears, accept the certificate—it can be trusted. The login screen appears:

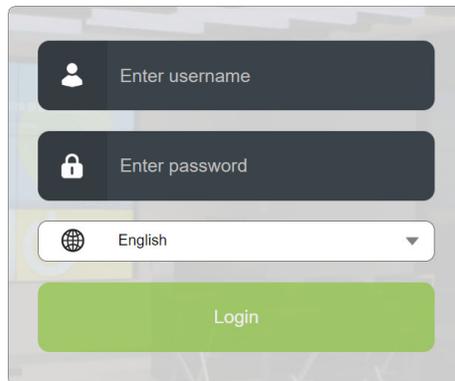


- ◆ For DHCP environment, download IP Installer from ATEN website to your PC and run the IP Installer to get the IP address to log in to the Web GUI.
- ◆ If DHCP is disabled, use the default IP address *192.168.0.60*
- ◆ The default login credentials are *administrator* and *password*.
- ◆ Enter the username and password, then click Login.
- ◆ For the very first time you log in to your VW3620 Web GUI, you are required to change the password. Follow the on-screen instruction to complete the change.

- ◆ Use the drop-down menu to select the display language.


Note: If you have installed a redundant CPU board and connected it to the network using an Ethernet cable, the IP address(es) of CPU 1 and CPU 2 might differ. Run *IP Installer* to obtain the DHCP-assigned address(es).

After successfully logging in to your VW3620 Web GUI, you will enter the Design Mode tab where you can set up the display zone(s).

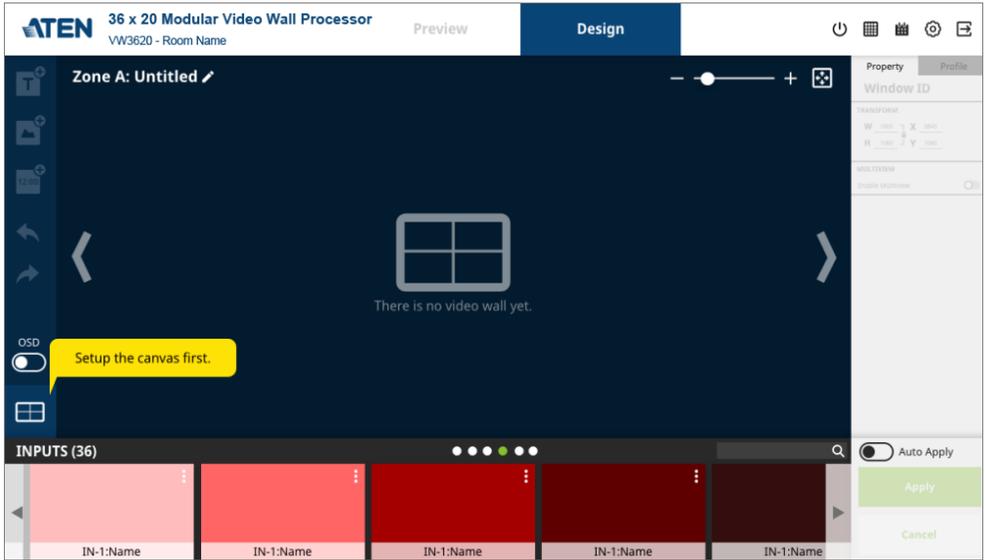


Display Configuration

To get started, click on the Display configuration button  to open the popup window to set up your output display configuration.

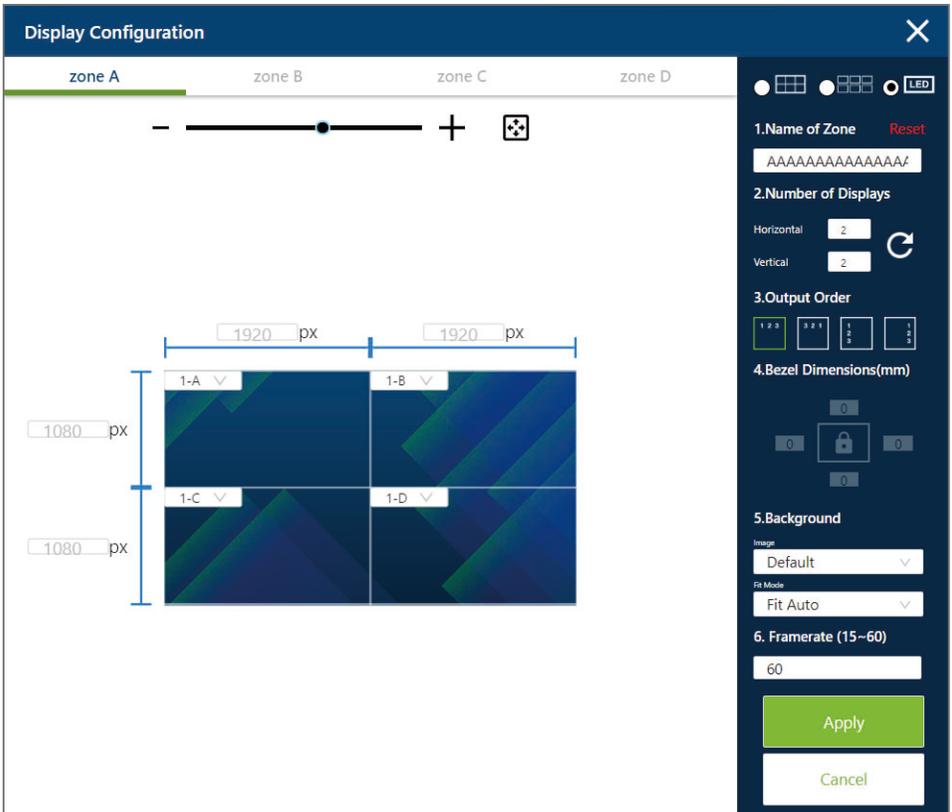

- Click to select the zone you would like to set up.
 - Use the zoom slider  to change the zoom level of the display zone.
 - Use the zoom to fit button  to automatically resize the display zone to fit the configuration area in this popup window.


2. Configure the display monitors settings in the right panel of the popup window.

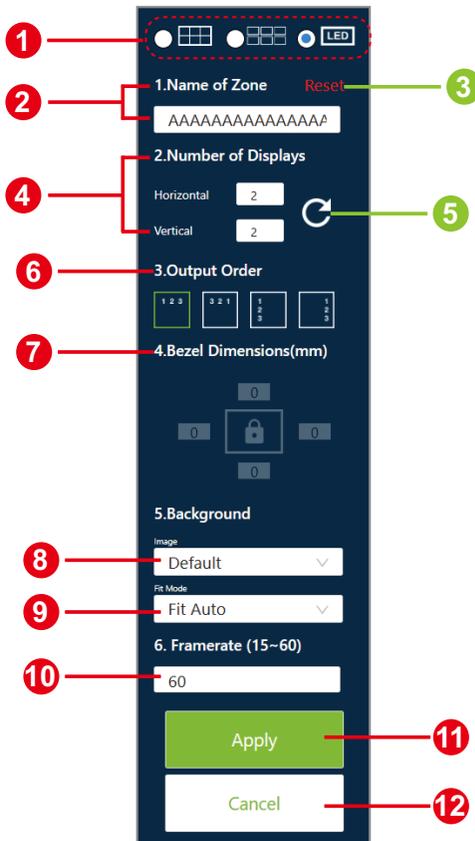


No.	Item	Description
1	display arrangement	Use the radio button to select the displays arrangement between the options: <ul style="list-style-type: none"> ◆ Video Wall  ◆ Independent Display  ◆ LED mode 
2	name of zone	Define the name for this zone.
3	reset	Click Reset to clear the settings of number of the displays and the background image.

No.	Item	Description
4	number of displays	Enter the number of the display monitors belong to this zone.
5	 apply	Click on the button  to apply the number of display monitors. The video wall layout shown on the configuration area changes subsequently.
6	output order	Set the output order of the display monitors.
7	bezel dimensions	Set the bezel (the borders around the screen) in millimeter. Note: The function is only applicable to Video Wall  .
8	background image	Choose the background image from the drop-down menu. By selecting Upload , you can browse the background image to be uploaded from your PC. Note: The function is inapplicable to Independent Display  .
9	fit mode	Choose a fit for the background image. <ul style="list-style-type: none"> ◆ Scale to Whole: Makes the background image fit the entire video wall screen. Please note that it may result in the background image being distorted. ◆ Fit Height: Fits the background image to the height of the video wall screen. ◆ Fit Width: Fits the background image to the width of the video wall screen. ◆ Auto Fit: Automatically selects the optimal side to scale to the background image to its maximum size without causing distortion. Note: The function is inapplicable to Independent Display  .
10	framerate	Enter the frames per second (fps) to define how many still images or frames are displayed in a single second of video or animation. The available value ranges from 15 fps to 60 fps. Note: The function is only applicable to LED mode  .
11	Apply	Click on the Apply button to complete your settings.
12	Cancel	Click on the Cancel button to close the popup window without saving any change.


3. Edit the display zone in the configuration area:

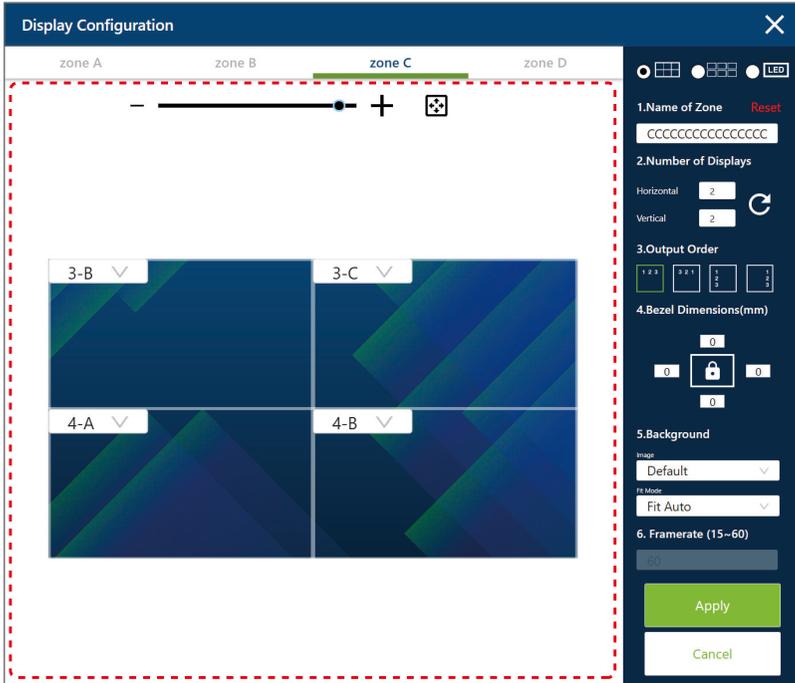

- ◆ From the drop-down menu, select the input video source for each display monitor belongs to this zone.

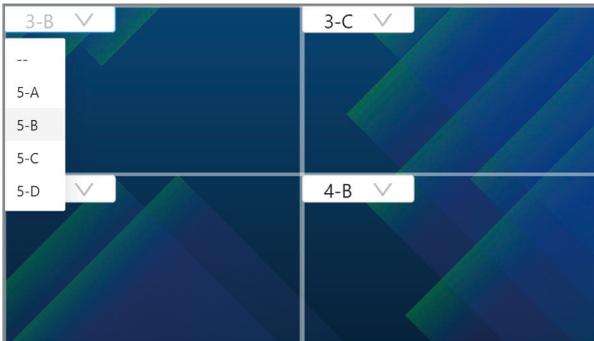


- ◆ By selecting LED mode, you can define the resolution.

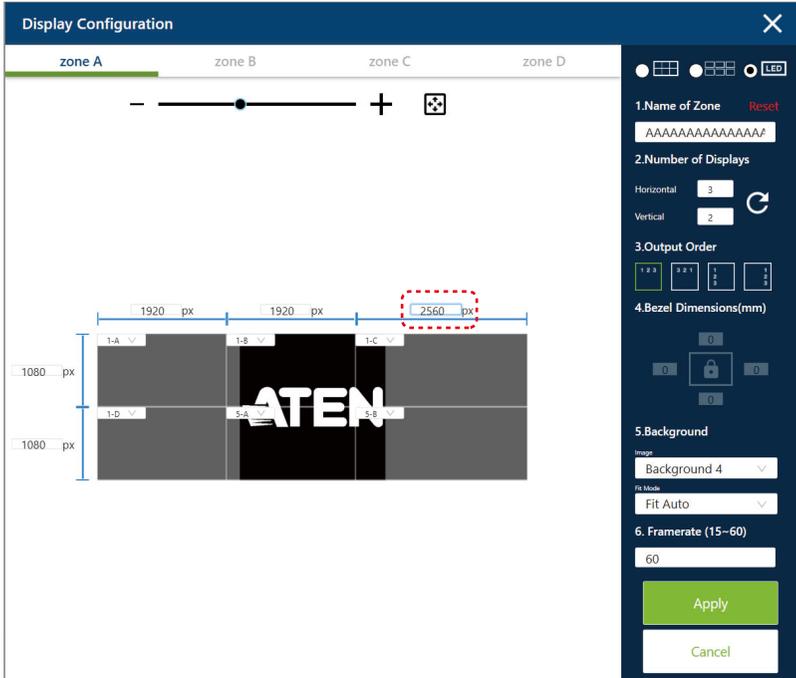

The further configuration can be proceeded in the Design Mode tab.
See *Design Mode*, page 63.

Main Page

After logging in, you will enter the VW3620 Web GUI main page which is divided into three parts—the menu bar (page 57), the Design Mode tab (page 63), and the Preview tab (page 77).

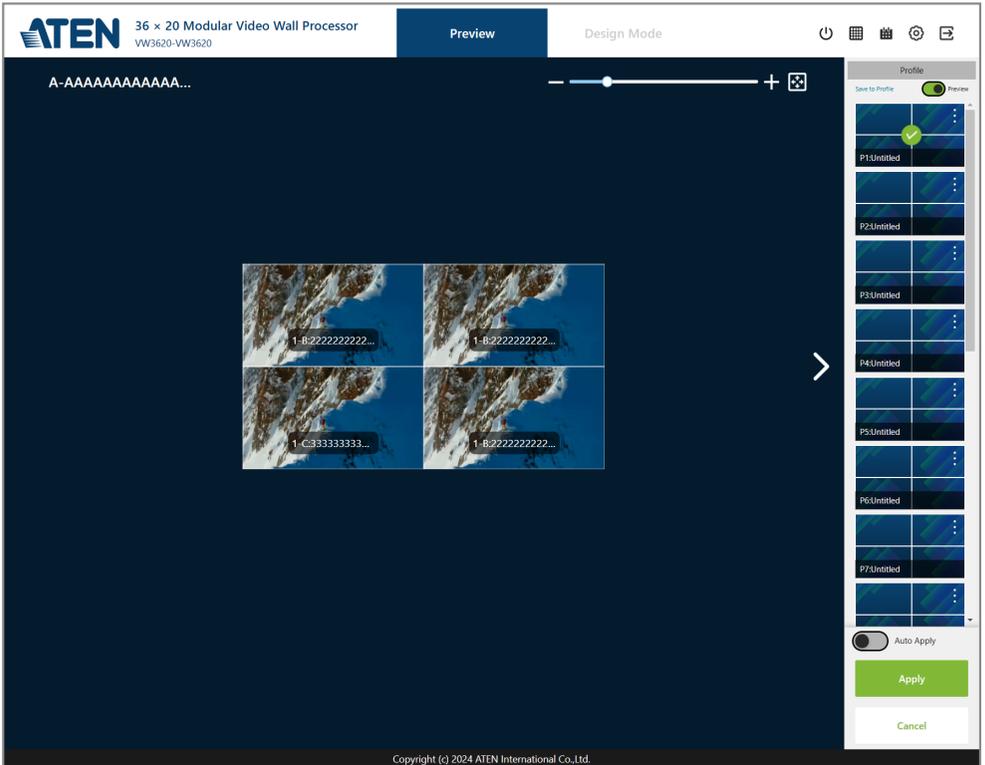

Menu Bar

Use the buttons in the menu bar to perform the following actions:

Button	Control	Description
	Standby	Click to set the VW3620 to standby mode.
	Source Array	Click to set view all the video sources simultaneously.
	Scheduling	Click to enter the page to set the profile playlists that play periodically on specified time frames.
	Settings	Click to access the system settings. Note: This function is only available for the user role, administrator.
	Logout	Click to log out of the VW3620 Web GUI.

Setting the Standby Mode


The standby mode is a low-power mode where the VW3620 operates minimally by stopping all input and output transmissions and logging the user out of the Web GUI.

To enable the standby mode, click on the Standby button from the menu bar in the VW3620 Web GUI.

To disable the standby mode, do one of the following:

- ◆ Press the **Enter** pushbutton from the device panel. See *Standby Mode*, page 31.

- ◆ Log in to the Web GUI with a valid credential, and wake up the unit by clicking on the screen as illustrated below.

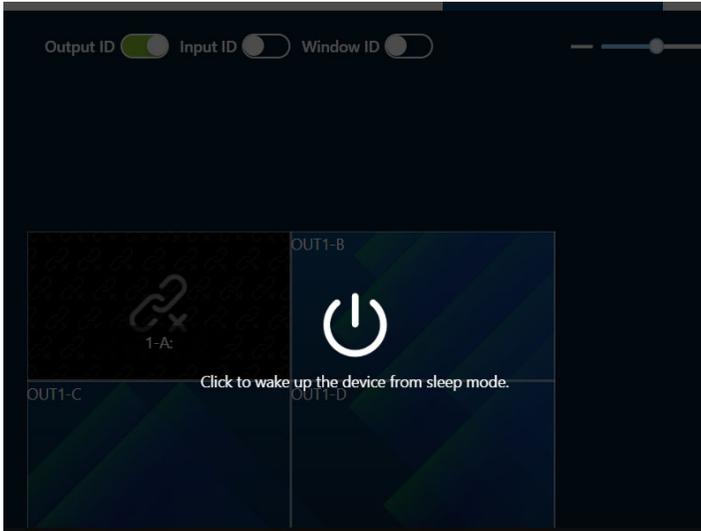


Source Array

Source Array page displays all the video from the connected input source device(s), giving you a glance at all the video source(s) with the input board numbers, the port numbers, and the self-defined port names.

Source Array					
HDCP IN 1-A:	IN 1-B:	IN 1-C:	IN 1-D:	IN 2-A:	IN 2-B:
IN 2-C:	IN 2-D:	IN 3-A:	IN 3-B:	IN 3-C:	IN 3-D:
IN 4-A:	IN 4-B:	IN 4-C:	IN 4-D:	IN 5-A:	IN 5-B:
IN 5-C:	IN 5-D:	IN 6-A:	IN 6-B:	IN 6-C:	IN 6-D:
IN 7-A:	IN 7-B:	IN 7-C:	IN 7-D:	IN 8-A:	IN 8-B:
IN 8-C:	IN 8-D:	IN 9-A:	IN 9-B:	IN 9-C:	IN 9-D:

Scheduling

Scheduling helps you to set up tasks that perform automatically on specific days and times.

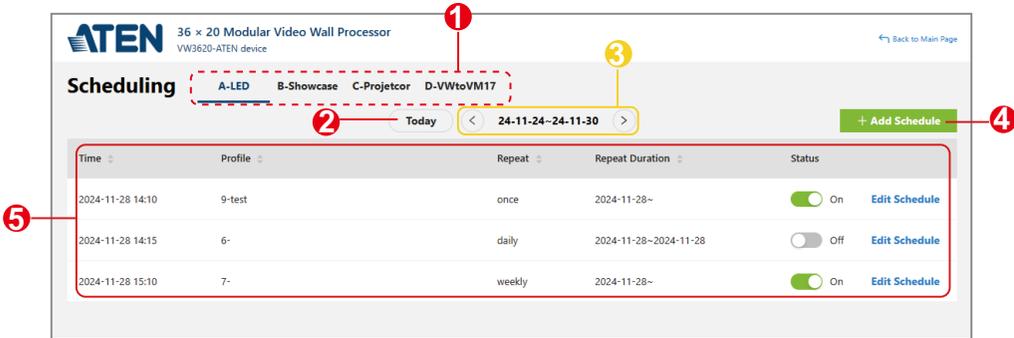


No.	Item	Description
1.	zone tabs	Click on a tab to check or manage the task(s) to be performed in this zone.
2.	go to today button	Click on the today button to go back to the current week.
3.	date picker	Click on the next button  or the previous button  to select the range of dates by week view to display the task(s) to be performed within the week.
4.	add schedule	Click to create a new scheduled task for the current zone.
5.	task list	Shows the scheduled task(s) to be performed in this zone during the selected week.

Create a Scheduled Task


To create a scheduled task, do the following:

1. Open a zone schedule from the zone tabs.
2. Click on the **+ Add Schedule** button to open the add schedule window.

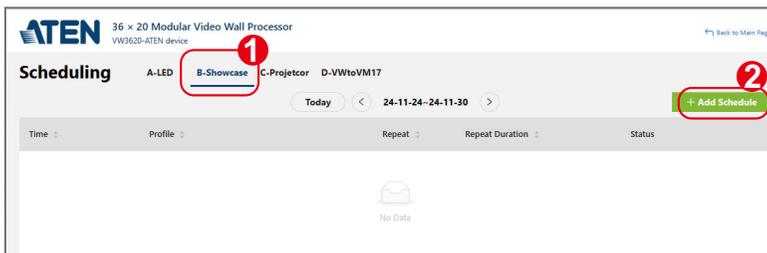

3. Define the following settings:

Item	Description
Select Profile	Select a profile for this task to play. See <i>Profile Management</i> , page 74 for how to manage the profiles.
Start Time	Sets the date and time the task will begin.
Repeat	<p>Performs the task repeatedly at the scheduled times. The options to run the recurring task are:</p> <ul style="list-style-type: none"> ◆ once: The task is executed only one time. ◆ daily: The recurring task is executed everyday. ◆ weekly: The recurring task is executed on a weekly basis. By selecting weekly, you need to further specify the days of the week that the task is run. <div data-bbox="448 1206 809 1393" style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Repeat</p> <p>weekly</p> <p>Mon Tue Wed Thu Fri Sat Sun</p> </div>

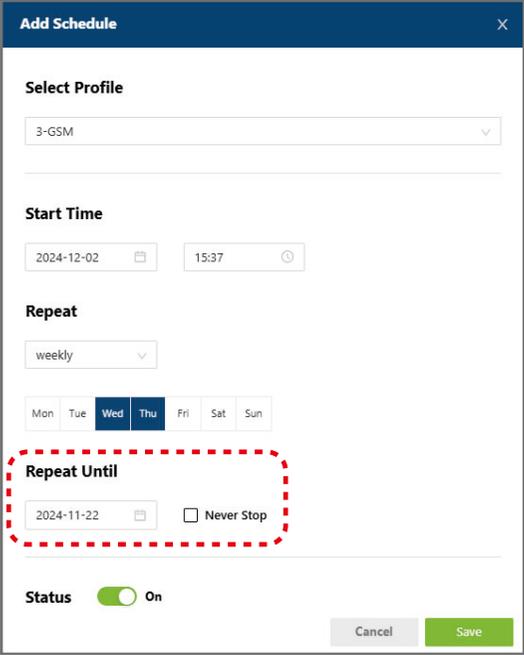Item	Description
Repeat Until	<p>Sets whether end the task on a specified date. This setting is only available when Repeat is set as daily or weekly.</p> <ul style="list-style-type: none"> ◆ Never Stop: Enable this option to continue repeating indefinitely. ◆ Invalid date: Sets the date that the task will no longer run. This option is available when you disable Never Stop. 
Status	Click on the switch to turn on or off the task.

- Click the save button to finalize creating the task. Now you can find the task you just created is on the task list.



36 × 20 Modular Video Wall Processor
VW3620-ATEN device

[↶ Back to Main Page](#)

Scheduling


A-LED
B-Showcase
C-Projetcor
D-VWtoVM17

Today
< 24-11-24~24-11-30 >
+ Add Schedule

Time	Profile	Repeat	Repeat Duration	Status
2024-11-30 14:09	4-GSM PPTX2	daily	2024-11-30~	● On Edit Schedule

Scheduled Tasks Management

To edit an existing task, find the task you'd like to edit from the task list, and click on its **Edit Schedule** function to open the Edit Schedule popup.

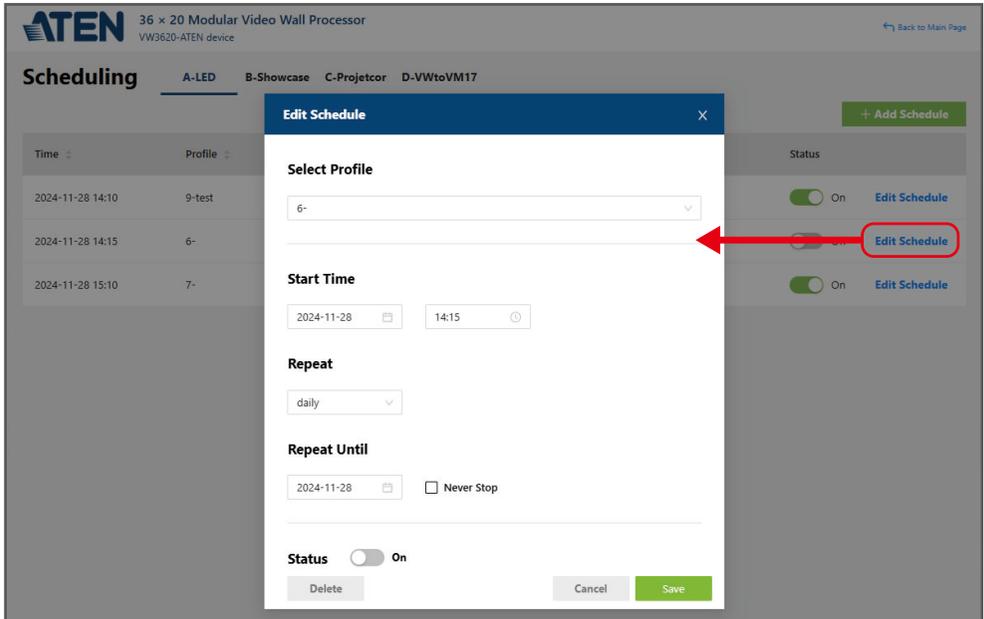

Through Edit Schedule popup, you may:

- ◆ Make changes of this task and save it.
- ◆ Remove this task from the task list by clicking Delete button.
- ◆ Turn on or off the status switch to make this task active or inactive.

Design Mode

Understanding Display Zones


In your video wall processor application, you may more than one video wall set up—for example, a 2 x 2 video wall, a 4 x 4 video wall, and a single-monitor display, all managed by one VW3620. In this case, you have three display zones.

Understanding Profiles and Profile List

A profile is a set of settings that specifies how video sources will be displayed on one or more video walls. You can create and save your profiles to the Profile List to be conveniently switched via the front panel or the Web GUI.


Interactive Functions on Design Mode Tab

The Design Mode tab is where you can configure the video wall layout and save the layout configuration as a profile for conveniently switching. The Design Mode tab contains the following interactive functions:

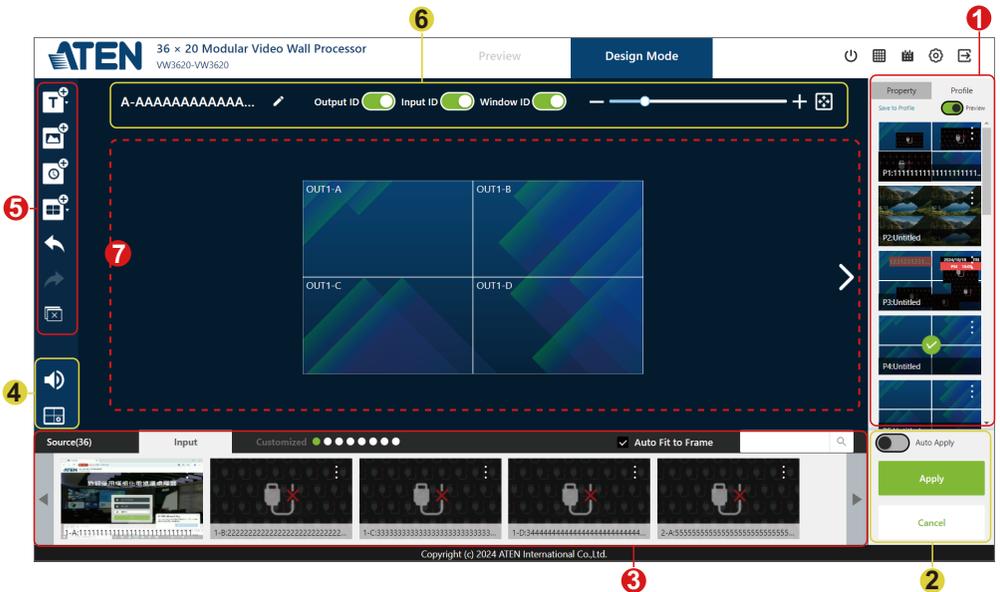

1. Profile Panel


The profile panel contains the following 2 tabs:

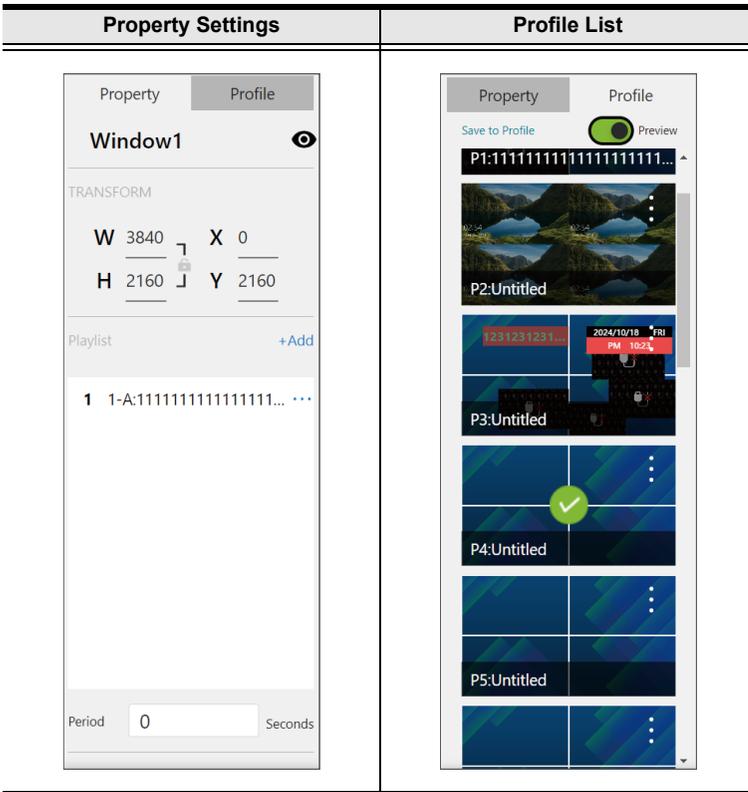

- ◆ **Profile List:**
The profile list shows all the profiles, including those are not edited.
- ◆ **Property Settings:**
The property settings tab shows the property of the displayed item(s) in the profile.
By selecting an item, the property settings display its property. User can edit the property or click on the show  / hide  button to reveal or conceal the selected item.

2. Profile Playing Functions

User can determine whether to play the profile shown on the canvas through the functions listed below:

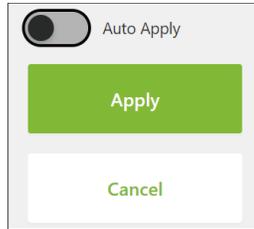


Item	Description
Auto Apply	Enable the auto apply switch and once you open a profile, it automatically applies to your video wall.
Apply	Click on the Apply button to play the profile.
Cancel	Discard your changed settings.

3. Video Source List

The video source list contains 2 tabs, Input and Customized. The Input tab displays all the input video sources from the connected source devices while the Customized tab shows the user-defined video source(s). User can drag and drop the video source to be displayed to the canvas, and release it to the display area to have it placed.

- ◆ To quickly and easily find the video source you need, input the keyword into the search bar, and the video(s) whose input port name fulfills the keyword shows up.
- ◆ By enabling the function Auto Fit to Frame, the video automatically scales to fit inside the size of the display frame.
- ◆ By clicking on the more button of a video source (both Input and Customized), an option menu is opened for you to choose an action to take:

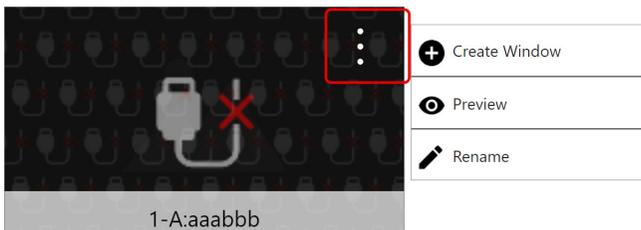

Action		Description
	Create Window	To create a window on the canvas that displays this video source.
	Preview	To open a popup window that display this video source.
	Rename	To rename this video source.

Note: As to the management of the customized video source, refer to *Multiview Window Management, page 70.*


4. Audio & Display Configuration Buttons

Click on the Audio Control button  to open the Audio Control popup window for configuring the output audio:

- ◆ Use the drop-down menu to apply options to all output ports.
- ◆ Set for each output port by selecting Mute or the input audio source from the drop-down menu.
- ◆ Click on the Save button to adopt the changed settings.



Click on the Display Configuration button  for arranging the displayed layout for each zone. Refer to *Display Configuration*, page 51 for details.

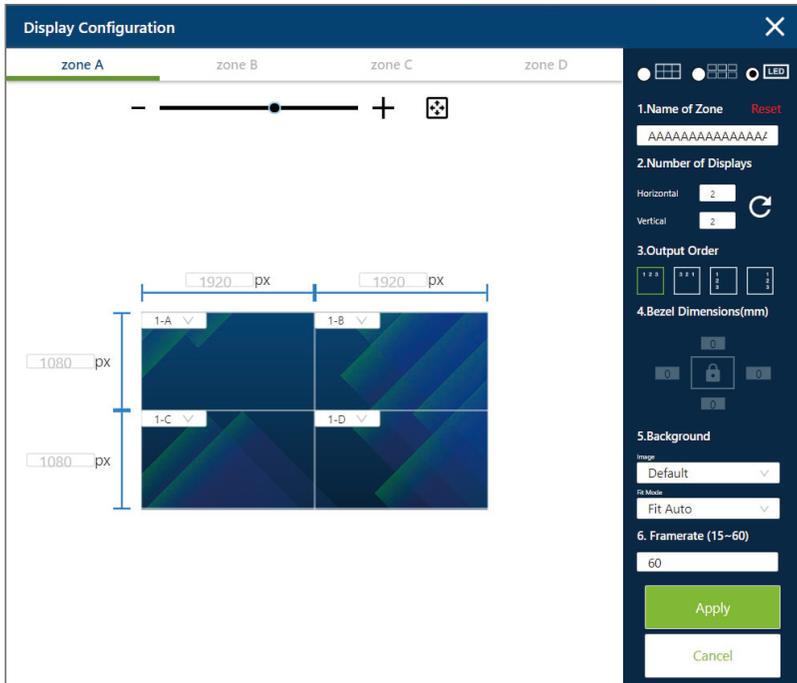

5. Canvas Toolbar

The toolbar contains the 7 tools:

Item	Description
	<p>Add Text</p> <p>Click the button to open the options menu to select whether to add normal text  or to add the scrolling text .</p>
	<p>Add Image</p> <p>Click the button to browse the image file to be uploaded.</p>
	<p>Add Clock</p> <p>Click to open the popup window to configure the details about the clock to be added.</p>

Item	Description	
	Create Multiview Window	Click the button to open the option menu to select the window type and open the <i>Multiview Editor</i> popup to edit the input sources.
	Undo	Click the button to reverse the action you just took.
	Redo	Click the button to reverse your last undo action.
	Clear All	Click on the button to remove all the videos you set to display.

6. Layout Configuration Tools


The layout configuration tools offer the following functions:

Item	Description
	Click the button and you can rename the zone name you defined in the Display Configuration popup.
	Turn on the Output ID switch to show the output port ID on the display(s).
	Turn on the Input ID switch to show the input port ID on the display(s).
	Turn on the Window ID switch to show the window port ID on the display(s).
	The Bring to Front button appears only when an item is selected to be edited. Click on it to bring the selected item to the front of the stack.
	The Bring Forward button appears only when an item is selected to be edited. Click on it to bring the selected item one layer up.
	The Send Backward button appears only when an item is selected to be edited. Click on it to move the selected item one layer down.

Item	Description
	The Send to Back button appears only when an item is selected to be edited. Click on it to send the selected item to the back of the stack.
	The Remove button appears only when an item is selected to be edited. Click on it to delete the selected item.
	The zoom slider is used to zoom in or out the display zone. Drag the slider to change the zoom level.
	Click on the zoom to fit button to change the zoom level and automatically resize the display zone in the canvas area.

7. Canvas Area

Canvas area is where you design the display zone. If you have more than one zone, you can easily switch to other zone by the next / previous buttons located on the 2 sides of the canvas.

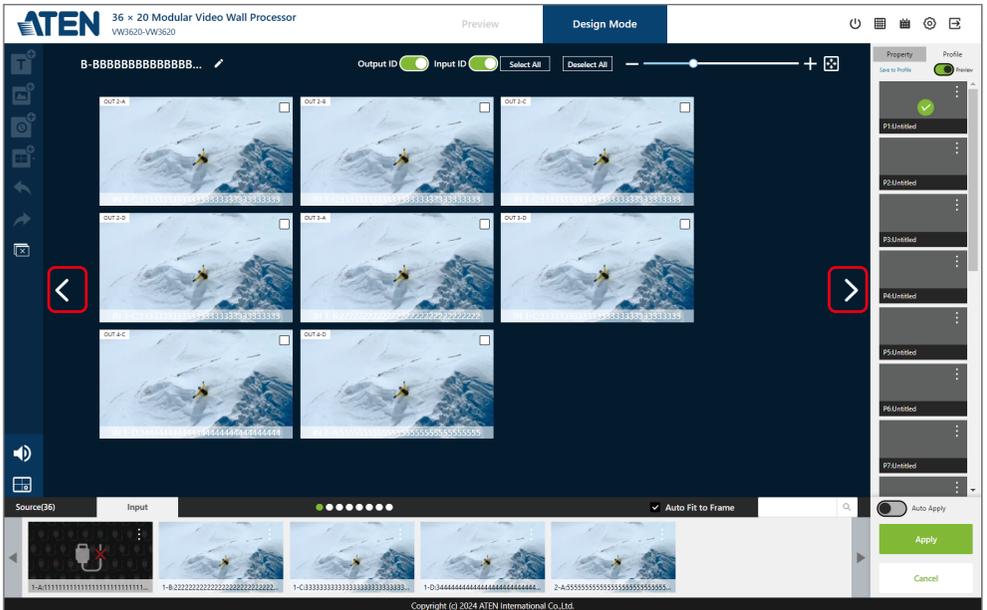

The screenshot shows the ATEN 36 x 20 Modular Video Wall Processor software interface in Design Mode. The main canvas displays a 3x3 grid of video zones, each showing a mountain landscape. On the left side of the canvas, there are navigation buttons: a left arrow and a right arrow, both highlighted with red boxes. The top of the interface shows 'Design Mode' and various control buttons like 'Output ID', 'Input ID', 'Select All', and 'Deselect All'. The right side features a 'Property' panel with a list of zones (P1 to P7) and an 'Apply' button. The bottom of the interface shows a 'Source' panel with a list of video sources and an 'Auto Fit to Frame' checkbox.

Multiview Window Management

Create a Multiview Window


To create a multiview window, do the following:

1. From the canvas toolbar, click on the **Create Multiview Window** button




to open the option menu to select window type.

2. The **2 X 2 Multiview Editor** / **4 X 4 Multiview Editor** popup window shows up. Check the checkbox(es) of the slot(s) to determine which input sources are available for this multiview window.

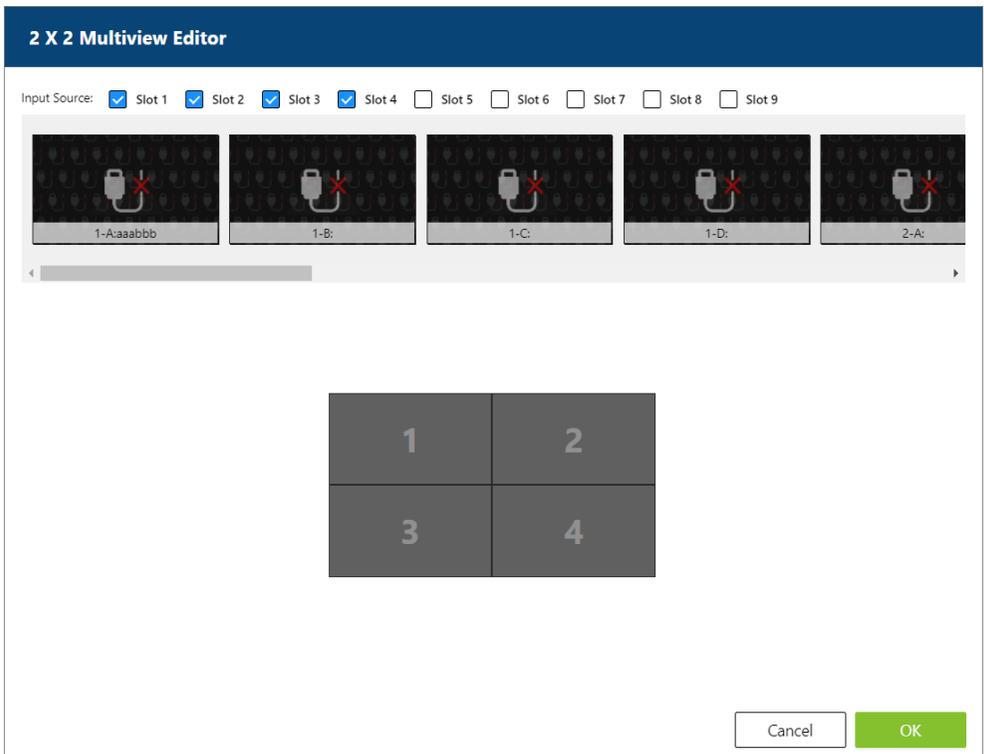

3. Drag and drop the input source to the layout editing area, and release it to have it placed.


- Click on the OK button, and the newly-created multiview window is displayed on the canvas now.

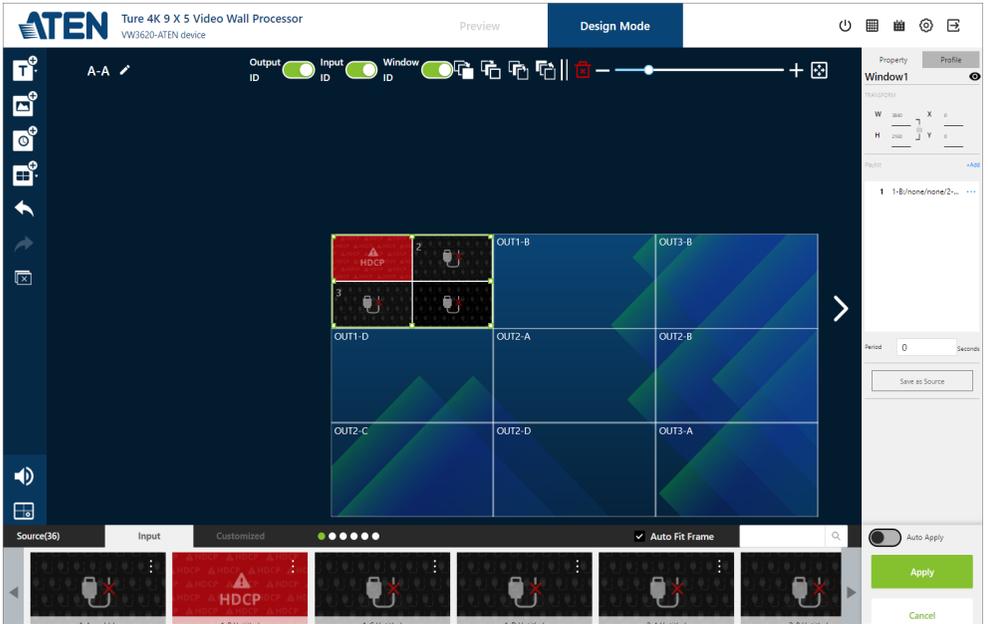

Configure a Multiview Window

To configure an existed multiview window:

1. On the canvas, click to select the multiview window to be edited.
2. From the profile panel, make change of this multiview window's property:

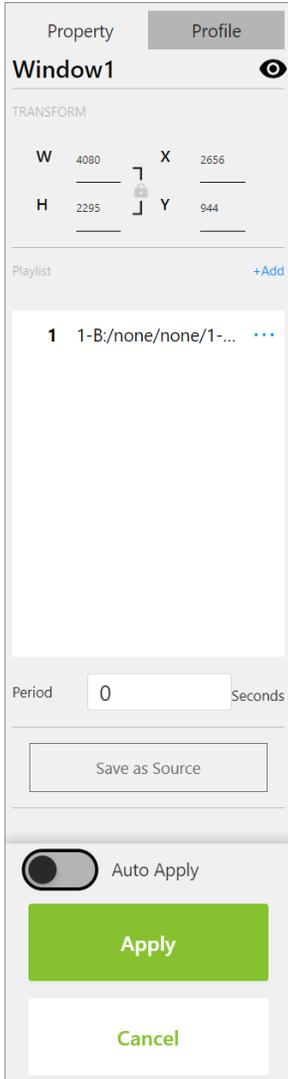

◆Click on the show  / hide  button to reveal or conceal this window.

◆To resize the window by inputting the width and the height.

◆To move the window, drag and drag the window to place it to your preferred position, or enter the absolute position (x and y coordinates).

◆To add more multiview contents, click on +Add to open a 2 X 2 Multiview Editor / 4 X 4 Multiview Editor popup window, and do the following:

a)Check the checkbox(es) of the slot(s) to determine the available input sources.

b)Drag and drop the input source to the layout editing area, and release it to have it placed.

c)Click on the OK button to add the multiview content to the playlist.

◆To edit an existed multiview content:

a)Hover the cursor over the more button  next to the multiview content to be edited to expand the option menu.

b)Select Edit to open the 2 X 2 Multiview Editor / 4 X 4 Multiview Editor popup window.


c)Make change of it and click on the save button to save your changed settings.

- ◆ To remove an existed multiview content from the playlist, hover the cursor to the more button next to the multiview content to be deleted, and select Delete from the option menu.
- ◆ Enter the duration that determines how long each multiview content is played.

Customized Video Source

To save a multiview window as a customized video source:

1. On the canvas, click to select the multiview window to be edited.
2. The property tab is shown on the profile panel. Click on the Save as Source button to continue.
3. Enter a name for this customized video source, and then click the OK button to create it.

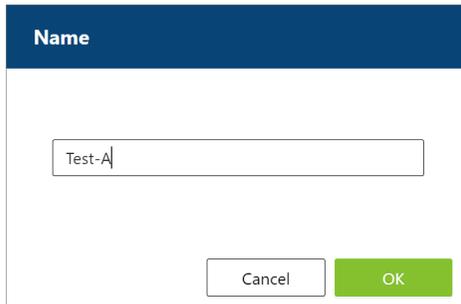


The image shows a dialog box with a dark blue header containing the word "Name" in white. Below the header is a white text input field with a thin border, containing the text "Test-A" and a vertical cursor at the end. At the bottom of the dialog box, there are two buttons: a white "Cancel" button and a green "OK" button.

Profile Management

Creating a Profile

To create a profile:

1. Enter the Design Mode tab.
2. (Optional) Follow the steps as *Display Configuration*, page 51 describes to set the zone(s) and the display monitors.
3. Use the interactive functions to configure the display zone(s).
See *Interactive Functions on Design Mode Tab*, page 63.
4. Once you finish the layout design, click on Save to Profile in the profile panel to open the Save to Profile popup.

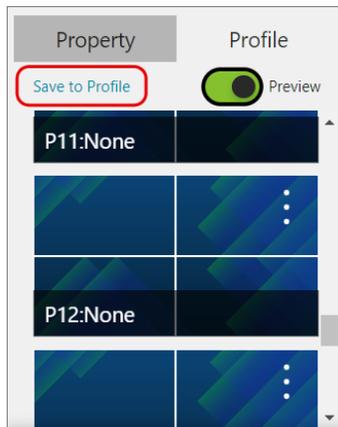


5. Select a profile item from the drop-down menu and click on the OK button to save it.



Edit a Profile

To edit an existed profile:

1. Click on the more button  of the profile to be edited to open the option menu, and select Open.

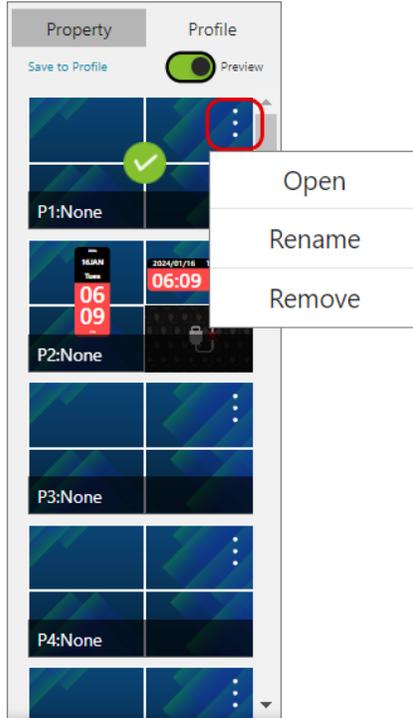


2. The profile is now shown in the canvas area. Use the interactive functions to make change of it, and click on Save to Profile in the profile panel to open the popup window. Select the profile item from the drop-down menu, and click the OK button to save your change(s).

Apply a Profile

To implement a profile to display the video configuration to the connected output devices, do the following:


1. From the profile panel, click on the more button  of the profile to be played to open the option menu, and then select Open. Or drag the profile to be edited to the canvas area and release it to open this profile.

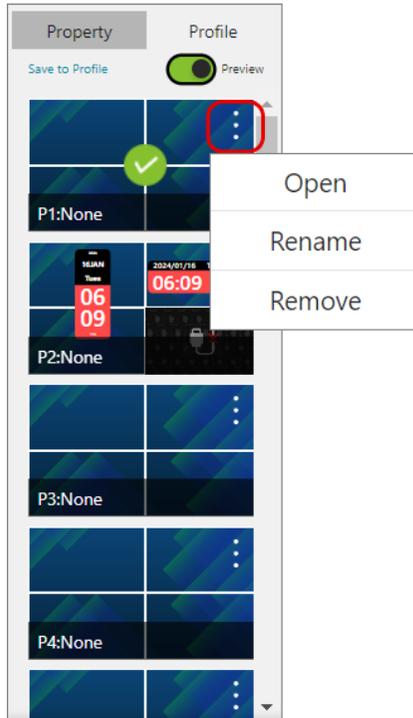

2. Click on the Apply button beneath the profile panel to implement the current-opened profile.

Preview


To view the live streaming of the implementing profile output to the display device(s), please go to the Preview tab.

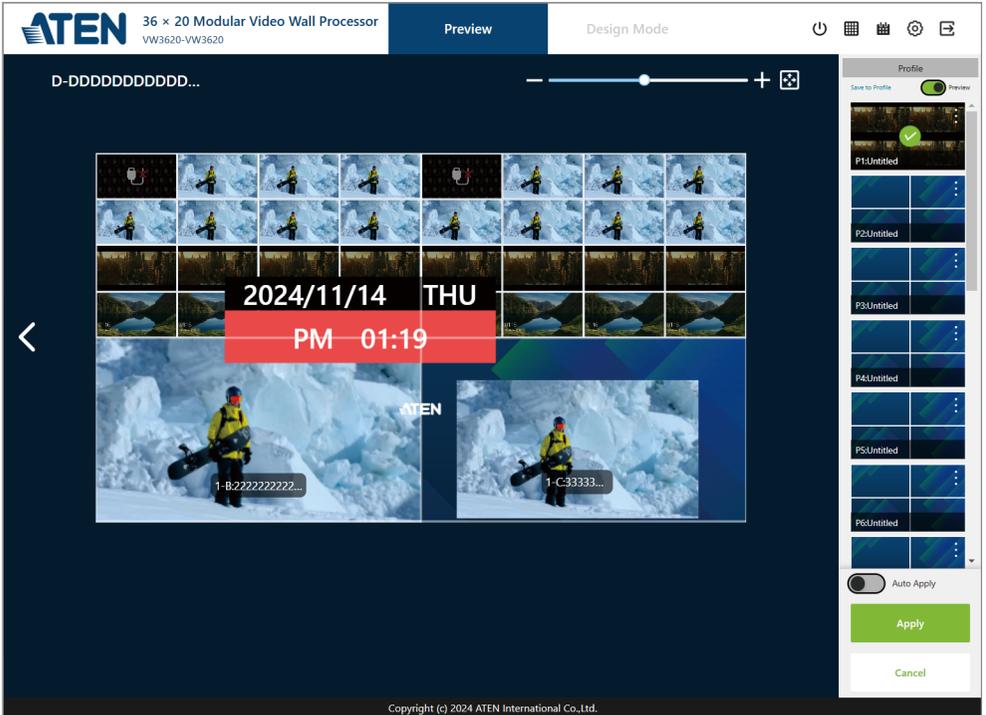

Delete a Profile

To delete an existeing profile:

1. From the profile panel, find the profile to be deleted, and click on its more button   to open the option menu.

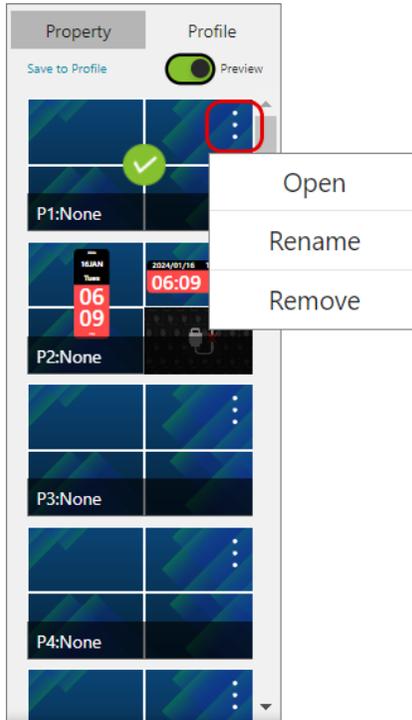


2. Simply select Remove to delete the profile, and confirm to delete it. The profile item will be cleaned up.

System Settings

Click on the Settings button  in the menu bar to enter the settings page for configuring the system settings. Please note that only the user with administrator user role can access the settings page.

The setting page opens to the General tab. To access to other settings, click on the menu item listed in the system settings menu bar, and you will directly to enter its tab page or expand its submenu to select the setting category you'd like to configure.

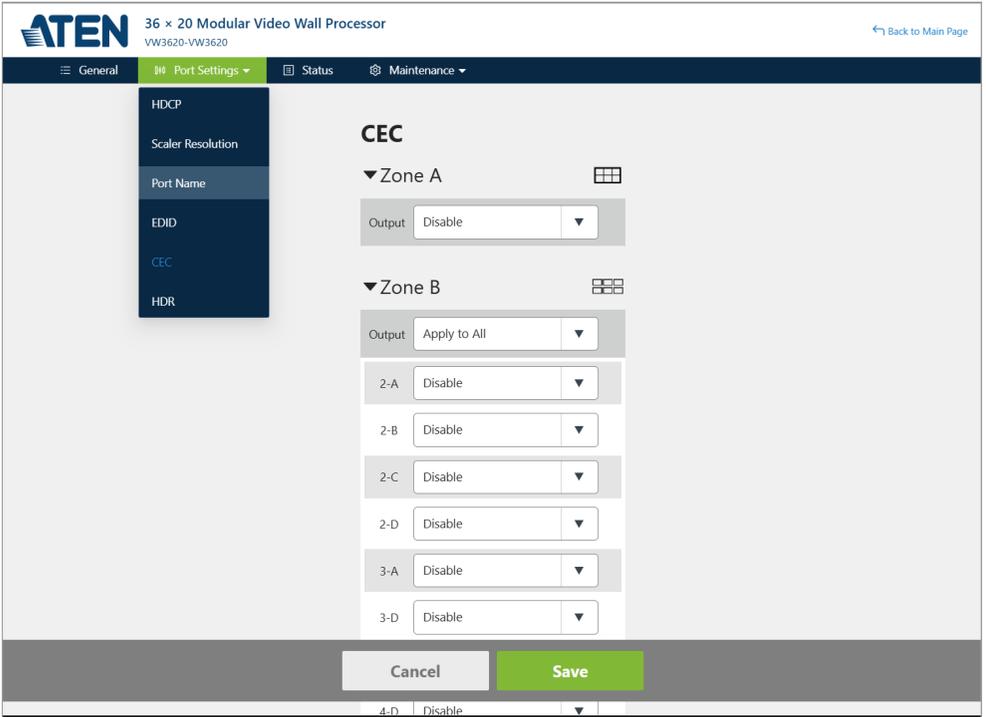

The screenshot displays the ATEN 36 x 20 Modular Video Wall Processor settings page. The top navigation bar includes 'General', 'Port Settings', 'Status', and 'Maintenance'. The 'Port Settings' menu is expanded, showing options for HDCP, Scaler Resolution, Port Name, EDID, CEC, and HDR. The CEC settings are configured for two zones:

- Zone A:** Output is set to 'Disable'.
- Zone B:** Output is set to 'Apply to All'. Individual port settings for 2-A, 2-B, 2-C, 2-D, 3-A, and 3-D are all set to 'Disable'.

At the bottom of the settings area, there are 'Cancel' and 'Save' buttons. A partially visible '4-D' setting is shown at the very bottom of the page.

Overview

The table below provides an overview of the available settings for each tab.

Tab	Supported Functions	Detailed Information
General	<ul style="list-style-type: none">◆ Configure the device name.◆ Select the interface language.◆ Configure the system time.	For more information, see <i>General</i> , page 81.
Port Settings	<ul style="list-style-type: none">◆ Configure the CEC port settings.◆ Configure the HDCP key.◆ Name the input ports.◆ Select EDID modes.	For more information, see <i>Port Settings</i> , page 82.
Status	<ul style="list-style-type: none">◆ Provide a graphical view for user to check statuses of the input/output boards installed to the VW3620.	For more information, see <i>Status</i> , page 92.
Maintenance	<ul style="list-style-type: none">◆ Upgrade the firmware for the installed input and output boards◆ Back up or restore the VW3620's configuration◆ Add, edit, or remove user accounts◆ Configure the system network settings	See <i>Maintenance</i> , page 96.


General

The General tab allows you to configure the following settings:

The screenshot shows the ATEN 36 x 20 Modular Video Wall Processor web interface. The top navigation bar includes 'General', 'Port Settings', 'Status', and 'Maintenance' tabs. The main content area is titled 'General' and contains two sections: 'Device Info' and 'System Time'. The 'Device Info' section includes fields for Device Name (VW3620), Firmware Version (9.1.2), Baud Rate (19200), and Language (English). The 'System Time' section includes a field for System Time. At the bottom of the page are 'Cancel' and 'Save' buttons.

Item	Description
Device Info	
Device Name	Define the name for this VW3620 unit.
Firmware Version	The current version of the firmware installed on this VW3620 unit.
Buad Rate	Select the buad rate from the drop-down menu
Language	Select the display language for this VW3620 unit.
System Time	
System Time	Set the system time.
Time Zone	Set the time zone.
NTP Server	Set the Network Time Protocol (NTP) to synchronize the clock between the unit and the server.
Sync with PC	To synchronize the time shown on the VW3620 with the connected PC.
Cancel / Save	By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changed settings. Click on Cancel to discard the changes.

Port Settings

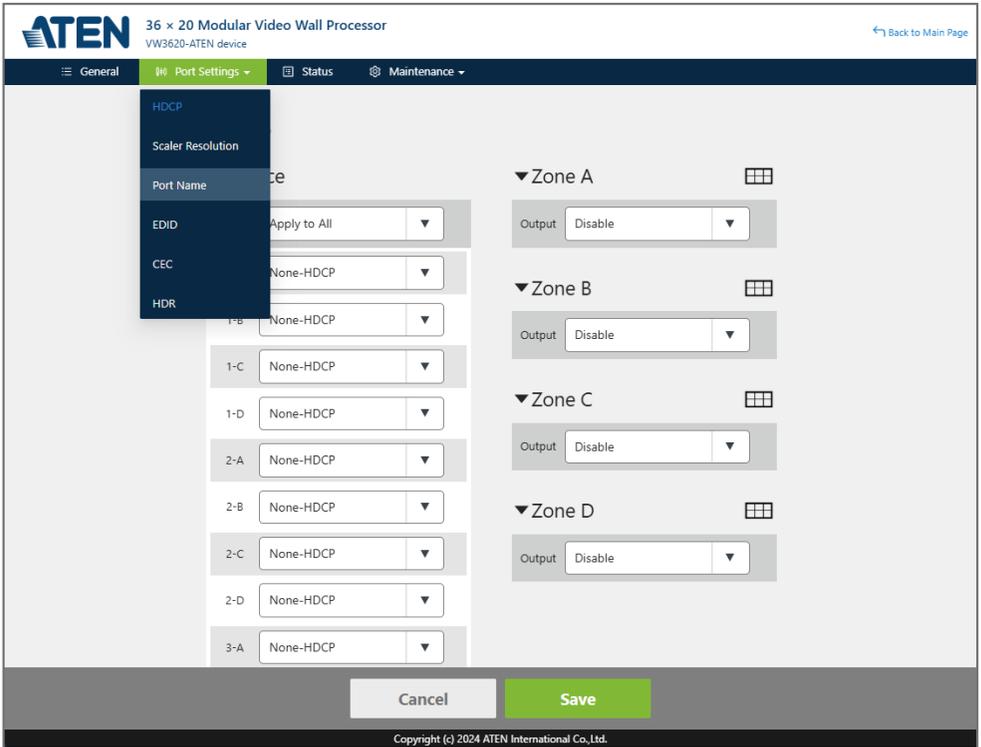

Move the cursor over the menu item System Settings to expand the submenu, and click on the submenu option you'd like to configure to enter the page.

HDCP

The HDCP (High-bandwidth Digital Content Protection) page allows user to view and set HDCP settings for digital copy protection.

ATEN 36 x 20 Modular Video Wall Processor
VW3620-ATEN device

General Port Settings Status Maintenance

HDCP

▼ Source

Input: Apply to All

1-A: None-HDCP

1-B: None-HDCP

1-C: None-HDCP

1-D: None-HDCP

2-A: None-HDCP

2-B: None-HDCP

2-C: None-HDCP

2-D: None-HDCP

3-A: None-HDCP

▼ Zone A

Output: Disable

▼ Zone B

Output: Disable

▲ Zone C

▼ Zone D

Output: Disable

Cancel Save

Source Settings

To set HDCP for the input video source(s):

- ◆ Separately set for each input ports by selecting between **HDCP 1.4**, **HDCP 2.2**, and **Non-HDCP** from the drop-down menu.
- ◆ From the Apply to All drop-down menu of the Input field, select the option to be applied to all the input ports at a time:
 - ◆ All Ports HDCP 1.4
 - ◆ All Ports HDCP 2.2
 - ◆ All Ports Non-HDCP

Zone Settings

Separately set for each zone by selecting the option from the drop-down menu to enable or disable HDCP sink to determine whether the HDMI display(s) responds to HDCP content protection properly and decrypt incoming HDCP data and produce full fidelity digital streams. By selecting **Enable**, the source device connected to the VW3620 and the sink device will do an HDCP handshake to adapt the highest HDCP version supported by the sink device.

Scaler Resolution

Enter the Scaler Resolution page to set the resolution for each zone.

ATEN 36 x 20 Modular Video Wall Processor
VW3620-ATEN device [Back to Main Page](#)

General Port Settings Status Maintenance

Scaler Resolution

▼ Zone A

Output 1920×1080@60Hz ▼

▼ Zone B

Output 1920×1080@60Hz ▼

▼ Zone C

Output 3840×2160@30Hz ▼

▼ Zone D

Output 1920×1080@60Hz ▼

Cancel Save

Select the resolution option from the drop-down menu. You can also select Customized to set custom resolution for the zone display(s).


By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changed settings.

By selecting Customized, a popup Customized Resolution shows up for the user to configure the resolution.

Item	Description
	Click to add a user-defined resolution. You can create up to 10 custom resolution settings.
	Click to delete the user-defined resolution.
<input checked="" type="checkbox"/> Reduce Blanking	Check the checkbox to enable the function Reduce Blanking to reduce the horizontal and vertical blanking periods on the display(s).
<input type="text" value="Cancel"/>	Click to close the popup window and discard the changes you just made.
	Click to save the changes you just made.


Click on the Add button to create a user-defined resolution, and once you finish the configuration, click on the Save button to complete the settings.

Now the custom resolution is listed on the drop-down menu:

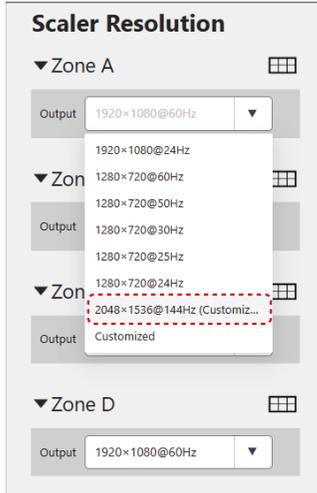

Port Name

Enter the name for the port you'd like to define, and click on the Apply button to save your changes.

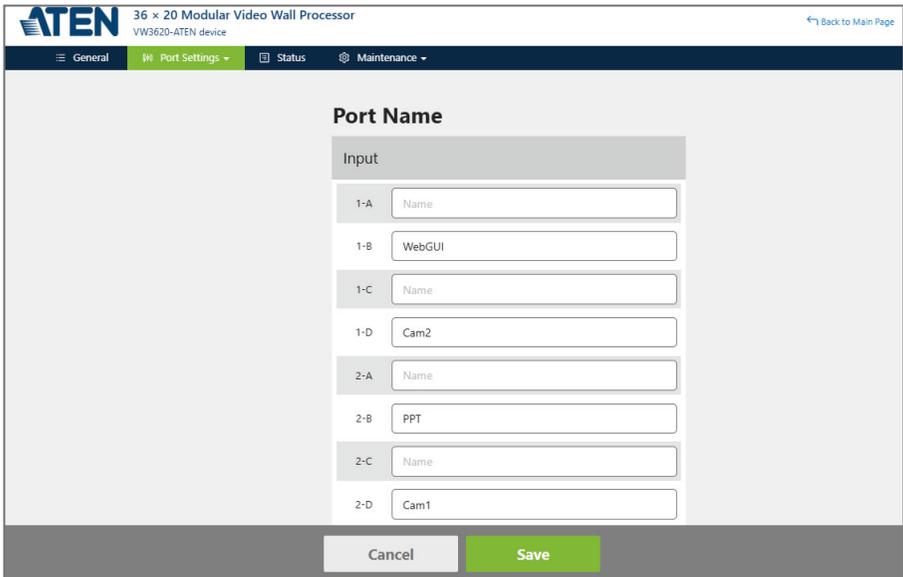

By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changes.

EDID

Extended Display Identification Data (EDID) is a data format that contains a display's basic information and is used to communicate with the video source/system. The EDID page lets users view and select an EDID mode so that the VW3620 can use the best resolution for its displays.

ATEN 36 × 20 Modular Video Wall Processor
VW3620-ATEN device

General | **Port Settings** | Status | Maintenance

EDID

EDID Mode

ATEN Default
 Port1 Mode
 Customized

Apply

Port EDID Status

ATEN EDID 1

EDID & CEA Description

EDID

1. Vendor/Product Identification
2. EDID Structure/Revision
3. Basic Display/Feature
4. Color Characteristics
5. Established Timings
6. Standard Timings
7. Detail Timing/Display Description 1
8. Detail Timing/Display Description 2
9. Monitor Description
10. Monitor Description


CEA

1. Display Support
2. Video Data
3. Audio Data
4. Speaker Allocation
5. Vendor Specific Data
6. HDMI Forum Vendor Specific Block
7. YCBCR 4:2:0 Video Data Block
8. YCBCR 4:2:0 Capability Map Data Block
9. Detail Timing/Display Description 1
10. Detail Timing/Display Description 2

Note: The EDID mode can also be selected via the front panel pushbuttons—see *EDID Mode*, page 39.

EDID Mode


In the left panel of the page, users can select a pre-configured EDID Mode using the EDID Mode radio buttons.

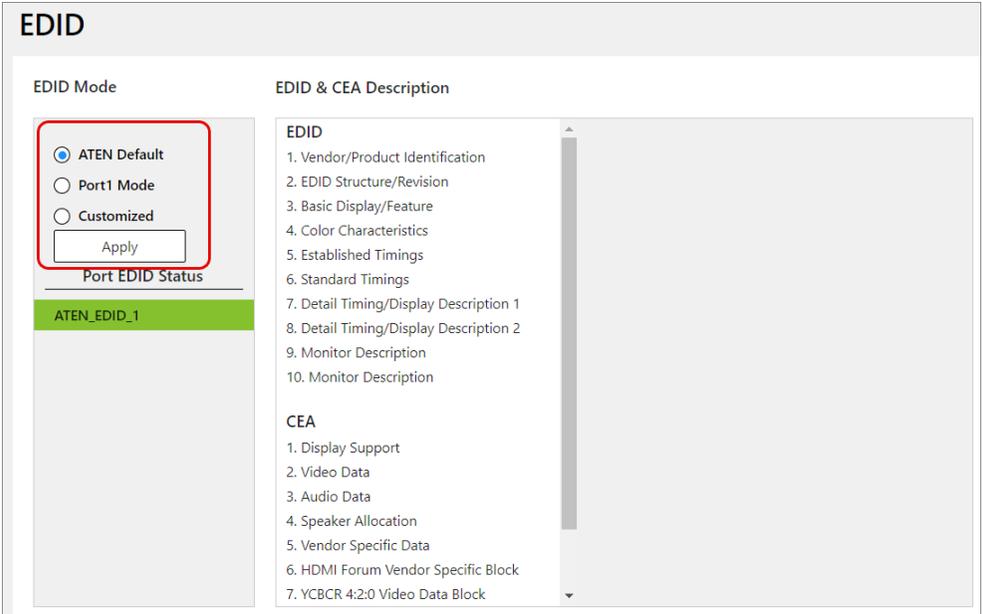

Item	Description
ATEN Default	All ports' EDID is the same as the hardware default EDID.
Port 1 Mode	All ports' EDID is the same as Port1's EDID.
Customized	Select the Customized mode to defined the EDID and CEA settings by users.
Apply	Click to apply the mode you just selected.

EDID & CEA Description

The middle panel of the screen lets users view and configure the EDID or the CEA mode.

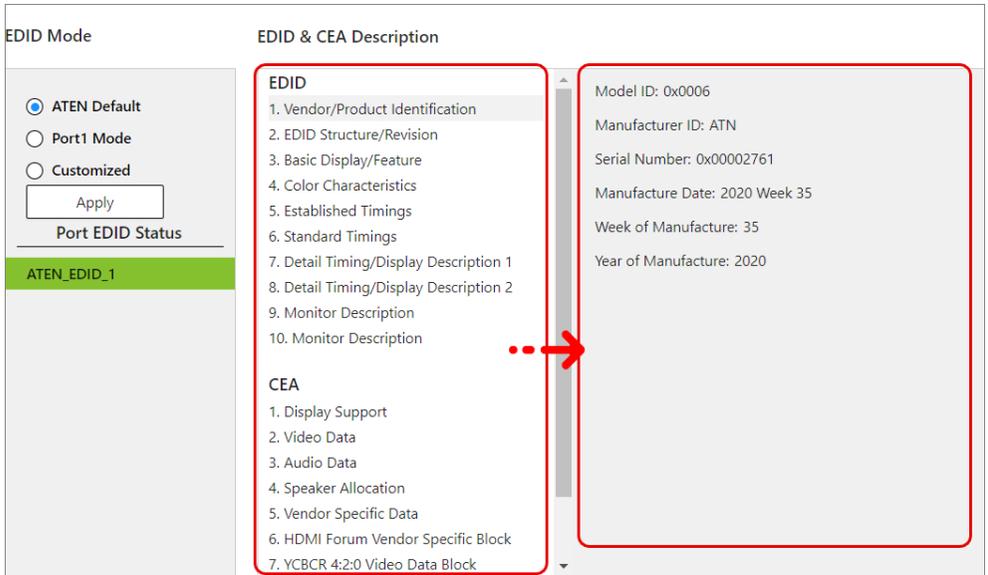


From the middle column, click the option that you want to view and/or edit. There are two categories: EDID (Extended Display Identification Data) and CEA (Consumer Electronics Association).

When you select the menu items on the middle column, the current settings for the selected EDID appear on the right column. Some of the screens are read-only.

CEC

Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control.

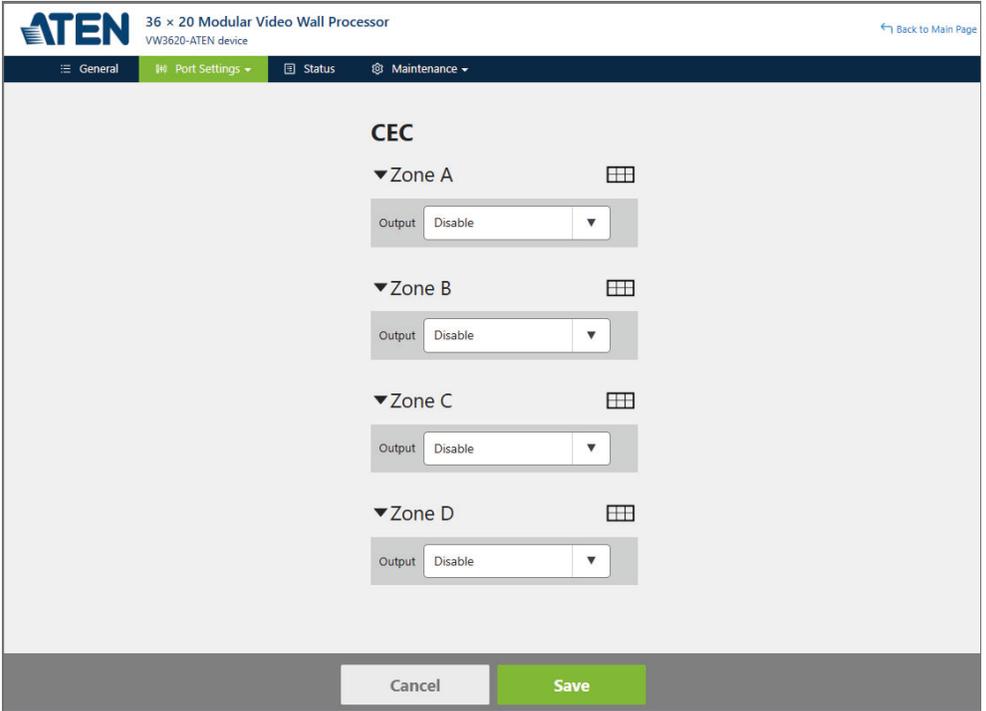

Use the drop-down menu to enable/disable CEC for the output ports of the zone. By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changed settings.

HDR

High dynamic range (HDR) displays video content with more luminance, more color and contrast.

Input	Disable
Apply to All	▼
1-A	Disable ▼
1-B	Disable ▼
1-C	Disable ▼
1-D	Disable ▼
2-A	Disable ▼
2-B	Disable ▼
2-C	Disable ▼
2-D	Disable ▼
3-A	Disable ▼

Cancel Save

Use the drop-down menu to apply options to all input ports, or set for each input port by selecting Enable or Disable from the drop-down menu. By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changed settings.

Status

Status page gives you a graphical information about the current working status of the VW3620.

Click on the component to be checked to open the popup for detailed information.


Output Board 1

Working Status: Normal

Model Name	I/O Type	FW Version	Temperature	Power
VW884	HDMI	V1.1.105	40°C	MAX .53 W

Port A	Port B	Port C	Port D
Connected	Connected	Connected	Connected
1-A:Untitled	1-B:Untitled	1-C:Untitled	1-D:Untitled

Click on the fan module to open the popup to configure the fan speed between Auto, High, and Low.

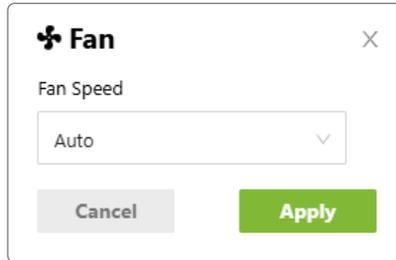

4K60 Mode Configuration

ATEN VW784 input card supports 4K@60Hz input sources. By enabling the 4K60 mode, you are able to play the video at 4K resolution (3840 × 2160) and 60 fps (frames per second) from port A and port C of the selected input card.


Pay attention to your video wall layout arrangement when 4K60 mode is enable:

- ◆ The VW784 input card supports up to four 4K@30Hz inputs or two 4K@60Hz inputs.
- ◆ The VW884 output card supports playing up to four 4K@30Hz videos or two 4K@60Hz videos.


Enable 4K60 Mode

To enable 4K60 mode:



1. Click to open the popup window of the input card to be enabled with 4K60 function.

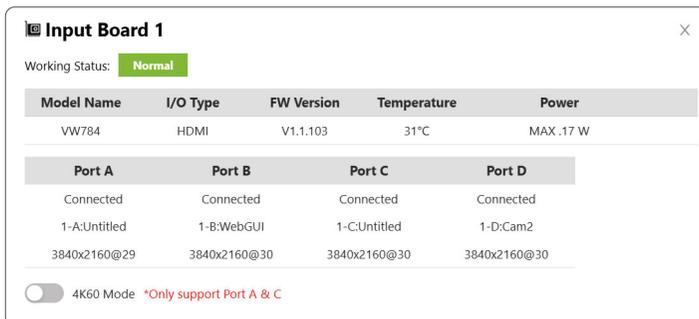

2. Switch to enable the 4K60 mode.

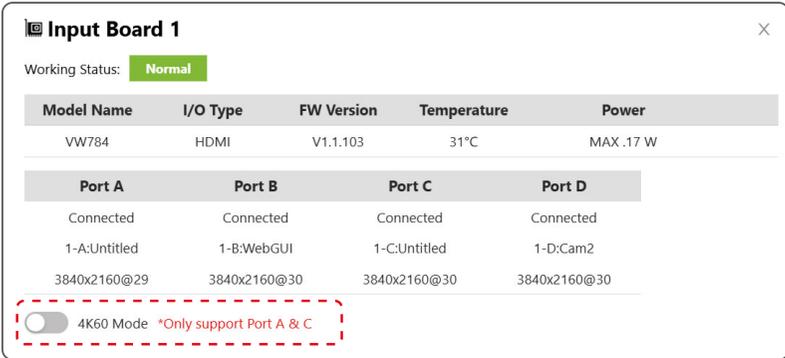

Once 4K60 Mode is enabled, port B and port D become unavailable and go blank.

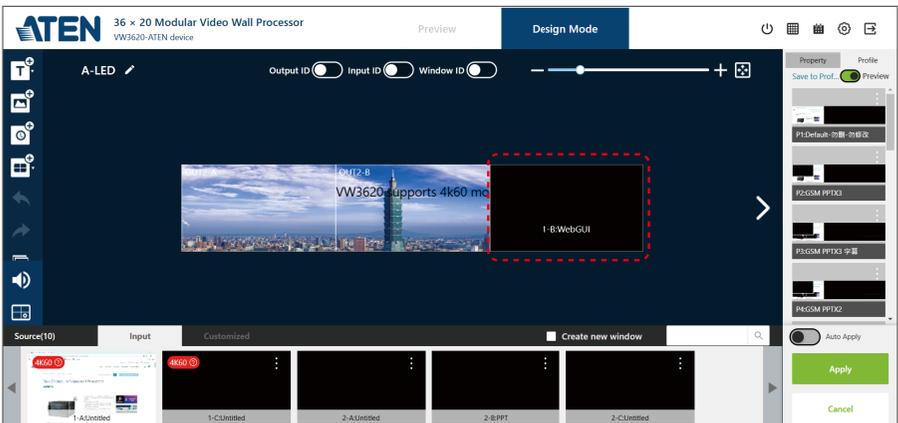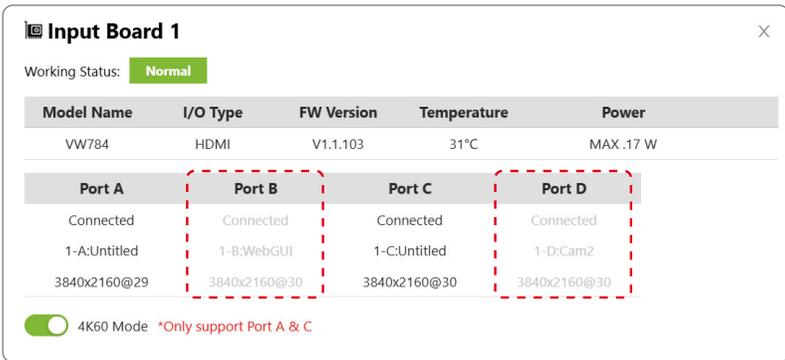

The 4K60 video source is highlighted with a red badge:


- ◆ On Design Mode screen:



- ◆ On Video Source List:



- ◆ On Source Array screen:

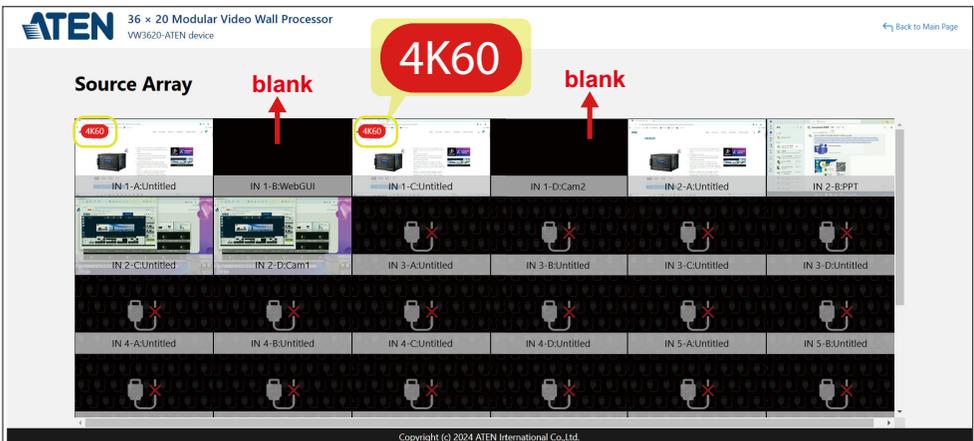

Maintenance

Move the cursor over the menu item Maintenance to expand the submenu, and click on the submenu option you'd like to configure to enter the page.


The screenshot shows the ATEN web interface for a 36 x 20 Modular Video Wall Processor. The top navigation bar includes 'General', 'Port Settings', 'Status', and 'Maintenance'. The 'Maintenance' menu is expanded, showing 'System Setup', 'User Account', 'Network', and 'Security'. The 'User Account' page is active, featuring a '+ Add Account' button and a table with the following data:

User Name	Level	Permission	Description
administrator	Administrator	All Zones	administrator

Copyright (c) 2024 ATEN International Co., Ltd.

System Setup

You can use the System Setup page to do any of the following:

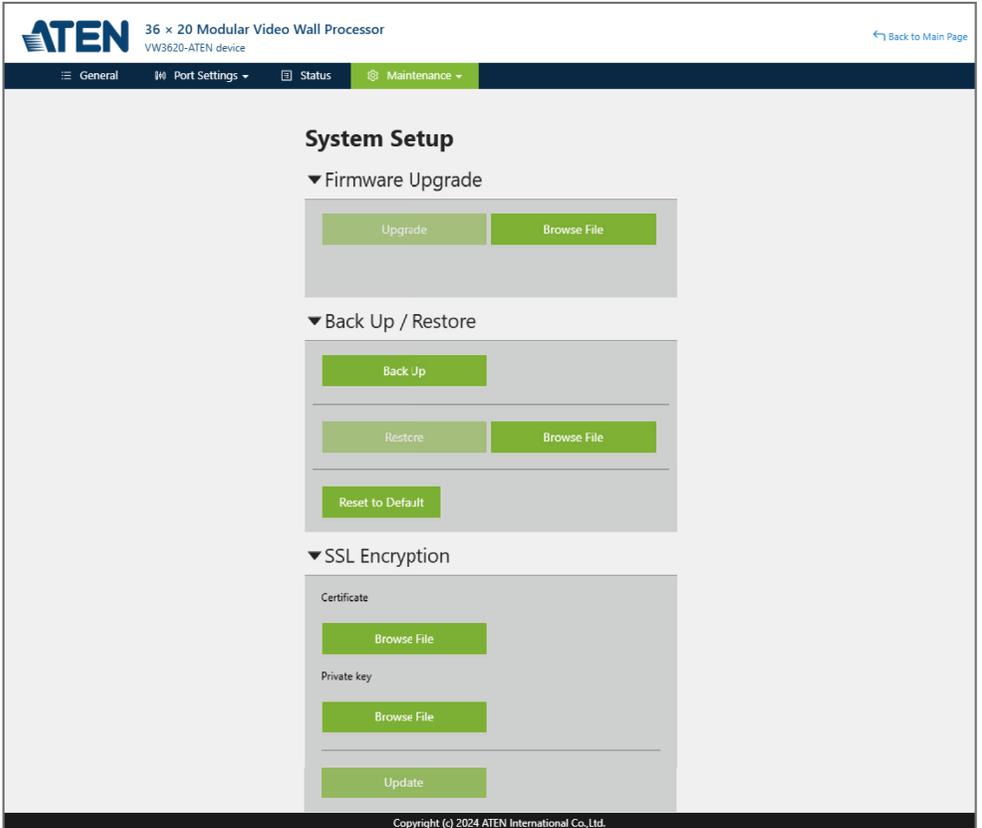

- ◆ Upgrade the VW3620's firmware.
- ◆ Back up or restore the VW3620's settings. Note that account settings cannot be backed up or restored.
- ◆ Configure the SSL Encryption settings.

User Account

The User Account page lets you check, add, edit, or delete users and change the password for accessing the VW3620's Web GUI.

36 x 20 Modular Video Wall Processor
VW3620-ATEN device

General Port Settings Status Maintenance

User Account

+ Add Account

User Name	Level	Permission	Description
administrator	Administrator	All Zones	administrator
test001	Administrator	All Zones	for test

Note: This is an Administrator only function.

Add a New User

To create a new user account, do the following:

1. Click the Add Account button to open the Add / Edit Account popup.

User Account

+ Add Account

User Name	Level	Permission	Description
administrator	Administrator	All Zones	administrator

2. Fill in the required field.

Add / Edit Account
✕

User Name

Description:

Password

Confirm Password

Please enter 5-16 characters without these special characters <>[]()*+=?@/\|:;'" space &

Level

Administrator: Preview / Design / Calendar / Settings

Advanced User: Preview / Design / Calendar

Basic User: Preview / View Calendar

Permission

zone A zone B zone C zone D

Delete
Cancel
Save

Item	Description
User Name	The account used to log in to the Web GUI
Description	Any description you'd like to add to this user
Password	The password for this user to log in to the Web GUI
Confirm Password	Enter the password again for confirmation.
Level	Assign the user role type for this user: <ul style="list-style-type: none"> ◆ Administrator ◆ Advanced User ◆ Basic User
Permission	Check the check box(es) to select the zone(s) this
Cancel	Close the popup and discard the settings.
Save	Click on the save button to create this user account.

3. Click on the Save button to complete.

Edit / Delete an Existing User

On the user list, pass your cursor to the user to be edited, and an Edit option appears. Click on it to open the Add / Edit Account popup. To edit the user account, make changes and then click on the Save button. To delete the user account, directly click on the Delete button to remove this user.

User Account + Add Account			
User Name	Level	Permission	Description
administrator	Administrator	All Zones	administrator
test123	Basic User	All Zones	Edit

Network

The Network page lets you configure the VW3620's IP settings for connecting to it via the web GUI.

The screenshot shows the ATEN web GUI for a 36 x 20 Modular Video Wall Processor. The top navigation bar includes 'General', 'Port Settings', 'Status', and 'Maintenance'. The main content area is titled 'Network' and contains two sections: 'IP Settings' and 'Browser'.

IP Settings:

- Mode: DHCP, Manual
- IP Address:
- Mask:
- Gateway:
- DNS:

Browser:

- Timeout:

At the bottom, there are 'Cancel' and 'Save' buttons.

Item	Description
IP Settings	
Mode	Enable DHCP to allow the DHCP server to assign an IP address to the VW3620. Select Disable to enter your own static IP address settings for the device.
IP Address	Set the IP address for this VW3620.
Mask	Configure the mask settings for this VW3620.
Gateway	Configure the gateway settings for this VW3620.
DNS	Configure the DNS settings for this VW3620.
Browser	
Timeout	Set the inactive duration before the system automatically log the user out.

Item	Description
IP Installer	
Mode	<p>Configure the mode that your VW3620 to work with the ATEN's program, IP Installer, if you have installed it on your computer.</p> <ul style="list-style-type: none">◆ Enable The unit's IP address can be found by IP Installer and configured through the Set IP function of IP Installer.◆ View Only The unit's IP address can be found by IP Installer, but it cannot configured through IP Installer.◆ Disable The unit's IP address cannot be found by IP Installer.
Save / Cancel	<p>By making any changes on this page, the Save button located at the bottom of the page becomes available. Click on it to adopt the changed settings. Click on Cancel to discard the changes.</p>

Security

Security page allows the user to set the following:

The screenshot shows the ATEN web interface for a 36 x 20 Modular Video Wall Processor. The top navigation bar includes 'General', 'Port Settings', 'Status', and 'Maintenance'. The main content area is titled 'Security' and contains three sections:

- Account Lockout Policy:**
 - Account Lockout:
 - Maximum Invalid Login Attempts (1-999):
 - Account Lockout Duration (1-999 mins):
- Connection:**
 - Telnet Login:
- Transport Layer Security:**
 - Transport Layer Security:

At the bottom of the form are 'Cancel' and 'Save' buttons. The footer contains the copyright notice: Copyright (c) 2024 ATEN International Co., Ltd.

Item	Description
Account Lockout Policy	
Account Lockout	To enable or disable the function that locks the login account after a certain number of failed sign-in attempts.
Maximum Invalid Login Attempts (1-999)	Enter the maximum number of failed sign-in attempts.
Account Lockout Duration (1-999 mins)	Define the number of minutes that a locked-out account remains locked out before it gets unlocked.

Item	Description
Connection	
Telnet Login	To enable or disable the Telnet login function.
Transport Layer Security	
Transport Layer Security	Select the TLS version to be adopted.

Once you finish your configuration about the security, click the Save button to make the change to take effect.

Chapter 5

Tablet Control


Overview

The VW3620 supports remote control via Android tablets and iPads by accessing its built-in Graphical User Interface (GUI) through a browser app. The operation on a tablet is nearly identical to the PC version of VW3620 Web GUI. In this chapter, we will highlight the operational differences compared to the PC version. Refer to the following sections for instructions on how to control and configure your VW3620 using a mobile device.

Logging In


To access the VW3620 Web GUI via a mobile device, do the following:

1. Launch a browser app and enter the IP address of your VW3620. The login page shows up:

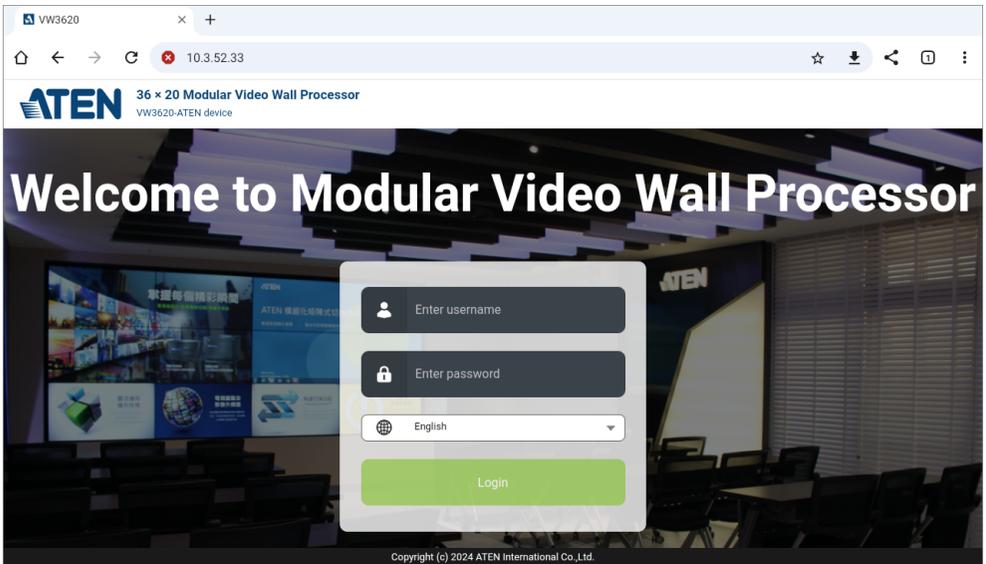

2. Select the display language and enter your username and password to log in.

3. After successfully logging in, you will enter VW3620 Web GUI Design Mode page. The design mode of tablet version is slightly different from the PC version as the figure below shows:

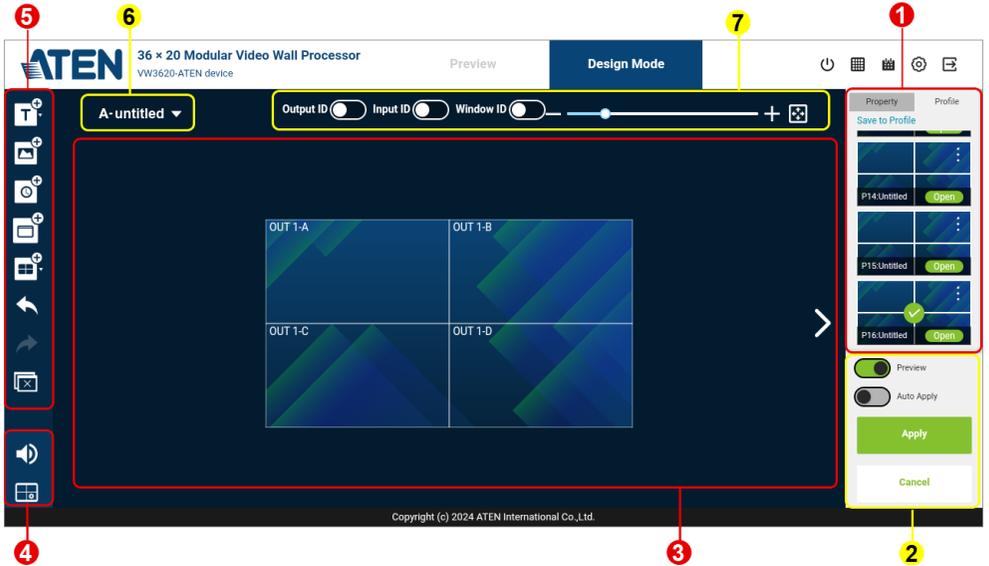

No.	Item	Description
1	profile panel	<p>The profile panel consists of the two tabs:</p> <ul style="list-style-type: none"> ◆ Profile List: Displays all available profiles, including unedited ones. ◆ Property Settings: Shows the properties of selected items within a profile. Users can edit these properties or use the show/hide button to reveal or conceal selected items.
2	profile playing functions	<p>Profile playing functions allow users to control how a profile is applied to the video wall:</p> <ul style="list-style-type: none"> ◆ Preview: Displays the live source video for a quick view. ◆ Auto Apply: Automatically applies the profile when opened. ◆ Apply: Manually apply the profile to the video wall. ◆ Cancel: Discards any unsaved changes.

No.	Item	Description
3	canvas area	Canvas area is where you design and arrange the display zones. Use the side buttons (prev / next) to switch between zones.
4	audio & display configuration buttons	Use these buttons to adjust audio output and display layouts: <ul style="list-style-type: none"> ◆ Audio Control: Configure output audio settings per port or apply settings to all. ◆ Display Configuration: Arrange display layouts for each zone.
5	canvas toolbar	The canvas toolbar provides 8 tools for editing the display layout, including options to add text, images, clocks, and video windows, as well as undo, redo, and clear actions.
6	zone navigation drop-down menu	Tap to open zone options and switch to your desired zone.
7	layout configuration tools	Layout configuration tools help adjust layout visibility and item order within the display zone. Functions include toggling port IDs, rearranging item layers (bring forward/back), removing items, and zoom controls for resizing the canvas view.

See *Interactive Functions on Design Mode Tab*, page 63 for details.

When operating the VW3620 with a tablet, pay special attention to the use of the following two buttons on the canvas toolbar:

Item	Description
	Create Window Click the button to open Select Source Popup to further set the video source. See <i>Single Source Operation</i> , page 111 for details.
	Create Multiview Window Click the button to open the option menu to select the window type and open the Multiview Editor popup to edit the input sources. See <i>Multiview Window Configuration</i> , page 114 for details.

Profile List Operation


This section describes how to manage profiles using the tablet browser interface. The user flow and UI responses may differ slightly from the PC browser version.

Opening a Profile

To open a profile, scroll to find the one you need and tap the **Open** button.



Alternatively, tap the more button to open the options menu, then select **Open** to load the profile.

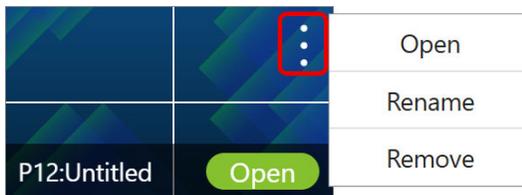


Editing a Profile

To edit an existing profile:

1. Open the profile you'd like to make changes.
2. Tap to select an item and edit it using **Property** and layout configuration tools.




3. Tap to open profile list tab, and tap **Save to Profile** to save your changes.

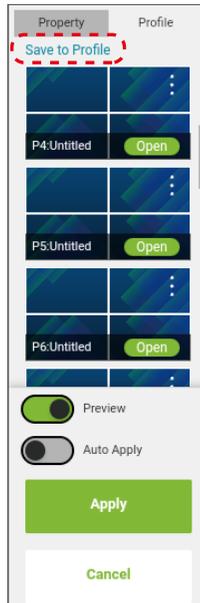


Deleting a Profile

To delete a profile:

1. Tap the more button on the target profile to open the option menu.

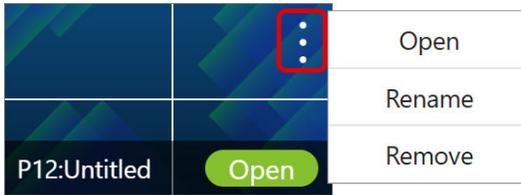

2. Select **Remove** from the menu.
3. In the confirmation dialog, tap **OK** to proceed.

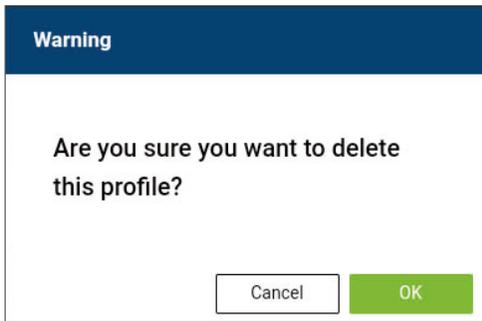

Note: This action cannot be undone. Make sure the selected profile is no longer needed before confirming deletion.


4. The selected profile will be cleared and reset to an empty state.

Single Source Operation

Adding a Window

To add a window that displays a single video source or user-defined video source(s), follow these steps:

1. From the canvas toolbar, tap the **Create Window** button .
2. The **Select Source** popup appears. Tap the **Input** tab to view all input video sources from connected devices, or tap the **Customized** tab to view user-defined video source(s).

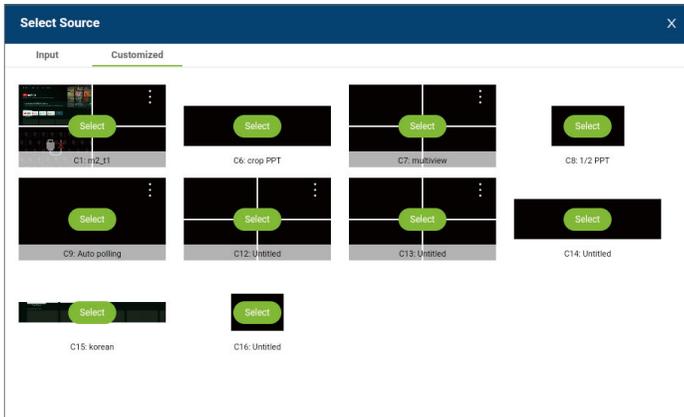

3. Find the desired video source and tap its **Select** button  to apply it.
4. The window will now appear in the display area.



Video Source Management


To change the source:

1. Tap the **Edit** button on the window you want to modify.




2. The **Select Source** popup appears, containing **Input** and **Customized** tabs:


- ◆ **Input Tab:**

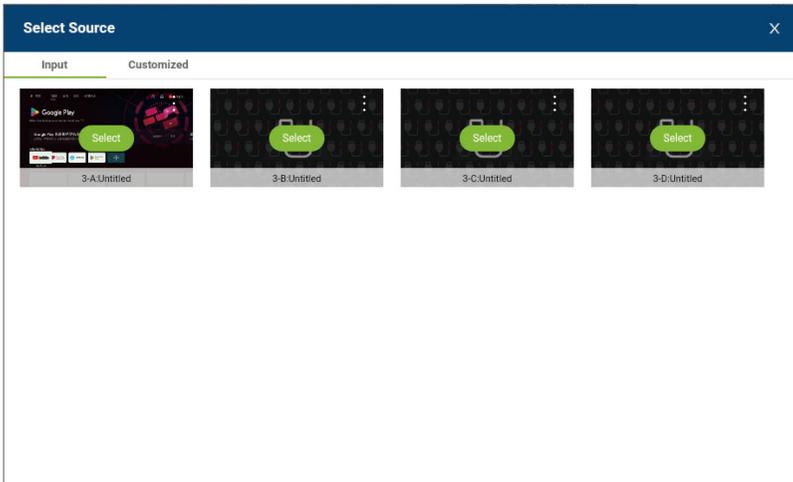

◆ Customized Tab:

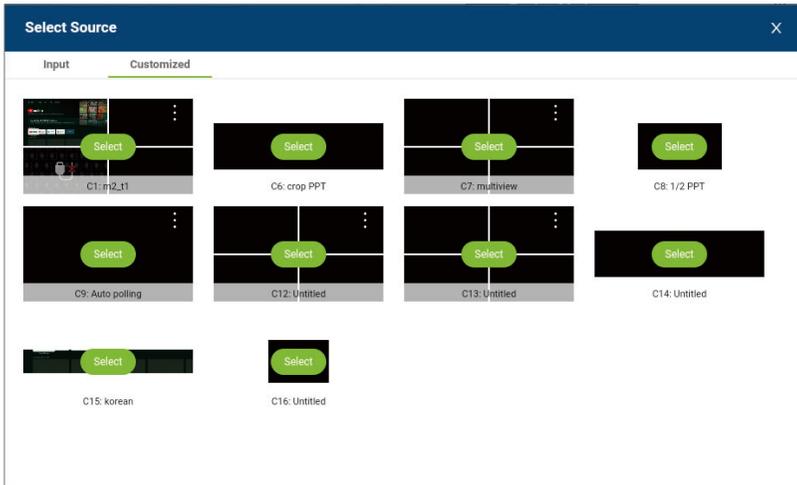

3. Find the desired source and tap the **Select** button to apply it.

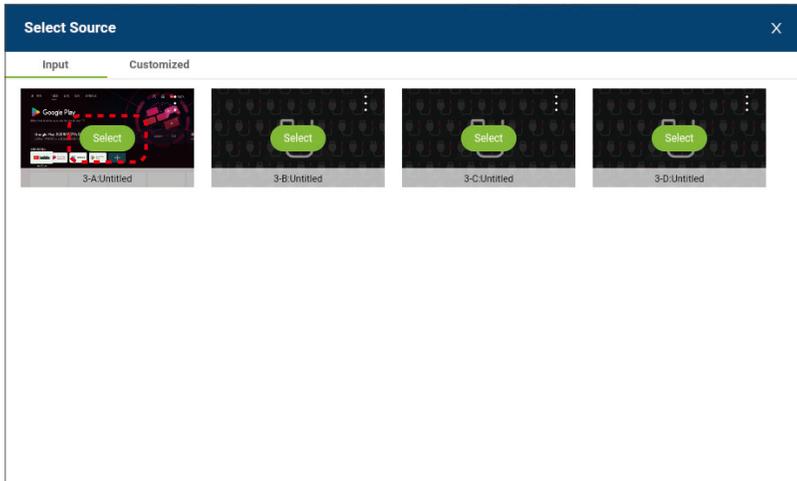

Multiview Window Configuration

The operations in this section is optimized for tablet-based interaction.


Create a Multiview Window

To create a multiview window, follow these steps:


1. Tap the **Create Multiview Window** button  on the canvas toolbar to open the option menu to elect the desired layout type.




2. The **2 x 2** or **4 x 4** **Multiview Editor** popup appears. Tap a sub-window to assign its video source.

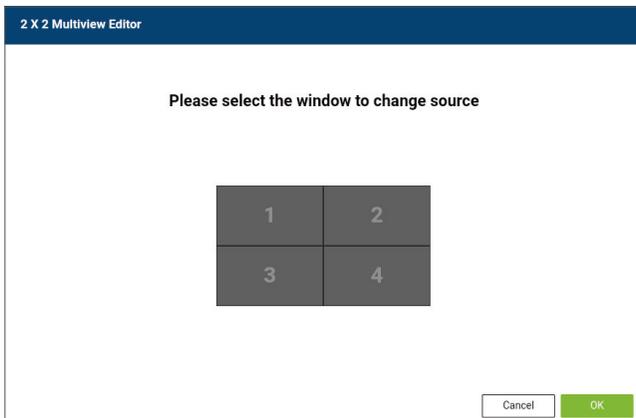

3. On the multiview editor:

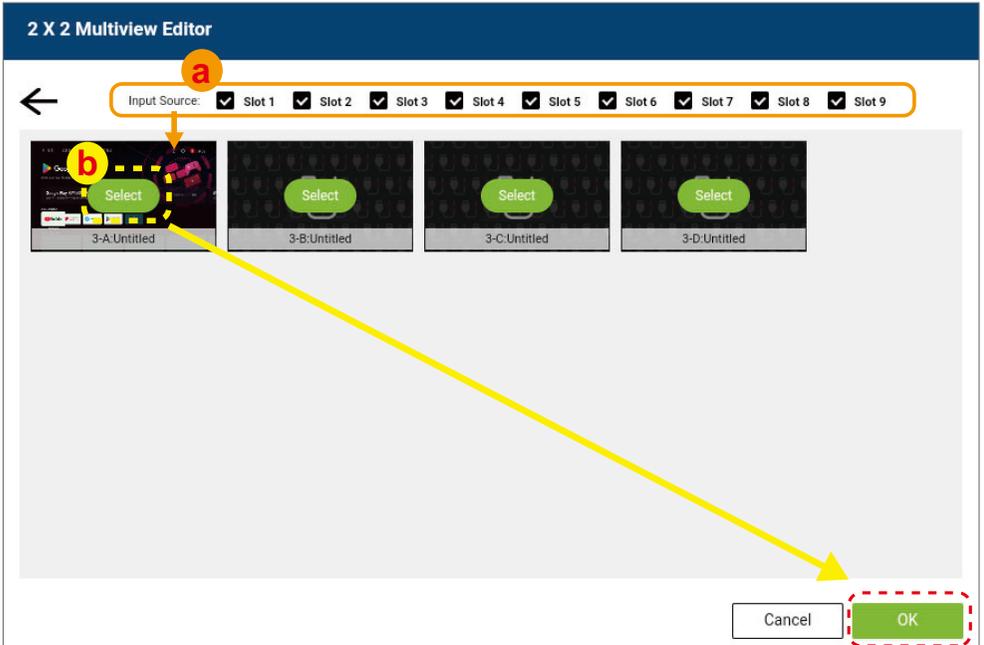

- a) Select the slot(s) to define which input sources are available for this multiview window.
 - b) Tap the Select button on the desired source to apply it to the selected sub-window.
4. Repeat as needed to complete the layout. Tap OK to confirm.

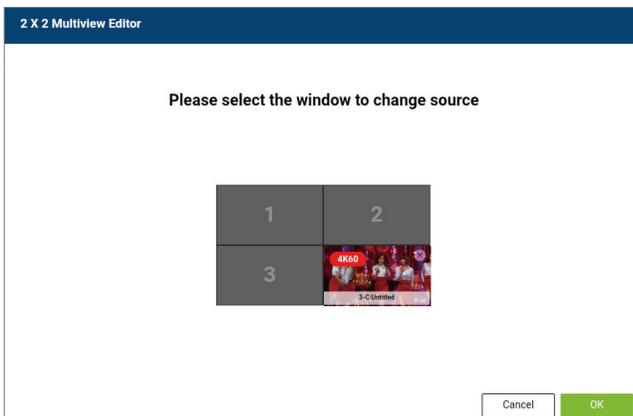

5. The newly created multiview window will now appear on the canvas.




After placing the multiview window on the canvas, you can reposition or resize it by tapping and dragging the frame markers.

Editing / Deleting a Multiview Window

To edit a multiview window:


1. On the canvas, tap to select the target window.
2. Tap the **Edit** button on the window to open the Multiview Editor and change its video source.

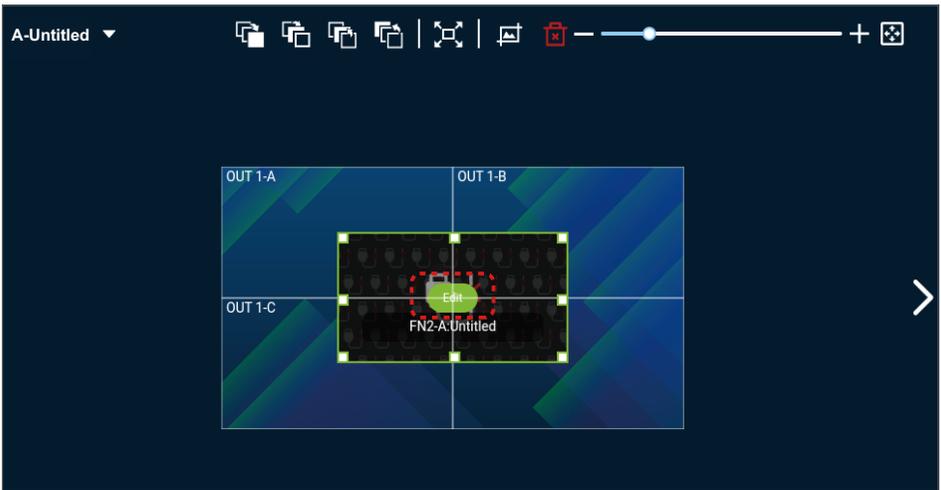

3. Resize the window frame by dragging the adjustment markers.

To delete a multiview window:

1. On the canvas, tap to select the desired window.
2. Tap the **Delete** button in the layout configuration toolbar.

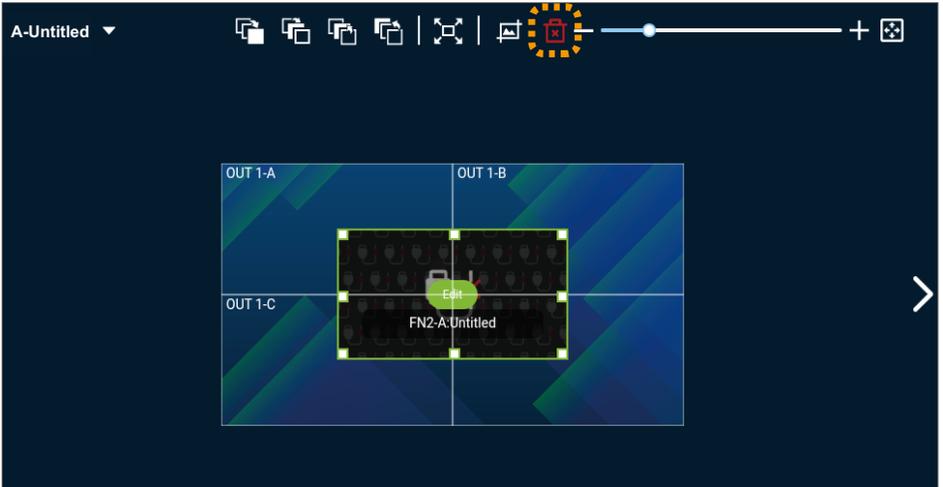

Window Behavior and Adjustment


Adding an Image

To add an image using a tablet:

1. Tap the **Add Image**  button on the canvas toolbar.




2. The **Select an image** window opens. You can:

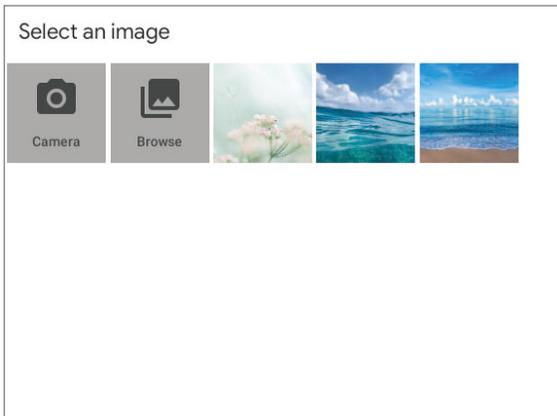

- ◆ Choose an image directly.
- ◆ Select **Camera** to take a photo.
- ◆ Tap **Browse** to find an image from the tablet's internal storage.

- The selected image will appear on the canvas. Resize it if needed.

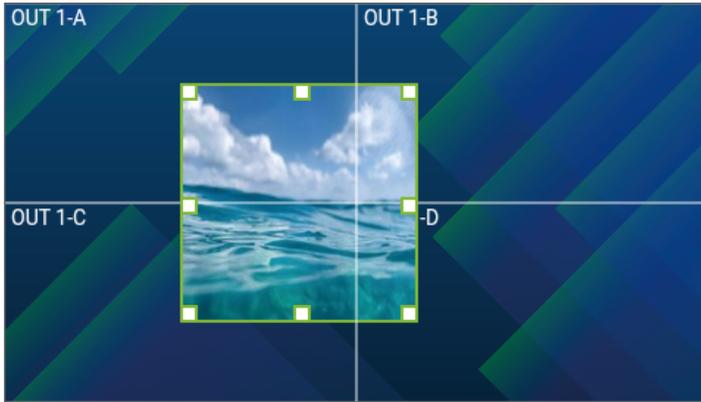

Layout Management

Resizing

To change the frame of a displayed item:



- Tap the window, image, or clock you want to edit.
- A green box with square adjustment markers will appear around the item.
- Drag the markers inward or outward to resize the item.


Cropping

To crop an item:


1. Tap to select the window you want to edit.



2. Tap the **Crop** button in the layout configuration toolbar.

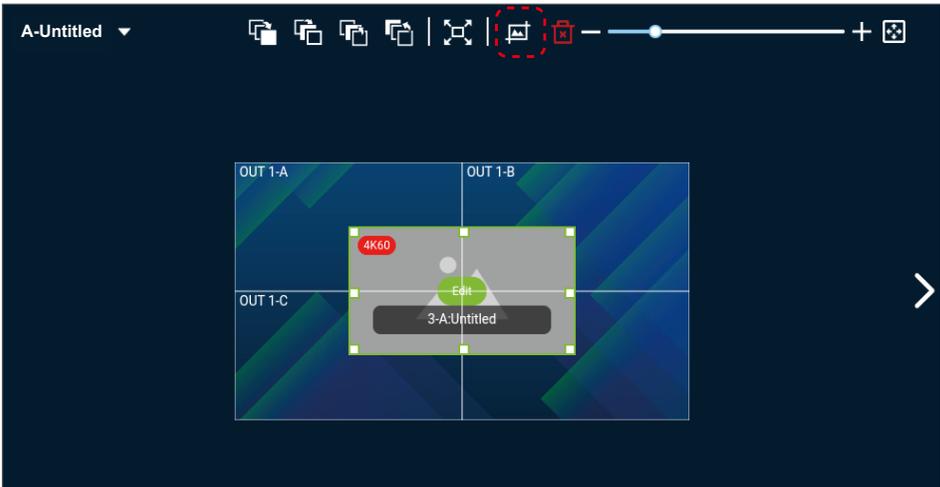


3. A red box with four square adjustment markers will appear around the item, along with three function buttons:

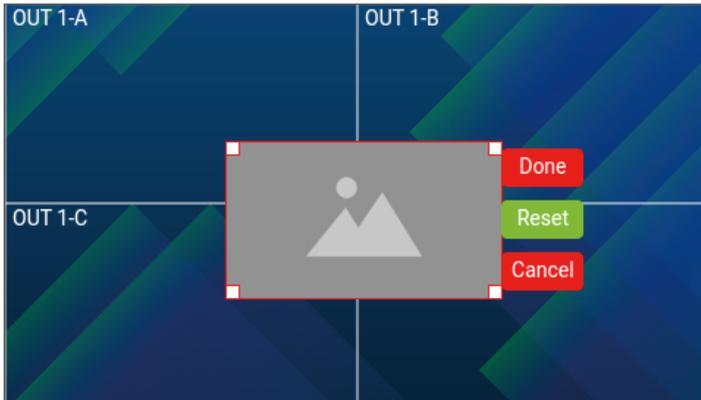

Function	Description
Done	Confirm the changes.
Reset	Revert to the previous crop.
Cancel	Discard all changes.

4. Drag the markers inward or outward to crop the item as desired.

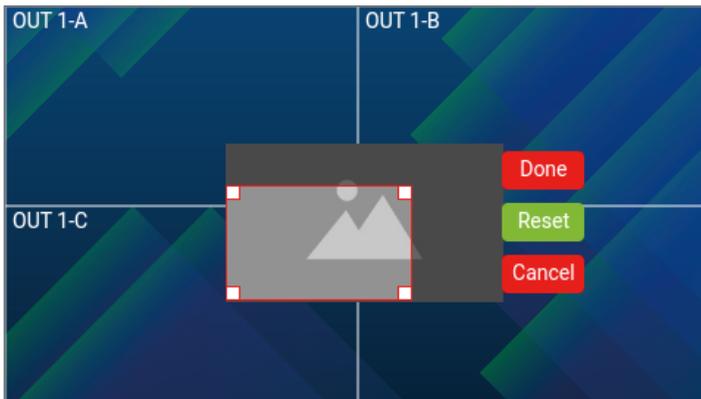

5. Tap the Done button to apply the crop.

This Page Intentionally Left Blank

Chapter 6

Device Chaining

Overview

This section explains how to configure and manage device chaining for VW3620, including backup and expansion scenarios. The system supports chaining via Primary and up to two Secondary units, allowing synchronized display or redundancy depending on your setup.


Hardware Setup

Connection Rule

The connection sequence determines the device roles in the chain mode. The unit connected at the start of the chain functions as the primary device, while the following units become the secondary devices. In normal operation, only the primary unit can be actively controlled and configured through its Web GUI. Secondary devices are read-only, allowing users to monitor but not modify settings. All display layout and port configuration changes must be performed on the primary unit, and any changes made will automatically synchronize across all chained secondary units.


Backup Mode

To enable Backup Mode, simply connect the chain out port of the primary unit to the chain in port of a secondary unit (Secondary 1) using an RJ-45 cable.

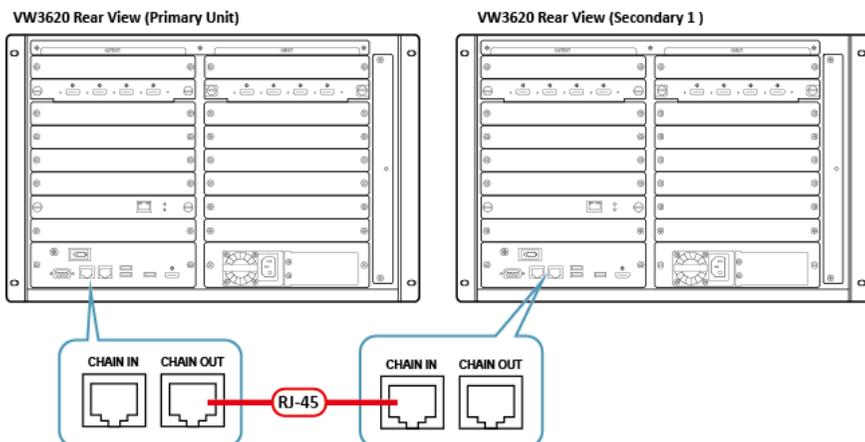

Expansion Mode

To enable **Expansion Mode**, install the VW3620 units as follows:

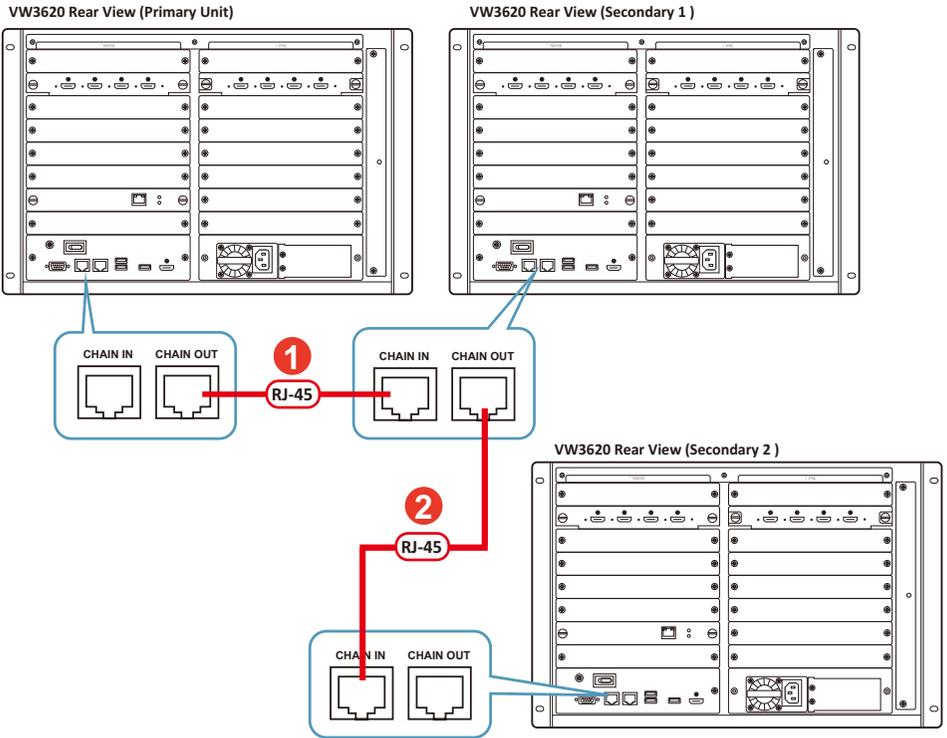


1. Use an RJ-45 cable to connect the chain out port of the primary unit to the chain in port of a secondary unit (Secondary 1).
2. (Optional) Connect the chain out port of Secondary 1 to the chain in port of another secondary unit (Secondary 2).

Example System Architecture

The figure below is an example system architecture:

Example System Architecture Using VW3620 Units with Matrix Output

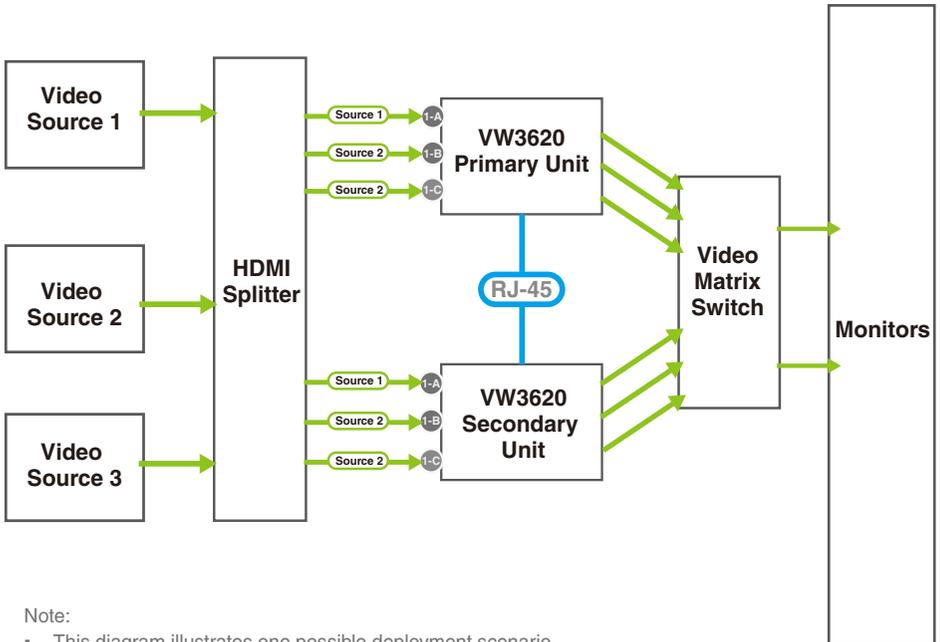

Note:

- This diagram illustrates one possible deployment scenario. Actual installation may vary based on project needs.
- RJ-45 is used for control signal, not video transmission.

The diagram illustrates a typical deployment of VW3620 units in a matrix output scenario. An HDMI splitter distributes identical video signals to both the primary and secondary unit(s).

Since the RJ-45 connection between units is used solely for control communication—not for video transmission—each VW3620 unit must receive the video sources in the exact same input order. For example, if Source 1, 2, and 3 are connected to Input 1-A, 1-B, and 1-C on the primary unit, the same source-to-port mapping must be applied to all secondary unit(s).

Browser Operation

Device chain status is displayed in the Web GUI, including each unit's role, IP, and sync state. Log in to your VW3620 web GUI of the primary unit, and go to **Settings > General**. Scroll down to **Device Chain Configuration** for further settings.

Chain Status : Disable [Refresh](#)

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	--
Secondary 1	Name (192.168.1.251)	--
Secondary 2	--	--

Chain Mode

-- / Backup (only support Primary & Secondary) / Expansion
▼

Enable

Disable

Chain Status

Chain Status defines four possible states along with their corresponding color indicators, helping users quickly identify the current status of all chained devices.

Status	Indicator	Description
Enable	 Green	Chain is enabled and operating normally; all devices are in Ready status.
Disable	 Gray	Chain mode is off; all devices are in inactive (--) status
Syncing	 Orange	Data synchronization in progress across all chained devices.
Error	 Red	One or more chained devices is in Error or Disconnected status.

Device status gives the possible device statuses in a chained setup, explaining the operational state of each unit:

Status	Description
Working	The device is functioning normally as the primary unit.
Syncing	The device is syncing data to the secondary unit(s).
-- (Inactive)	No mode is activated; the device is in standby or unconfigured state.
Error	The device encountered an issue (e.g., not detected or abnormal operation).
Disconnected	The device is offline or not connected.

Chain Mode


Device chaining allows you to link multiple units to work together under two modes:

- ◆ **Expansion Mode:**
The secondary units extend display output capacity, allowing all units to operate simultaneously.
- ◆ **Backup Mode:**
The secondary device stay in sync with the primary but cannot be operated unless the primary fails.

Note: When three units are connected—Primary, Secondary 1, and Secondary 2—Backup Mode is not supported.

Device Chain Configuration


When a chained device is detected, a popup appears in the primary unit's Web GUI, prompting the user to go to the settings page for configuration. Please note that only the primary device can activate chain modes.

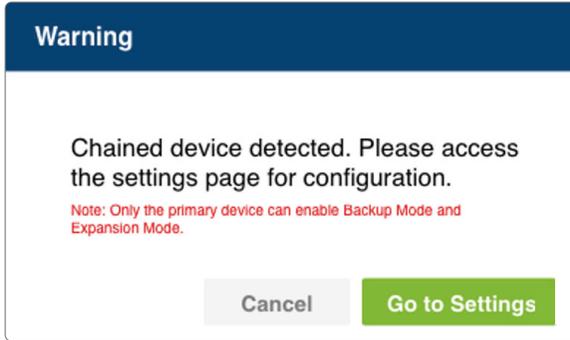

Enabling Chain Mode

To enable chain mode:


1. On the Primary unit's Web GUI, navigate to **Settings > Device Chain Configuration**. Verify that **Chain Status** is set to **Disable**.

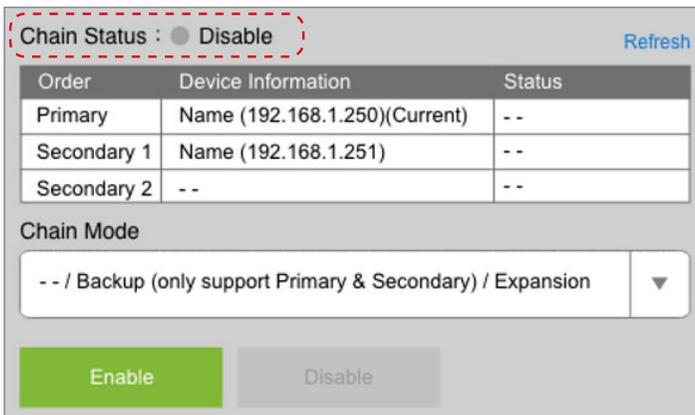


2. From the **Chain Mode** dropdown, select either:
 - ◆ **Backup Mode**—supports only one secondary unit.
 - ◆ **Expansion Mode**—supports multiple secondary units.
 Click the **Enable** button to proceed.

3. A warning popup appears. Click **Apply** to confirm.

- ◆ Backup Mode

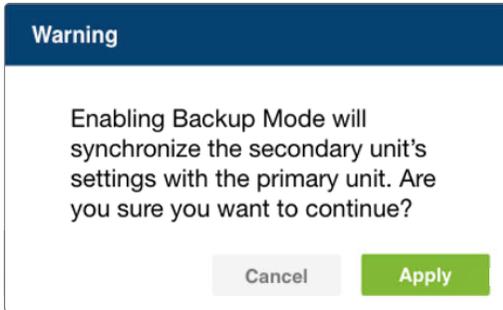

- ◆ Expansion Mode

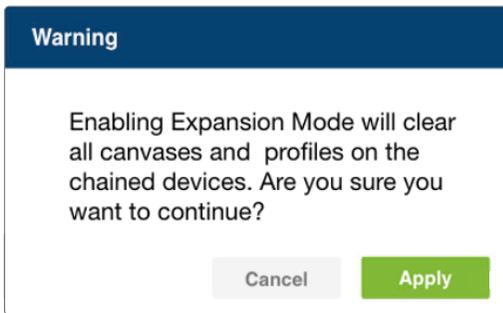

4. The Chain Status will change to **Syncing**, and the secondary unit(s) will begin synchronizing with the primary unit.

Chain Status: ● Syncing (Backup Mode) Refresh

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Syncing
Secondary 1	Name (192.168.1.251)	Syncing
Secondary 2	--	--

Chain Mode

Backup ▼

Enable Disable

5. Once synchronization is complete, the **Chain Status** will update to **Enable**, and all linked units will display **Working** in the status column.

Chain Status: ● Enable (Backup Mode) [Refresh](#)

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Working
Secondary 1	Name (192.168.1.251)	Working
Secondary 2	--	--

Chain Mode

Backup

Enable Disable

Disabling Chain Mode

To disable chaining:

1. On primary unit's Web GUI, go to **Settings > Device Chain Configuration**.

- ◆ Back Mode:

Chain Status: ● Enable (Backup Mode) [Refresh](#)

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Working
Secondary 1	Name (192.168.1.251)	Working
Secondary 2	--	--

Chain Mode

Backup

Enable Disable

- ◆ Expansion Mode:

Chain Status: ● Enable (Expansion Mode) [Refresh](#)


Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Working
Secondary 1	Name (192.168.1.251)	Working
Secondary 2	--	--

Chain Mode


Expansion

Enable Disable

2. Click **Disable** to revert the system to standalone mode.
3. A confirmation popup will be displayed. Click **Deactivate** to confirm.
 - ◆ Back Mode:

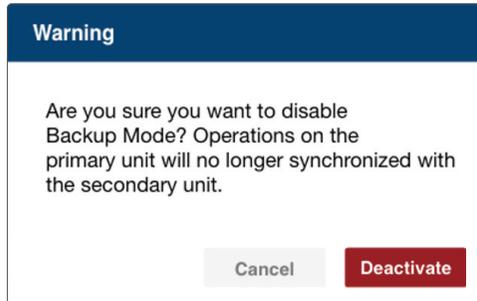

- ◆ Expansion Mode:

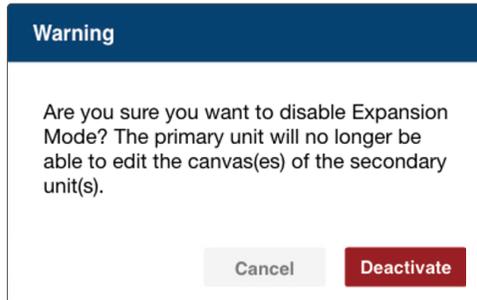

Chain Mode Behavior and UI Restrictions

In chained setups, the primary Web GUI retains full administrative control, while the secondary Web GUI functions primarily in a restricted, monitoring role. This separation ensures consistent configuration management and avoids conflicts in multi-unit environments.

Depending on the chain mode, user operations in the Web GUI vary:

Chain Mode	Primary Web GUI	Secondary Web GUI (1 & 2)
Backup Mode	Full access	Limited. Design / Preview tabs are disabled unless the primary unit is offline
Expansion Mode	Full access to outputs	Limited. Editing disabled in Calendar & Design tabs

- ◆ In **Backup Mode**, the secondary unit cannot be operated unless the primary unit is disconnected or fails.
- ◆ In **Expansion Mode**, only the primary unit handles output-related settings (e.g., HDCP, scaler, CEC). The secondary units can view outputs but not control them.

Backup Mode

When **Backup Mode** is enabled and functioning normally, the secondary Web GUI cannot perform any operations under **Design, Preview, or Calendar** tabs. These tabs will display configurations mirrored from the Primary. Only when the primary unit becomes disconnected or enters error status does the secondary 1 temporarily gain operational control—this design ensures a true failover mechanism without dual-control risks.

As long as the primary unit is alive, the secondary unit(s) follows.

Expansion Mode

In **Expansion Mode**, although all units participate in active output, only the primary unit can configure output-related parameters such as:

- ◆ HDCP settings
- ◆ Scaler Resolution
- ◆ CEC control

The secondary units can view output mapping and canvas arrangements but cannot edit them. Tabs like Calendar and Design are visible but grayed out, with editing functions explicitly disabled. This design prioritizes consistency and central governance over visual layout and synchronization.

Once **Expansion Mode** is enabled, all previously created canvases and profiles in standalone mode will be irreversibly cleared. The same applies when **Expansion Mode** is later disabled—restoration is not possible.

Chain Mode Recovery & Sync Notifications


When chaining devices under **Backup** or **Expansion** mode, the system will monitor device status and link integrity in real time. In the event of disconnection, errors, or topology changes, automatic alerts and role fallback mechanisms are triggered to maintain operational stability.

Primary Disconnection: Temporary Fallback to Secondary

When a chained connection is interrupted or an error occurs—especially if the primary unit becomes disconnected—the system will immediately display a warning. In **Backup Mode**, the Secondary 1 temporarily inherits primary-level control, allowing the user to manage the system until the original Primary reconnects.

The system reacts to disconnection errors and re-synchronization events through Web GUI (for both **Backup** and **Expansion** modes):

- ◆ Pop-up warning messages indicating the mode will no longer function properly.

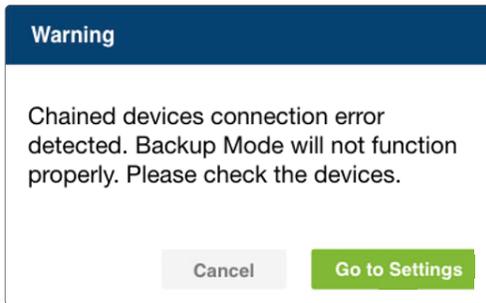

- ◆ A red **Error** status in the Chain Configuration panel.
 - ◆ Primary Web GUI

Chain Status: ● Error (Backup Mode)

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Error
Secondary 1	Name (192.168.1.251)	Disconnected
Secondary 2	--	--

Chain Mode

Backup ▼

Active Disable

Chain Status: ● Error (Expansion Mode)

Order	Device Information	Status
Primary	Name (192.168.1.250)(Current)	Error
Secondary 1	Name (192.168.1.251)	Disconnected
Secondary 2	--	--

Chain Mode

Expansion

Active Disable

- ◆ Secondary Web GUI

Chain Status: ● Error (Backup Mode) [Refresh](#)

Order	Device Information	Status
Primary	Name (192.168.1.250)	Disconnected
Secondary 1	Name (192.168.1.251)(Current)	Error
Secondary 2	--	--

Chain Mode

Backup

Active Disable

Chain Status: ● Error (Expansion Mode) [Refresh](#)

Order	Device Information	Status
Primary	Name (192.168.1.250)	Disconnected
Secondary 1	Name (192.168.1.251)(Current)	Error
Secondary 2	--	--

Chain Mode

Expansion

Active Disable

- ◆ An option to **Disable** the chain mode from either the primary or the secondary Web GUI.


This ensures users are informed of the failure and are able to take corrective action, either by restoring connection or formally exiting chain mode.

Primary Restored: Automatic Re-Sync Notification


Once the primary unit reconnects, the system automatically compares the configuration timestamps across devices. If a discrepancy is detected—such as newer data on the primary unit—an automatic sync process is triggered. A Syncing status appears briefly, followed by a return to **Enable** and **Working** states once synchronization is complete.

During this phase:


- ◆ A warning popup appears notifying the user of a detected change in chained devices.

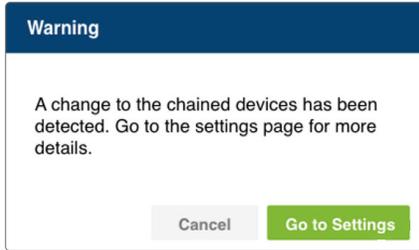

- ◆ Devices will briefly enter Syncing status until alignment is achieved.
 - ◆ Backup Mode

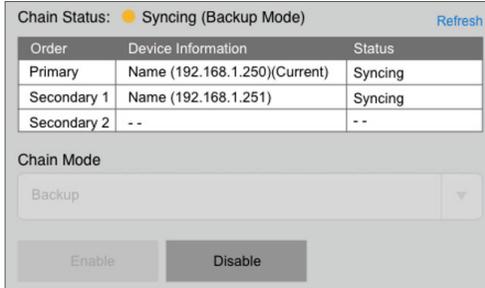

- ◆ Expansion Mode

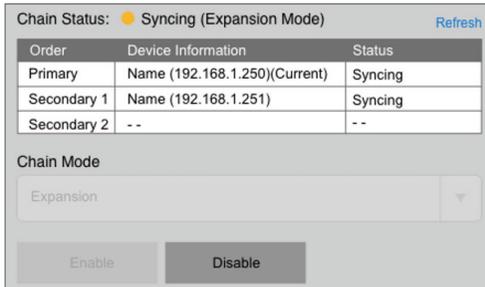

- ◆ No manual intervention is needed unless the sync fails.

This design ensures configuration consistency across devices, and prevents outdated secondary settings from overriding the primary control.

This Page Intentionally Left Blank

Chapter 7

CLI Commands

Overview

The VW3620 can be configured and controlled via RS-232 or Telnet commands when connected to a host computer or other device, such as a control system. This chapter provides information on how to connect to the VW3620 via RS-232/Telnet and command syntax.

Connecting to the Video Wall Processor via Telnet

To establish a Telnet session with the VW3620, do the following:

1. Connect a host computer or control system to a shared network with the VW3620.
2. Open a command-line interpreter program from your computer.
3. In the command-line interpreter, type the VW3620's IP address in the following way:


```
telnet [IP address]:23
```
4. Press **Enter**. The login screen appears.
5. At the login prompt, type the login username and password for the VW3620.
6. When a session is established with the VW3620, you can control and configure the VW3620 via RS-232 commands. For more information on commands, see *Commands*, page 142.

Note: If a user logs in using a username that is already in session, the newest login takes effect and the previous session will be replaced.


Connecting to the Video Wall Processor via RS-232

You can control and operate the VW3620 using a high-end controller or PC. To connect to the VW3620 via RS-232, do the following:

1. Connect the RS-232 serial port on the VW3620 to the RS-232 serial port on your computer using a 9-wire straight cable, with only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 connected.

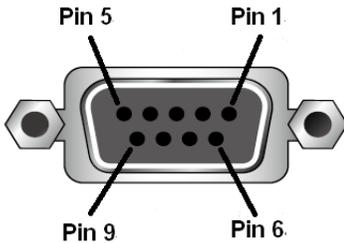

Pin	Description
1	Not connected
2	RxD
3	TxD
4	Not connected
5	GND
6	Not connected
7	Not connected
8	Not connected
9	Not connected

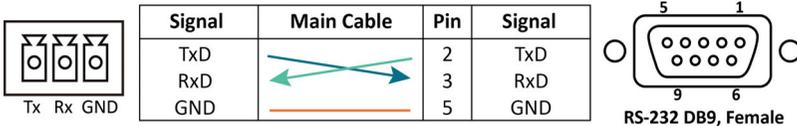

2. The controller’s serial port should be configured as follows:

RS-232 Protocol	
Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

3. When a session is established with the VW3620, you can control and configure the VW3620 via RS-232 commands. For more information on commands, see *Commands*, page 142.

Command Guidelines

- ♦ The general form of a command is:

```
command parameter<argument> {one|two|three}
```

Notation	Description
command	The name of the command is shown in bold.
parameter	Indicates the name of the parameter.
<argument>	Indicates the name of the value or the information that the user must provide. Only type the information in the angle brackets, not the brackets themselves.
[]	Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
{ }	Indicates a set of choices from which the user must choose one.
	Indicates two or more mutually exclusive choices in a command line. Only type one of the choices in the command line, not the symbol.

- ♦ If you have two or more parameters, the order of these parameters among themselves does not affect the result of the operation. For example, both of the following commands execute the same task:

```
command name + parameter 1 + parameter 2
```

```
command name + parameter 2 + parameter 1
```

Verification

After entering a command, a verification message appears at the end of the command line as follows:

- ♦ **Command OK**—indicates that the command is correct and successfully performed by the switch
- ♦ **Command incorrect**—indicates that the command has the wrong format and/or values.

Commands

After connecting to the VW3620 via Telnet or RS-232, you can operate the system using the following commands.

-
- Note:**
- ◆ CLI command of LED mode is the same as Wall mode.
 - ◆ "Window ID" commands can work if zone is defined as Video Wall Mode and LED mode.
 - ◆ "Output ID" commands can work if zone is defined as Independent Mode.
-

Switch Port Command

Switch a specific input video source to a specific output port(s) / window(s) displayed on a designated zone.

The formula for Switch commands are as follows:

- ◆ `sw z<zone ID> o<output ID> i<input ID> [ENTER]`
- ◆ `sw z<zone ID> ow<window ID> i<input ID> [ENTER]`

Parameters:

- ◆ `z<zone ID>`
 - ◆ **Description:** Specify the zone to be displayed
 - ◆ **Format:** a to d
- ◆ `o<output ID>`
 - ◆ **Description:** Specify the output port
 - ◆ **Format:** 1-a to 5-d ; an asterisk * means all the output ports
- ◆ `ow<window ID>`
 - ◆ **Description:** Specify the output window
 - ◆ **Format:** 1 to 144 ; an asterisk * means all the output windows
- ◆ `i<input ID>`
 - ◆ **Description:** Specify the input port of the target source
 - ◆ **Format:** 1-a to fn2-d

Example:

1. To switch input port fn-1a to output port 4-a, and display on zone c, type the following:

```
sw zc o4-a ifn1-a [Enter]
```

2. To switch input port 3-b to all the output windows displayed on zone c, type the following:

```
sw zc ow* i3-b [Enter]
```

3. To switch input port fn2-a to all the output ports, and display one zone b, type the following:

```
sw zb o* ifn2-a [Enter]
```

Load Profile Commands

The Load Profile command allows you to apply one or multiple profiles to the display zones. The formula for Load Profile command is as follows:

- ◆ **profile** f<profile ID> z<zone ID> load [ENTER]

Parameters:

- ◆ f<profile ID>
 - ◆ **Description:** Specify the profile to be applied
 - ◆ **Format:** 1 to 16
- ◆ z<zone ID>
 - ◆ **Description:** Specify the display zone that applies the designated profile
 - ◆ **Format:** 1 to 4

Example:

1. To apply profile 4 to zone 2, type the following:

```
profile f4 z2 load [Enter]
```

EDID Mode Command

Extended Display Identification Data (EDID) is a data that contains a display's basic information and is used to communicate with the video source. The EDID Mode commands allow you to change the EDID setting.

The formula for the EDID command is as follows:

- ◆ `edid port1|default|custom [ENTER]`

Parameters:

- ◆ `port1`
Set all ports' EDID is the same as Port1's EDID.
- ◆ `default`
Set all ports' EDID to be the same as the hardware default EDID.
- ◆ `custom`
Implement the customized mode as set in the EDID system settings.
See *EDID Mode*, page 88, for details.

Example:

1. To use the default mode, type:
`edid default [Enter]`
2. To use Port1 EDID mode, type:
`edid port1 [Enter]`

CEC Command

Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to the same remote control.

The formula for the CEC commands are as follows:

- ◆ **cec** o<output ID> on|off [ENTER]
- ◆ **cec** z<zone ID> on|off [ENTER]

Parameters:

- ◆ o<output ID>
 - ◆ **Description:** Specify the output port
 - ◆ **Format:** 1 to 20
- ◆ z<zone ID>
 - ◆ **Description:** Specify the display zone
 - ◆ **Format:** 1 to 4

Example:

1. To enable / disable the CEC function for a specific output port in independent mode:

```
cec o05 off [Enter]
```

```
cec o09 on [Enter]
```

2. To enable / disable the CEC function for a specific zone in wall / LED mode:

```
cec z02 on [Enter]
```

```
cec z02 off [Enter]
```

Read Command

The Read command allows you to view information about the devices, including the model name, the firmware version, the serial number, and the MAC address. The formula for the Read command is as follows:

◆ **read** [Enter]

Example:

1. To view information of the VW3620, type:

```
read [Enter]
```

Reset Command

The Reset command allows you to reset the VW3620 back to the default factory settings. Reset includes resetting the devices IP address.

The formula for the Reset command is as follows:

◆ **reset** [Enter]

Example:

1. To reset the VW3620, type:

```
reset [Enter]
```

Reboot Command

The Reboot command allows you to turn off the VW3620 and then start it again immediately. The formula for the Reset command is as follows:

◆ **reboot** [Enter]

Example:

1. To reboot the VW3620, type:

```
reboot [Enter]
```

Baud Rate Command

The Baud Rate command allows you to set the RS-232 data rate for the VW3620 to use. Options are 9600, 19200 (default) 38400 and 115200.

The formula for the Baud Rate command is as follows:

```
baud 9600|19200|38400|115200 [Enter]
```

Parameters:

- ◆ 9600
- ◆ 19200
- ◆ 38400
- ◆ 115200

Example:

1. To set 38400 as the baud rate, type:

```
baud 38400 [Enter]
```

Echo Command

The Echo function updates the RS232 controller when operations are made via the front panel pushbuttons, web browser or telnet. The changes echo back to the RS232 controller to keep the settings in sync with the device.

The formula for the Echo command is as follows:

```
echo on|off [Enter]
```

Parameters:

- ◆ on
Enable the echo feature.
- ◆ off
Disable the echo feature.

Example:

1. For example, to enable the echo feature, type:

```
echo on [Enter]
```

Fan Speed Command

The Fan Speed command allows you to set the VW3620's internal fan speed.

To set the fan speed, use the following command:

- ◆ **fan** mid|high|auto [Enter]

Parameters:

- ◆ mid
Set internal fan to normal speed.
- ◆ high
Set internal fan to high speed.
- ◆ auto
Set internal fan to auto detect (default).

Example:

1. To set the fan to auto detect, type:

```
fan auto [Enter]
```

Alert Command

To trigger a warning when issues arise for a specific window, use the following command:

- ◆ **alert** z<zone ID> w<window ID> on|off [Enter]

Parameters:

- ◆ z<zone ID>
 - ◆ **Description:** Specify the display zone
 - ◆ **Format:** 1 to 4
- ◆ w<window ID>
 - ◆ **Description:** Specify the output window
 - ◆ **Format:** 1 to 144 ; an asterisk * means all the output windows
- ◆ on
Enable the alert feature.
- ◆ off
Disable the alert feature.

Example:

1. To enable the Alert function for window 5 on zone 1, type:
`alert z1 w5 on`
2. To disable the Alert function for window 3 on zone 2, type:
`alert z2 w3 off`

Standby Mode Command

Standby mode is a power-saving mode that shuts parts of the system down to allow the user to quickly resume operation when needed.

The formula for the standby mode command is as follows:

- ◆ **standby** on|off [Enter]

Parameters:

- ◆ on
Turn on the standby mode.
- ◆ off
Turn off the standby mode.

Example:

1. To enable standby mode, type the following:

```
standby on [Enter]
```

Safety Instructions

General

- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ This product is for indoor use only.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

- ◆ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ◆ The power cord or plug has become damaged or frayed.
 - ◆ Liquid has been spilled into the device.
 - ◆ The device has been exposed to rain or water.
 - ◆ The device has been dropped, or the cabinet has been damaged.
 - ◆ The device exhibits a distinct change in performance, indicating a need for service.
 - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- ◆ Avoid circuit overloads. Before connecting equipment to a circuit, know the power supply's limit and never exceed it. Always review the electrical specifications of a circuit to ensure that you are not creating a dangerous condition or that one does not already exist. Circuit overloads can cause a fire and destroy equipment.

Rack Mounting

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ◆ Do not step on or stand on any device when servicing other devices in a rack.

Technical Support

International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://eservice.aten.com>
- ◆ For telephone support, see *Telephone Support*, page iv:

North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase.
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ◆ Any error messages displayed at the time the error occurred.
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help.

Specifications

VW3620

Input and Output Boards	
Board Input	7 × Slot, up to 32 4K inputs
Board Output	5 × Slot, up to 20 4K outputs
Function	2 × Slots for Function Board, can also used as Input Slot
Video Input	
Interfaces	Depends on which I/O board is inserted
Video Output	
Interfaces	Local Output: 1 × HDMI Type A Female (Black)
Control	
RS-232	Connector: 1 × DB-9 Female (Black) Serial Control Pin Configurations: Pin2 = Tx, Pin 3=Rx, Pin 5= Gnd Baud Rate and Protocol: Baud Rate: 19200 (default), Data Bits: 8, Stop Bits: 1, Parity: No, Flow Control: No
Ethernet	Connector: 1 × RJ-45 Female
USB	3 × Keyboard (TBD) / Mouse (TBD) / FW upgrade & Storage
EDID Settings	
EDID Mode	Default / Port1 / Customized (EDID Wizard support)
Communication	
Daisy Chain Ports	RJ-45 × 2
Connectors	
Power	1 × 3-Prong AC Socket
Power	
Maximum Input Power Rating	100–240 VAC; 50–60Hz; 10A

Consumption	AC110V, 573.4W, 2720BTU/h AC220V, 555.4V, 2636BTU/h Note: <ul style="list-style-type: none">◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.
Optional	Redundancy, Optional Hot Swap PSU
Environmental	
Operating Temperature	0–40°C
Storage Temperature	-20–60°C
Humidity	0–80% RH, Non-condensing
Physical Properties	
Housing	Metal
Weight	16.21 kg (35.7 lb)
Dimensions (L x W x H)	48.20 × 45.80 × 30.98 cm (18.98 x 18.03 x 12.2 in.)
Rack Height (U Space)	7U

VW784 / VW884

	VW784	VW884
Video Input		
Interfaces	4 × HDMI Type A Female (Black)	N/A
Impedance	100 Ω	N/A
Max. Distance	Up to 5m	N/A
Video Output		
Interfaces	N/A	4 × HDMI Type A Female (Black)
Impedance	N/A	100 Ω
Max. Distance	N/A	Up to 5m
Video		
Max. Data Rate	10.2 Gbps (3.4 Gbps Per Lane)	18.0 Gbps (6.0 Gbps Per Lane)
Max. Pixel Clock	340 MHz	600 MHz
Compliance	HDMI (3D, Deep Color, 4K) HDCP 2.2 Compatible Consumer Electronics Control (CEC)	
Max. Resolution	4096 × 2160 / 3840 × 2160 @30Hz (4:4:4)	4096 × 2160 / 3840 × 2160 @60Hz (4:4:4)
Power Consumption	17.71W; 83BTU/h	54.72W; 257BTU/h
	Note: <ul style="list-style-type: none"> ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading. ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded. 	
Environmental		
Operating Temperature	0–40°C	
Storage Temperature	-20–60°C	
Humidity	0–80% RH, Non-Condensing	
Physical Properties		
Housing	Metal	
Weight	0.73 kg (1.61 lb)	0.92 kg (2.03 lb)
Dimensions (L x W x H)	19.3 × 27.1 × 27.4 cm (7.6 × 10.67 × 10.79 in.)	19.3 × 27.1 × 27.4 cm (7.6 × 10.67 × 10.79 in.)

ATEN Warranty Policy

The warranty policy may vary by product category and region of purchase. For details, please visit ATEN's official website, select your purchase counties/regions and then go to the Support Center, or contact your local ATEN sales representative for further assistance.

© Copyright 2025 ATEN® International Co., Ltd.
Released: 2025-06-12

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.