

Front-L Bracket / Extension Kit Installation Guide

The Front-L Bracket / Extension Kit is applicable to the following LCD KVM Switches: CL3800 / CL3884NW / CL5800 / CL5808-CL5816 / KL1108V-KL1116V / KL1508A-KL1516A / KL1508Ai-KL1516Ai.


Installation

To have a comfortable and safe posture, install the Front-L brackets to provide an extension at the front of the rack, allowing the unit to slide further out and the LCD screen to tilt more.


Note: A CL3884NW 4-Port USB HDMI Multi-View Dual Rail WideScreen LCD KVM Switch is used as an example to illustrate the procedure.

1. Attach the left and right Front-L Brackets to the front of the rack, placing screws in the tabs to secure them in place.

Note: Rack screws are not provided to mount the unit. We recommend that you use two M5 x P0.8 screws on each side.

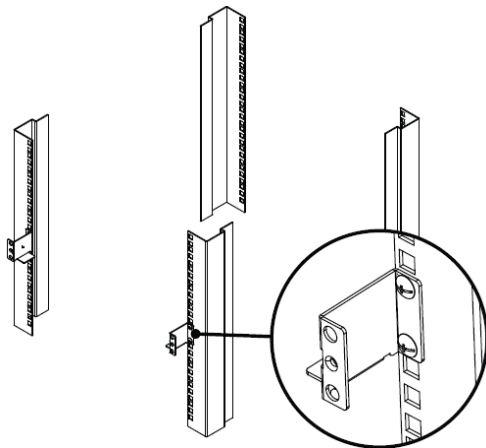


2. Attach the left and right L-shaped brackets to the back of the rack, installing four screws in the brackets to secure them in place.

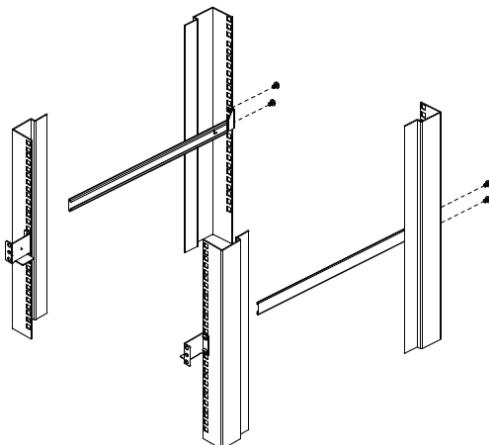

3. While one person inserts the unit into place by sliding its left and right side bars into the left and right L-shaped brackets (on the rack), have the second person screw the front brackets to the Front-L brackets.

Note: Rack screws are not provided to mount the unit. We recommend that you use one M5 X P0.8 screw on each side.

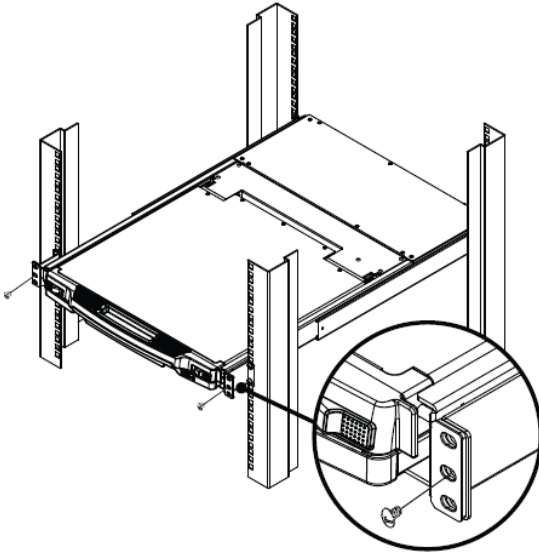

4. After the L-shaped brackets are secured, tighten all the screws. Allow at least 5.1 cm on each side for proper ventilation, and at least 12.7 cm at the back for the power cord and cable clearance.