

# VM-PWR550

## Power Module for VW1608/VM1600A

### Installation Guide




MISC10000078 12/2025 V1.0

### Package Contents

Qty	Description
1	VM-PWR550 Power Module for VW1608/VM1600A
1	cable strap
1	user instructions

### Hardware Overview

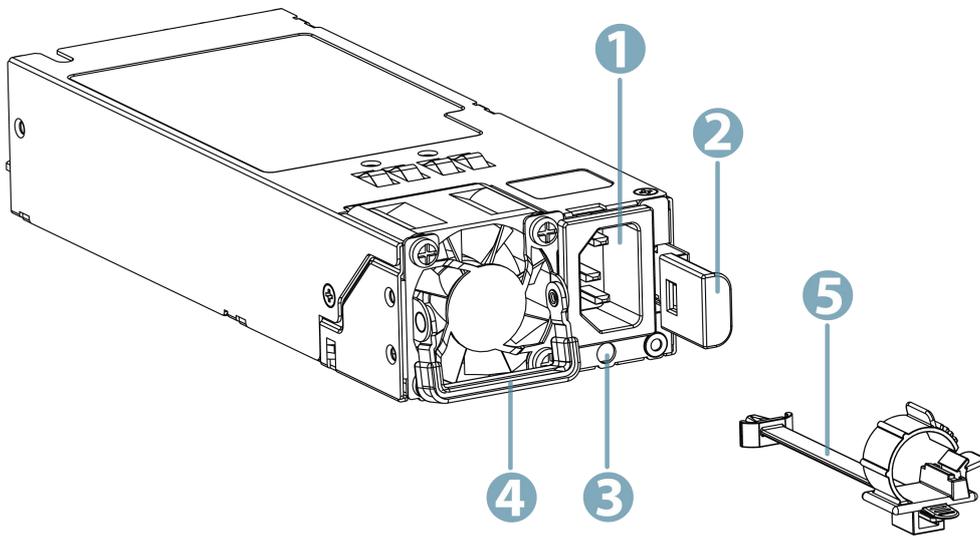


- 1. 3-prong socket
- 2. power module release lever
- 3. strap mounting hole
- 4. power module handle
- 5. cable strap

### Installing the Power Module


**Note:** Illustrations are shown using the VW1608 as an example. The installation procedure applies to all ATEN models that are compatible with this power module.

1. Attach the cable strap to the power module by inserting it into the strap mounting hole.

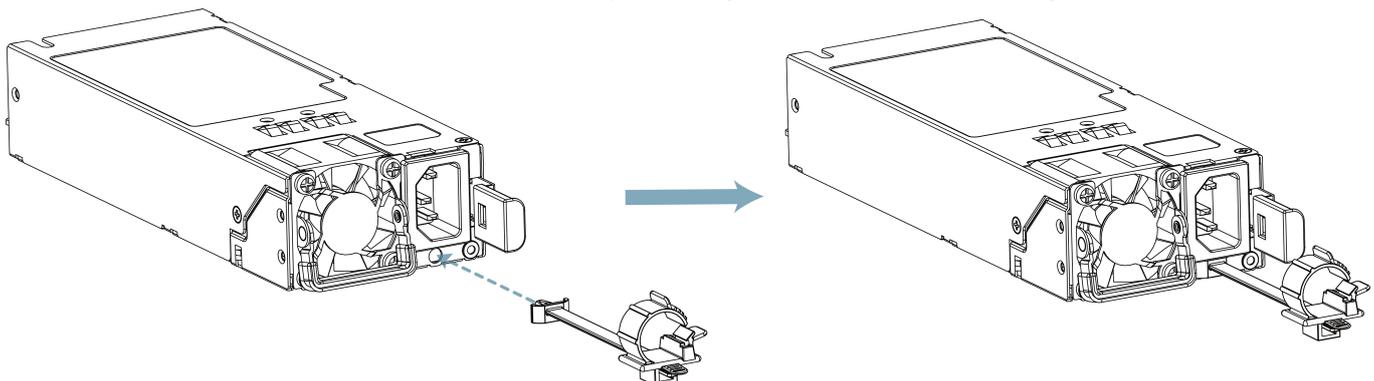

2. Install the power module to one of the following locations.

- Primary power slot
- Redundant power slot

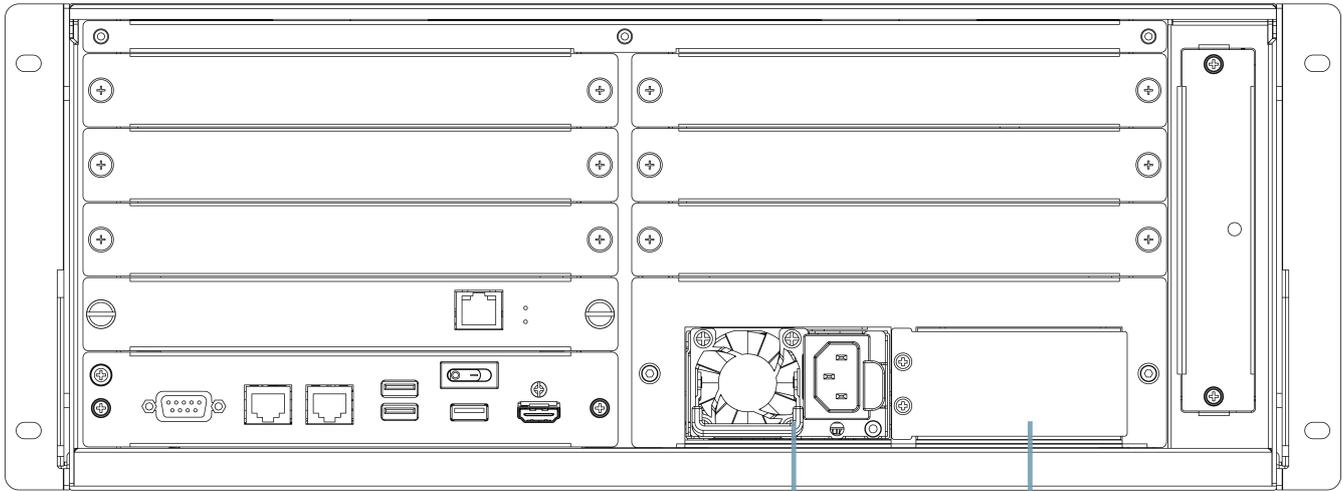


**VW1608 Rear View**


primary  
power slot

redundant  
power slot



3. Slide the power module into the selected power slot in the orientation shown. A click sound is made once the power module is properly installed.

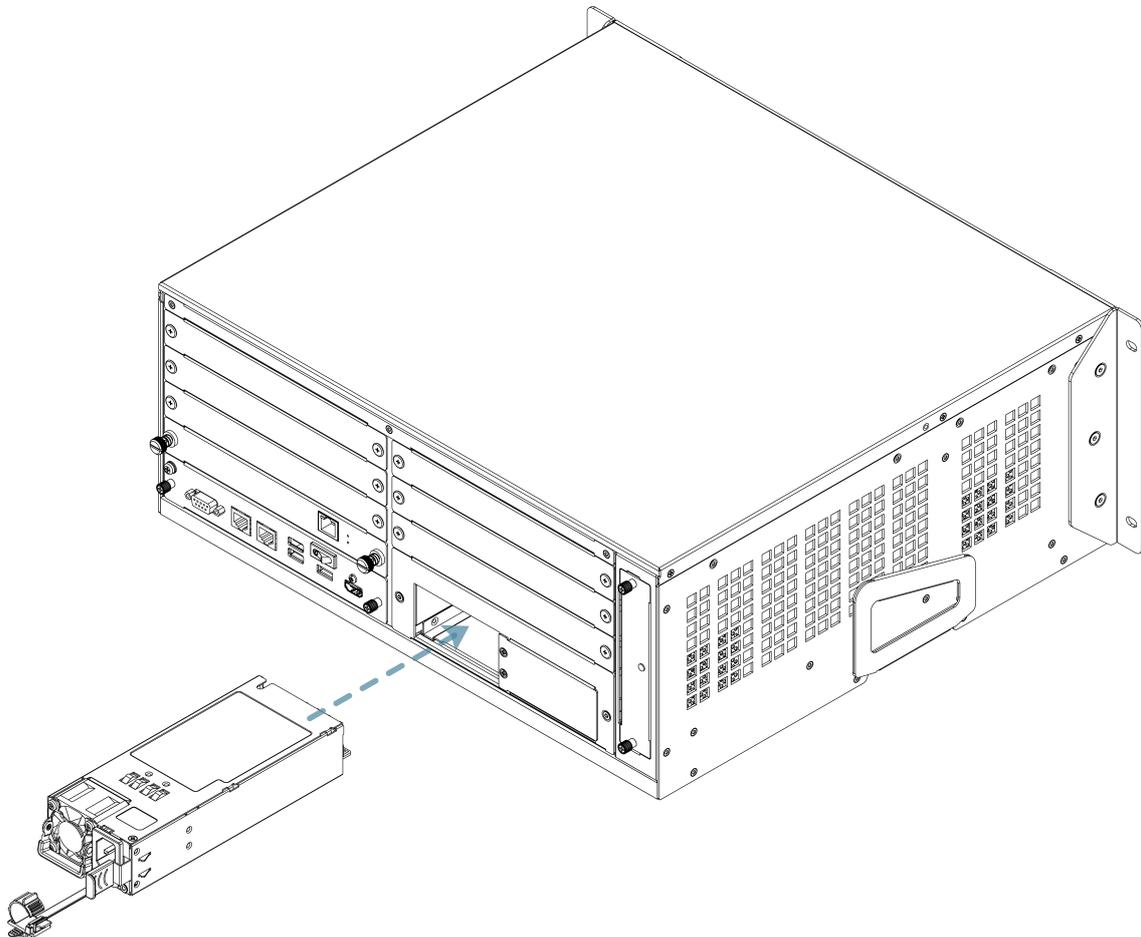

4. Plug the power cord into the 3-prong socket of the power module.

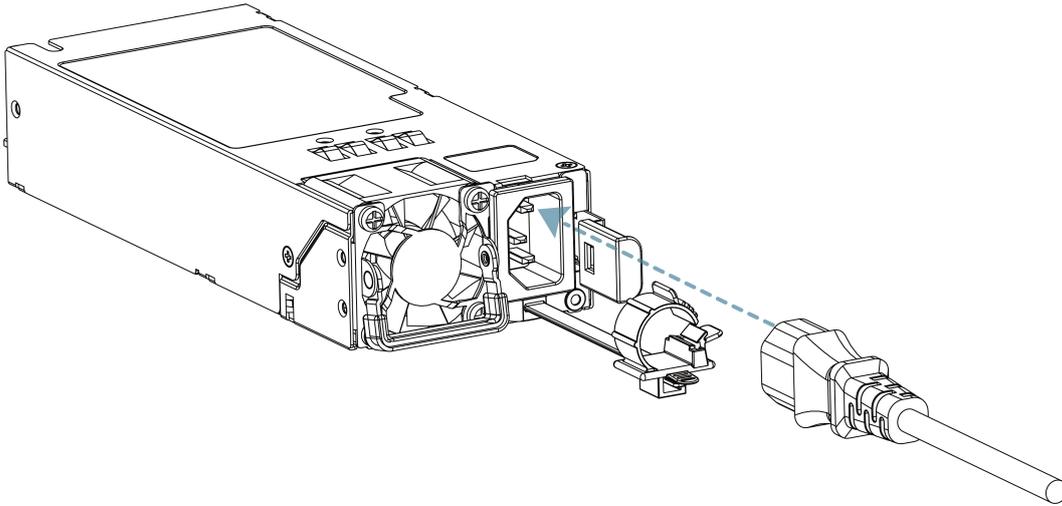

5. Secure the power cord by moving the buckle to the strain relief side of the power cord.

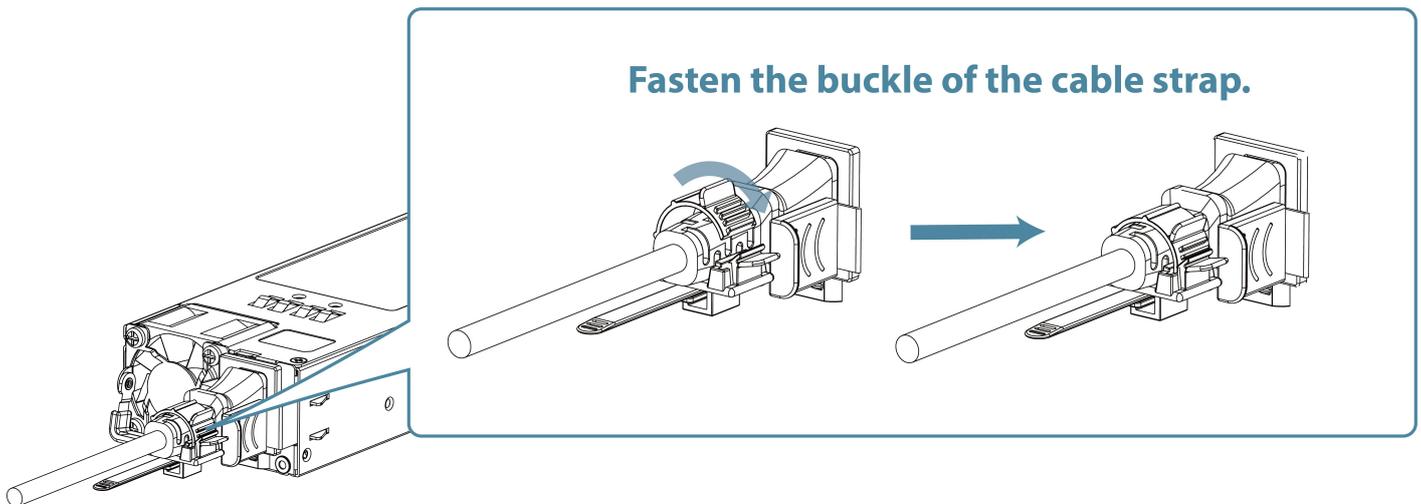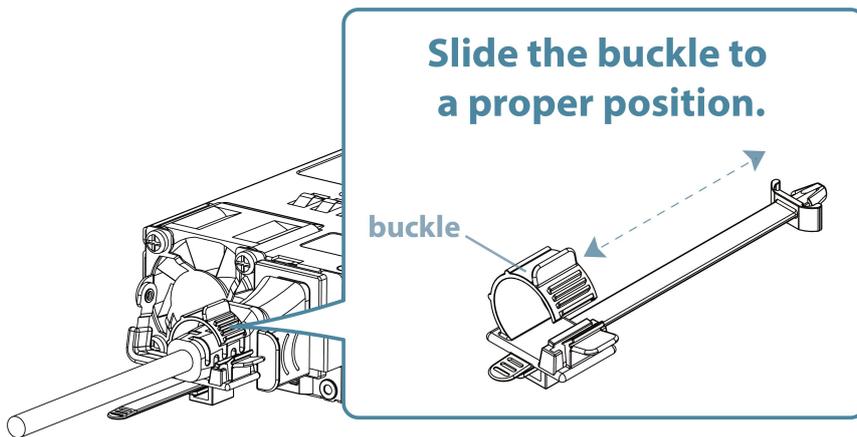

## Adjusting the Cable Strap

1. To loosen the buckle of the cable strap, press the buckle detach lever to unlock the buckle.
2. To adjust the position of the buckle, push down on the locking-release lever and move the buckle forward or backward to your preferred position.

