



Simply Better Connections

## VS1912

12-Port DP Video Wall Media Player  
User Manual

## FCC Information

---

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**CE Warning:** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



### KCC Statement

유선 제품용 / A급 기기 (업무용 방송 통신 기기) 이 기기는 업무용 (A급) 전자파적합기기로서 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.



**Trademark Notice:** The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## RoHS

This product is RoHS compliant.

## Safety

This product has been classified as Information Technology Equipment.

## SJ/T 11364-2006

The following contains information that relates to China.

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电器部件	●	○	○	○	○	○
机构部件	○	○	○	○	○	○

- : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
- : 表示符合欧盟的豁免条款, 但该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。
- ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。

## **User Information**

---

### **Online Registration**

Be sure to register your product at our online support center:

---

International	<a href="http://eservice.aten.com">http://eservice.aten.com</a>
---------------	---

---

### **Telephone Support**

For telephone support, call this number:

---

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8-4481-58923

---

### **User Notice**

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

## Package Contents

---

The VS1912 12-Port DP Video Wall Media Player package consists of:

- ◆ 1 VS1912 12-Port DP Video Wall Media Player
- ◆ 12 DisplayPort to DVI Adapters
- ◆ 1 Power Cord
- ◆ 1 Mounting Kit
- ◆ 1 User Instructions\*

Check to make sure that all the components are present and that nothing got damaged in shipping. If you encounter a problem, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit, and/or any of the devices connected to it.

---

\* Features may have been added to the VS1912 since this manual was printed. Please visit our website to download the most up-to-date version.

---

# Contents

---

FCC Information . . . . .	ii
RoHS . . . . .	ii
Safety . . . . .	iii
SJ/T 11364-2006 . . . . .	iii
User Information . . . . .	iv
Online Registration . . . . .	iv
Telephone Support . . . . .	iv
User Notice . . . . .	iv
Package Contents . . . . .	v
Contents . . . . .	vi
About this Manual . . . . .	ix
Conventions . . . . .	x
Product Information . . . . .	x

## **Chapter 1.**

### **Introduction**

Overview . . . . .	1
Features . . . . .	2
Requirements . . . . .	3
Source Device . . . . .	3
Receiving Device . . . . .	3
Cables . . . . .	3
Components . . . . .	4
Front View . . . . .	4
Rear View . . . . .	5

## **Chapter 2.**

### **Hardware Setup**

Installation . . . . .	7
------------------------	---

## **Chapter 3.**

### **Basic Operation**

Overview . . . . .	9
Logging in . . . . .	9

## **Chapter 4.**

### **Browser Operation**

Overview . . . . .	11
Logging in . . . . .	11
Main Page . . . . .	13
Menu Bar . . . . .	13
Profile . . . . .	14
Creating a Profile . . . . .	14
Opening a Profile . . . . .	18
Deleting a Profile . . . . .	19

Scheduling . . . . .	21
Calendar . . . . .	21
Adding Profiles to a Calendar . . . . .	22
Editing Profiles in a Calendar . . . . .	23
Saving a Calendar . . . . .	25
Clearing a Calendar . . . . .	25
Export Calendar . . . . .	25
Importing Profile and Calendar Information . . . . .	25
Overview . . . . .	26
General . . . . .	26
Layout . . . . .	28
Standard Mode . . . . .	28
Asymmetrical Mode . . . . .	29
Logs . . . . .	31
Exporting System Logs . . . . .	31
Configuration . . . . .	32
Power . . . . .	32
Playback . . . . .	33
License . . . . .	35
Server Information . . . . .	35
Account . . . . .	35
Network . . . . .	36
Date/Time . . . . .	37
Logs . . . . .	37
Firmware . . . . .	38

## **Chapter 5.**

### **RS-232 Commands**

Overview . . . . .	39
RS-232 Serial Interface . . . . .	39
Configuring the Serial Port . . . . .	39

## **Appendix**

Safety Instructions . . . . .	41
General . . . . .	41
Technical Support . . . . .	43
International . . . . .	43
North America . . . . .	43
Supported Display Layouts . . . . .	44
Orientation . . . . .	44
Rotation . . . . .	44
Supported File Types . . . . .	45
Playback Limitations . . . . .	46
Audio . . . . .	46
Video . . . . .	47
Web Widget . . . . .	47
Specifications . . . . .	48

Limited Warranty . . . . . 50

## About this Manual

---

This User Manual is provided to help you get the most from your VS1912 system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

**Chapter 1, Introduction**, introduces you to the VS1912 system. Its purpose, features and benefits are presented, and its front and back panel components are described.

**Chapter 2, Hardware Setup**, describes how to set up your VS1912 installation as well as install an RS-232 serial interface controller. The necessary steps are provided.

**Chapter 3, Basic Operation**, explains the fundamental concepts involved in operating the VS1912 through logging into the web Graphical User Interface (GUI).

**Chapter 4, Browser Operation**, provides a complete description of the VS1912's web Graphical User Interface (GUI), and how to use it to remotely configure and operate the VS1912.


**Chapter 5, RS-232 Commands**, provides a complete list of the serial control protocol commands used when utilizing the RS-232 Serial Port.

**An Appendix**, provides specifications and other technical information regarding the VS1912.

## Conventions

---

This manual uses the following conventions:

- Monospaced      Indicates text that you should key in.
- [ ]                Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
1.                 Numbered lists represent procedures with sequential steps.
- ◆                 Bullet lists provide information, but do not involve sequential steps.
- Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the *Start* menu, and then select *Run*.
-                 Indicates critical information.

## Product Information

---

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	<a href="http://www.aten.com">http://www.aten.com</a>
North America	<a href="http://www.aten-usa.com">http://www.aten-usa.com</a>

# Chapter 1

## Introduction

### Overview

---

The VS1912 12-Port DP Video Wall Media Player is a PC-based media player which provides an ideal solution for multi-display applications such as digital signage, video walls, projection screens and digital board installations.

The VS1912 supports video wall configurations with up to 12 displays and allows you to design creative video walls in various asymmetric layouts. Custom widgets allow you to add banners, video playback, flash media, images and real-time clock displays over the screens. The Superimpose feature allows the freedom to overlap content anywhere on the screens and across the video wall to create a beautiful custom collage.

Multimedia files are uploaded and the system is set up from a computer connected across a network. With a built-in web interface and intuitive GUI (Graphical User Interface), access and configuration is simple and does not require extra software. The VS1912 also features a scheduling function that helps you arrange detailed playlists - days, weeks or even months at a time.

In addition, the VS1912 is equipped with two bi-directional RS-232 serial ports for high-end system control\*, an HDMI input port for routing an additional HDMI source and USB 3.0 & USB 2.0 ports for importing profile settings and schedules that can be shared among multiple devices. Together with these features, the VS1912 has the flexibility to meet the needs of various environments, including trade shows, lobbies, conference halls, shopping malls and any other public space requiring video displays.

---

**Note:** RS-232 functionality is pending and will be available with future firmware upgrades.

---

## Features

---

- ◆ Supports DisplayPort – an advanced video interface for the clear video display
- ◆ Lockable connectors for the DisplayPort ports
- ◆ Single system for Digital Signage / Video Wall displays
- ◆ Video Wall feature provides profiles that you can customize into various layouts using a web GUI
- ◆ Supports Asymmetric Video Wall applications
- ◆ Small form factor: 1U
- ◆ Flexible scheduling for different profiles
- ◆ Widgets available: Video / Images / Flash / Webpage / Text / Banner / Clock / RSS / RTSP Streaming / Video Capture in
- ◆ Multiple Control Methods – system management via RS-232 (serial control) and Ethernet (Web GUI) connections
- ◆ HDMI Capture input
- ◆ Built-in USB 3.0 & USB 2.0 ports for Web-Camera applications and profile uploads
- ◆ Built-in bi-directional RS-232 serial port for high-end system control
- ◆ Superior video quality – from 640 x 480 to HDTV resolutions of 480p, 720p, 1080i and 1080p (1920 x 1080)
- ◆ ESD protection for DisplayPort ports
- ◆ Firmware Upgradeable
- ◆ Rack Mountable

## Requirements

---

The following equipment is required for a complete VS1912 installation:

### **Source Device**

Multimedia played by the VS1912 originates from two possible sources:

- ◆ Media files copied to the VS1912's internal storage (see page 15 for details).
- ◆ A media device connected to the VS1912's HDMI input port (see page 17 for details).

### **Receiving Device**

- ◆ A local display device with a DisplayPort or DVI input connector

### **Cables**

- ◆ Standard HDMI cables for the source device (optional)
- ◆ Standard DisplayPort cables for the local display device
- ◆ An Ethernet cable for connecting the VS1912 to a computer


---

**Note:** 1. No cables are included in this package. We strongly recommend that you purchase high-quality cables of appropriate lengths since this will affect the quality of the audio and video display. Contact your dealer to purchase the correct cable sets.

2. The included DisplayPort/DVI adapters are required when connecting to a DVI display device.
  3. If you wish to utilize the VS1912's high-end serial controller function, you will also need to purchase an appropriate RS-232 cable.
-


## Components

### Front View

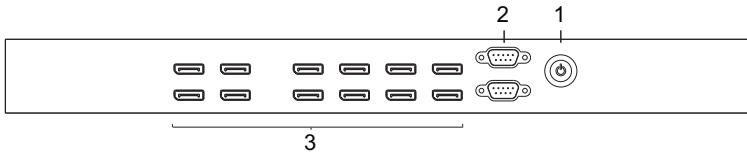

No.	Component	Description
1	Power Button	Press this button to turn the VS1912 on / off.
2	Bi-directional Serial ports	Connect a computer or high-end system controller via these serial ports.
3	DisplayPort Output ports	The cables from the DisplayPort display devices plug into these ports.

## Rear View

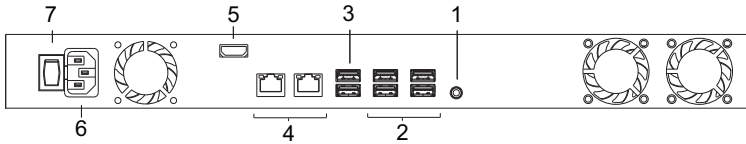

No.	Component	Function
1	Audio Output port	The cable that connects to the audio input port on speakers plugs in here.
2	USB 2.0 ports	These ports are used for importing playback schedules from USB drives.
3	USB 3.0 ports	These ports are used for importing playback schedules from USB drives.
4	LAN ports	In order to upload media and access the VS1912's Browser Graphical User Interface (GUI), the VS1912 must be connected to a computer or network. The cable that connects the VS1912 to the LAN plugs in here. See <i>Installation</i> , page 7, for further details. DHCP (left), static IP (right).
5	HDMI Input port	The cable from the HDMI source device plugs in here.
6	Power Socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
7	Power Switch	This is a standard rocker switch that powers the unit on and off.

This Page Intentionally Left Blank

# Chapter 2

## Hardware Setup



1. Important safety information regarding the placement of this device is provided on page 41. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off.
3. Make sure that all devices you will be installing are properly grounded.

### Installation

---

Refer to the installation diagram on the following page (the numbers in the diagram correspond to the numbers of the steps) and do the following:

1. Connect a computer to one of the VS1912's two Ethernet ports for configuring settings and uploading media files to the VS1912's internal storage.
  - ◆ To begin the initial setup, it's recommended that you connect the computer directly to the VS1912's static (right) LAN port for a immediate access.
  - ◆ The computer can be disconnected once the setup and file transfer are complete.
  - ◆ For more information, please see *Logging in*, page 9.

---

**Note:** The left LAN port makes use of DHCP while the right uses a static IP address (192.168.100.1) and netmask (255.255.255.0).


---

2. Connect up to 12 DisplayPort display devices directly to any of the **DisplayPorts** on the front of the VS1912.
3. (Optional) Connect speakers to the **Audio** output port.
4. (Optional) If you are using the serial control function, use an appropriate RS-232 serial cable to connect the computer or serial controller to the VS1912's bi-directional **RS-232** Serial ports. The end connecting to the

VS1912 should have a 9-pin male connector. See *RS-232 Commands*, page 39, for further details.

5. (Optional) Connect a USB drive to any of the **USB** ports for importing playback schedules.
6. (Optional) Connect an HDMI video source to the **HDMI** input port.
7. Plug the power cord supplied with the package into the VS1912's **3-prong AC socket**, and then connect this to an AC power source.
8. Turn on access to the power source.
9. First power on all display devices in the installation.
10. Then power on the VS1912 and all other devices in the installation.

### Installation Diagram

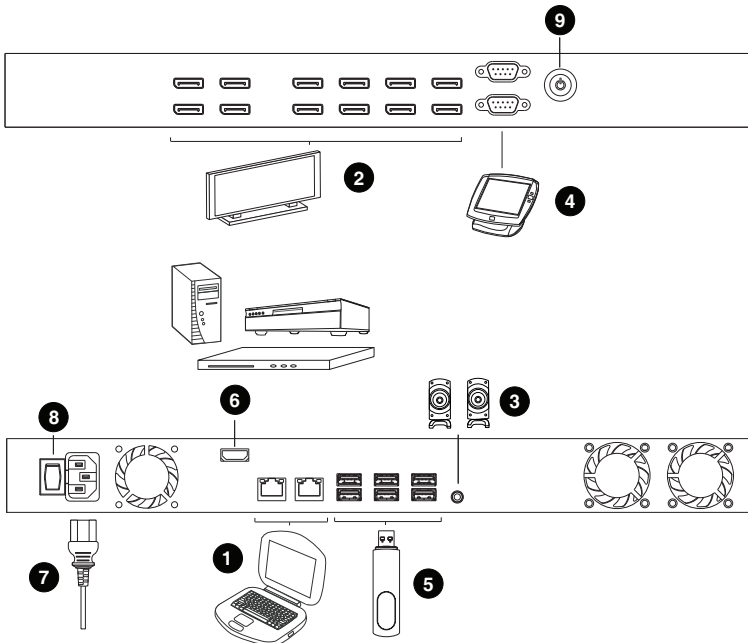

# Chapter 3

## Basic Operation

### Overview

---

The VS1912 can be configured over a standard TCP/IP connection via its graphical user interface (GUI) using a web browser, or via a RS-232 serial controller. Media for playback can also be transferred to the VS1912's internal storage via a TCP/IP connection.

### Logging in

---

To access the Browser GUI:


1. Connect the VS1912 directly to your computer or to the network your computer is connected to (see page 7 for details).
2. Type the VS1912's IP address into the address bar of a web browser.
  - ◆ The VS1912's static (right) LAN port's default IP address is 192.168.100.1. To access it from a computer, ensure that the computer's IP address is 192.168.100.x (2 - 255) and that it shares the same network mask (255.255.255.0).
  - ◆ If making use of the left LAN (DHCP) port, power on the VS1912 and confirm its IP via a connected display.

---

**Note:** 1. For best functionality, please use Google Chrome.

2. If a Security Alert dialog box appears, accept the certificate – it can be trusted.
- 

3. The welcome screen appears.
  - ◆ The default Username and Password are: **admin / admin**

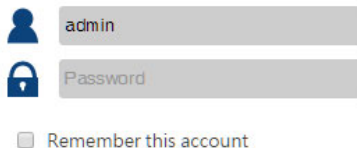

The image shows a login interface with a blue user icon on the left. To its right is a grey text input field containing the text 'admin'. Below this is a blue lock icon, followed by another grey text input field containing the text 'Password'. At the bottom, there is a checkbox with the text 'Remember this account' next to it.

This Page Intentionally Left Blank

# Chapter 4

## Browser Operation


### Overview

---

The VS1912 can be configured over a standard TCP/IP connection via its built-in Graphical User Interface (GUI). Because it can be accessed from anywhere over a network or the Internet, operators can easily log in via web browser. Security is ensured by password protection and a user-configurable time-out.

### Logging in

To access the GUI, type the VS1912's IP address into the address bar of the Google Chrome web browser. If a Security Alert dialog box appears, accept the certificate – it can be trusted. The login screen appears:

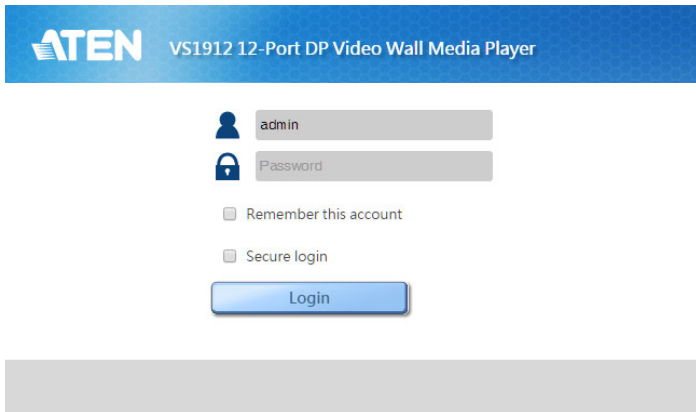

The screenshot shows the login interface for the ATEN VS1912 12-Port DP Video Wall Media Player. At the top, there is a blue header with the ATEN logo on the left and the text 'VS1912 12-Port DP Video Wall Media Player' on the right. Below the header, there are two input fields: the first is labeled 'admin' and the second is labeled 'Password'. Below these fields are two checkboxes: 'Remember this account' and 'Secure login'. At the bottom of the form is a blue 'Login' button. Below the form is a large grey rectangular area, likely representing a blurred screenshot of the device's display.

- ◆ The fixed IP address is **http://192.168.100.1**
- ◆ The default Username and Password are: **admin / admin**
- ◆ Enter the username and password, then click **Login**.
- ◆ Use the drop-down menu to select the GUI language.

---

**Note:** 1. The username supports lower case letters only.

2. The same account cannot simultaneously log in from different computers.

---

If a user attempts to log in using a web browser besides Google Chrome, they will be presented with the following warning message.:

ATEN VS1912 12-Port DP Video Wall Media Player

admin

Password

Remember Me

Secure Login

Login

Google Chrome is recommended to enable full functionality of web management console


---

**Note:** When first using the VS1912, please start by setting the *Layout* (see page 28).

---


## Main Page

This is where you access the various features and settings of the VS1912. The page is divided into three parts: *Profile*, *Scheduling* and *Overview*.

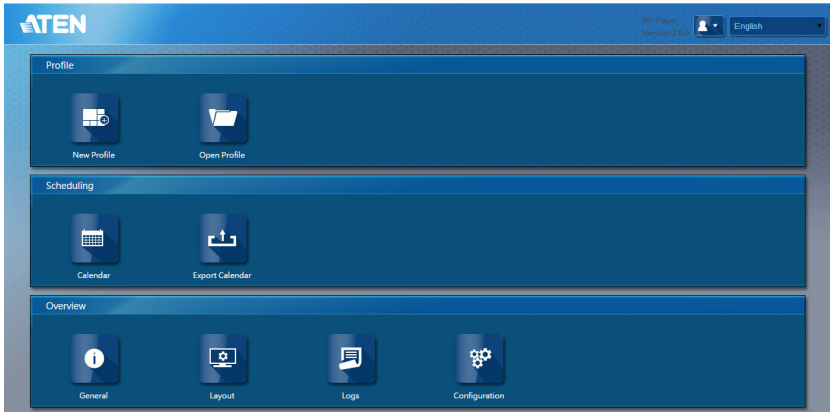

## Menu Bar

The Menu Bar consists of two drop-down menus.




- ◆ **User** – click to access the log out button.
- ◆ **Language Menu** – click to select the language for the user interface.
  - ◆ Options include: English, German, Spanish, Traditional Chinese, Simplified Chinese, Japanese and Korean.

## Profile

---


The *Profile* options allow you to set the video output via creating customized profiles. Before creating or playing a Profile, ensure that the displays' Layout has been correctly set up (see page 28). To play a Profile, see *Playback*, page 33.

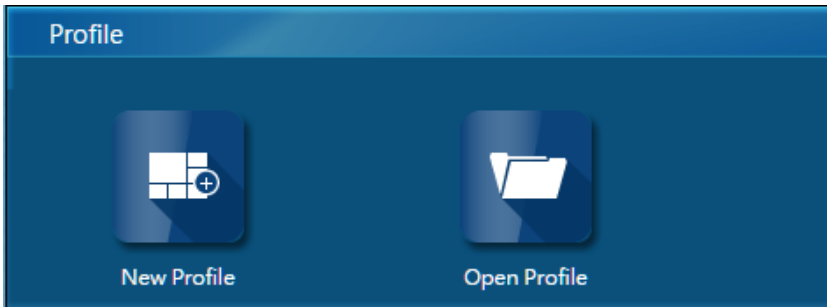

### Creating a Profile

To configure a new profile:

1. From Profile, click on the **[New Profile]** icon.
2. You will be presented with your display layout as a blank canvas:

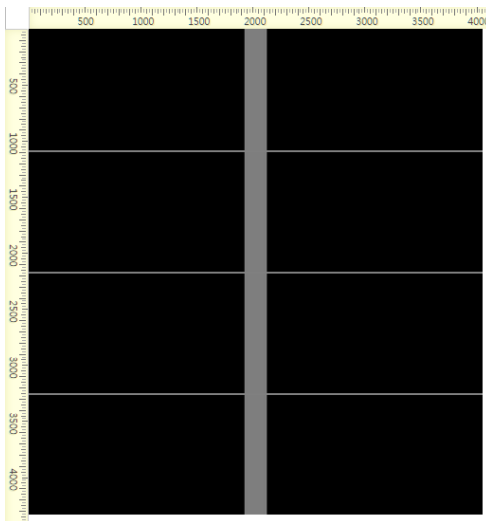

---


**Note:** To edit your display layout, please see *Layout*, page 28.

---

- To upload media files to the VS1912, click on the Upload button and select the desired files from the computer attached to the VS1912. For a list of supported file types, see page 44.




- Drag and drop media from the VS1912's internal storage onto the blank canvas.

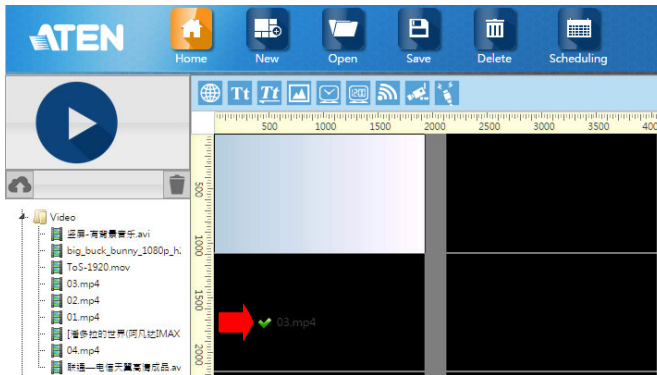


**Note:** 1. If you mouseover media files stored on the VS1912 (visible in the tree menu on the left), their thumbnails will appear in the top left-hand corner of the Profile screen.

2. For file playback limitations, see page 46.


- Added media files can then be:
  - ◆ Resized

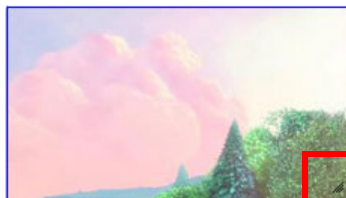



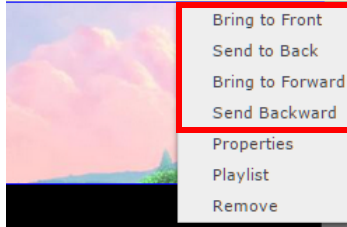


- ◆ Ordered (right-click on the media thumbnail on the canvas)

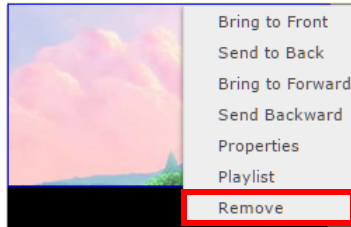





- ◆ Removed (right-click on the media thumbnail on the canvas)




6. Use the **Widget Bar** to drag and drop widgets into the profile.

Option	Description
	Use the <b>Web Widget</b> to include Internet content in the profile. For Web Widget limitation information, see page 47.
	Use the <b>Text Widget</b> to include text in the profile.
	Use the <b>Text Banner Widget</b> to include scrolling text in the profile.
	Use the <b>Image Banner Widget</b> to include a static (if only one) or scrolling (if multiple) images in the profile.
	Use the <b>Analog Clock Widget</b> to include a analog clock in the profile.

Option	Description
	Use the <b>Digital Clock Widget</b> to include a digital clock in the profile.
	Use the <b>RSS Widget</b> to include an RSS feed in the profile.
	Use the <b>Streaming Widget</b> to include streaming media in the profile.
	Use the <b>Capture In Widget</b> to play media from the HDMI input.

**Note:** To customize each widget, once it has been included in your profile, right-click on the widget and select **Properties**.

- To save the profile, click on **Save** in the menu bar. Saving a profile will automatically publish it (see *Playback*, page 33, for player controls).

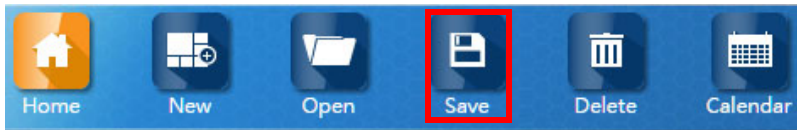


- To preview the current Profile, see Start Live View, *Playback*, page 33.

## **Opening a Profile**

To open an existing profile:

1. From Profile, click on the **[Open Profile]** icon.
2. Select a profile from those available.

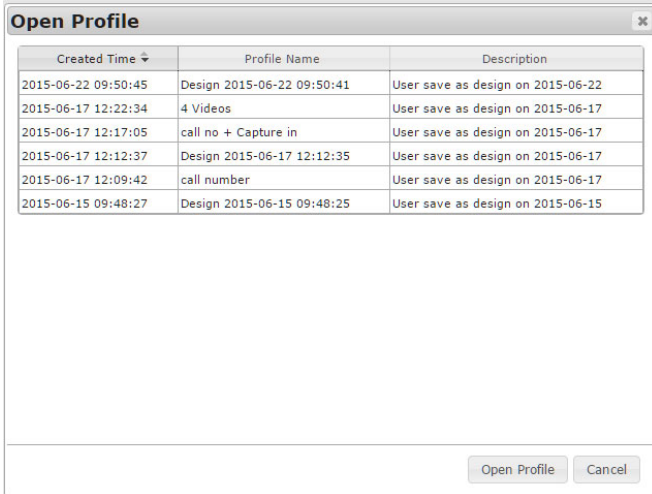


3. Click **Open Profile**.

## Deleting a Profile

To delete an existing profile:


1. From Profile, click on the **[Open Profile]** icon.
2. Select a profile from those available. Then click **Open Profile**.

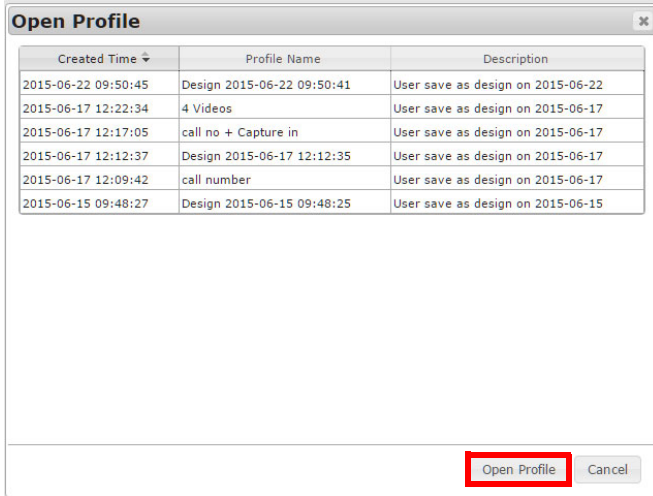


3. Next, select **Delete** from the menu bar.



4. Check the boxes next to the profiles you want to delete.

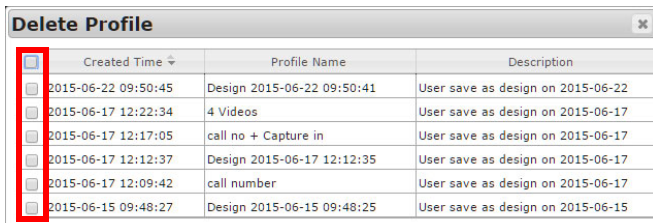

5. Finally, click on **Delete Profile**.

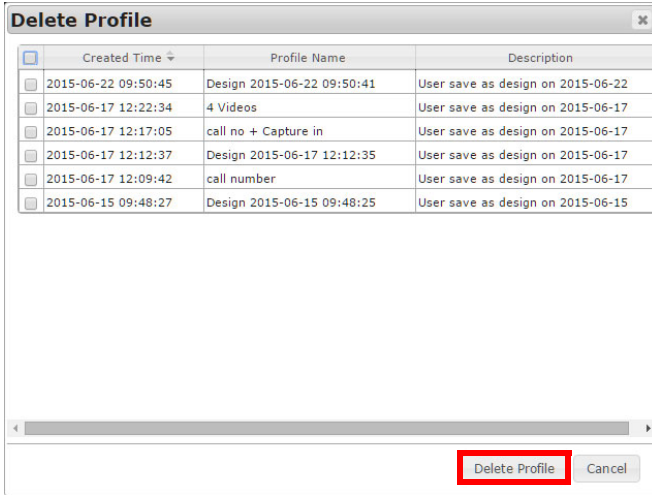





## Scheduling



*Scheduling* is located below the *Profile* options. Scheduling allows you to queue and play profiles in sequence for a specific amount of time.



### Calendar

Clicking on the **[Calendar]** icon will display a profile schedule. The following options are available for browsing and viewing the **[Calendar]**.

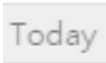Option	Description
	The <b>Left</b> button scrolls to the previous month/week/day.
	The <b>Right</b> button scrolls to the next month/week/day.
	The <b>Today</b> button returns you to the current month/week/day.
	The <b>Month</b> button displays the Calendar in monthly increments.

Option	Description
	The <b>Week</b> button displays the Calendar in weekly increments. It is the default view.
	The <b>Day</b> button displays the Calendar in daily increments.

### Adding Profiles to a Calendar

Saved profiles will be visible in the column to the left of the Calendar.

Item
Design 2015-06-22 09:50:41
4 Videos
call no + Capture in
Design 2015-06-17 12:12:35
call number
Design 2015-06-15 09:48:25

To add a profile to the Calendar:

1. Drag and drop the profile from the Profiles column into the desired time slot on the Calendar.

2. The profile will then become visible on the Calendar.

To add more than one profile to a Calendar item (to create a Profile Sequence):

1. Drag and drop a profile from the Profiles column into the desired time slot on the Calendar.

The screenshot shows a calendar interface. On the left, there is a list of profiles under the heading "Item":

Item
Design 2015-06-22 09:50:41
4 Videos
call no + Capture in
Design 2015-06-17 12:12:35
call number
Design 2015-06-15 09:48:25

On the right, there is a calendar grid for Monday, 9/28 and Tuesday, 9/29. The time slots are 06:00, 07:00, and 08:00. A blue profile bar is added to the 06:30 - 08:30 slot on Monday, 9/28. The profile bar contains the text "06:30 - 08:30", "Design 2015-06-22", and "09:50:41".

2. Drag and drop another profile from the Profiles column into an already created Calendar item.

The screenshot shows the same calendar interface as before. The profile list on the left is the same. The calendar grid on the right shows the same blue profile bar in the 06:30 - 08:30 slot on Monday, 9/28. A second blue profile bar is added to the 07:00 slot on Monday, 9/28. The second profile bar contains the text "4 Videos, Design 2015-06-17 12:12:35".

## Editing Profiles in a Calendar

To edit a profile on the Calendar:

1. Double-click on a profile that has been added to the Calendar.

The screenshot shows the same calendar interface as before. The profile list on the left is the same. The calendar grid on the right shows the same blue profile bar in the 06:30 - 08:30 slot on Monday, 9/28. The profile bar contains the text "06:30 - 08:30", "Design 2015-06-22", and "09:50:41".

2. The profile's properties window will then appear.

3. Here you can set the profile's:

- ◆ Duration: Start Time, End Time, All Day

- ◆ Repeat: Start Date, End Date

- ◆ Profile Sequence: The play order of profiles if more than one profile is included in the calendar item. Drag and drop the visible profiles into the Profile Sequence to add them. The duration of each individual profile will be the duration of the longest playing item within it.\*

---

**Note:** To determine the duration of an item in a profile, right-click on said item, select **Properties**, and view the value labeled **Media Duration (sec.)**.

---


4. Once all settings are correct, click on **Apply**.

5. If you want to remove the profile from the Calendar, click on **Delete**.




### Saving a Calendar

To save the profile layout in your Calendar, click on the Save button in the top menu bar. Saving a profile will automatically publish it (see *Playback*, page 33, for player controls).

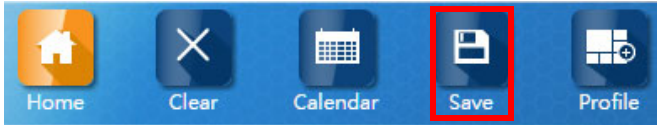


### Clearing a Calendar

To clear the profile layout in your Calendar, click on the Clear button in the top menu bar.

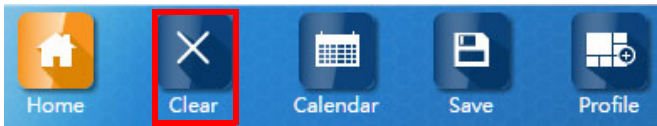

### Export Calendar

Clicking on the **[Export Calendar]** icon will download profile and calendar information to your computer's Download directory.

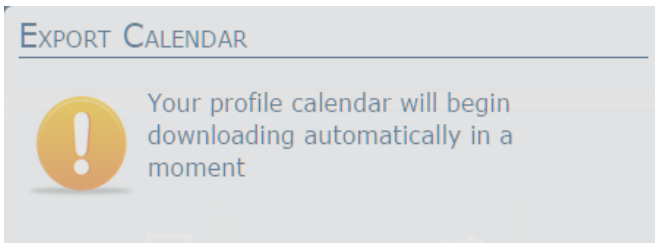

### Importing Profile and Calendar Information

To import this information into a VS1912, copy the exported file to a USB drive and connect it to a USB port found on the device (see page 5 for details).


---

**Note:** Imported profile and calendar information will overwrite the existing profile and calendar information on the VS1912.

---

## Overview

The *Overview* options allow you to view and configure the VS1912's settings.

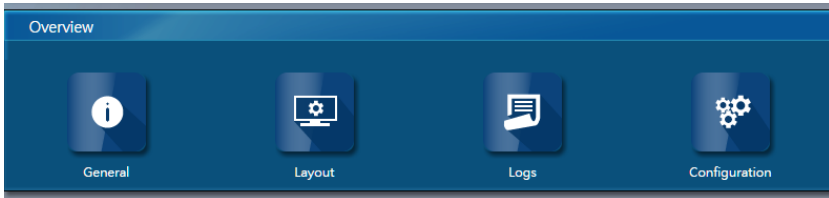

## General

Clicking on the **[General]** icon will display general system information. The following tabs are available in the **[General]** section:

- ◆ The *System* tab displays model, firmware version, schedule and profile information.

System	
Model Number	VS1912
Version	2.0.6
Model Name	RS-Player
Current Schedule	
Current Profile	call no + Capture in

- ◆ The *CPU/RAM Status* tab displays the current CPU and memory usage.

CPU/RAM Status	
CPU Usage	33.3 %
Total Memory	7113MB
Memory in Use	5330MB
Percentage of Memory in Use	75 %

- ◆ The *Network* tab displays network information of the VS1912's two Ethernet ports (including DHCP status, IP address, MAC address, subnet mask and gateway information).

System CPU/RAM Status Network Video Cards Storage						
Network						
LAN Port	DHCP	IP	MAC	Subnet Mask	Gateway	
LAN1	Off	192.168.99.159	00:00:00:00:00:03	255.255.255.0		
LAN2	Off	192.168.100.1	00:E0:4C:68:00:36	255.255.255.0		

- ◆ The *Video Cards* tab displays Layout, Video Card and Display information. To change Layout settings, see *Layout*, page 28.

System CPU/RAM Status Network Video Cards Storage						
Layout						
Number of Columns		2				
Number of Rows		4				
Horizontal Bezel		200 px				
Vertical Bezel		0 px				
Max. Independent Screens		9				
Video Cards						
ID	Name	Ports	Enabled			
1	E6760_MXH	6	1			
5	7660G	3	1			
Displays						
ID	Orientation	Width	Height			
1	0°	1920	1080			
2	0°	1920	1080			
3	0°	1920	1080			
4	0°	1920	1080			
5	0°	1920	1080			
6	0°	1920	1080			
7	0°	1920	1080			
8	0°	1920	1080			

- ◆ The *Storage* tab displays Total, Available and Used storage available on the VS1912.

System CPU/RAM Status Network Video Cards Storage				
Storage				
Total	Available	Used	Percentage Used	
52GB	41GB	8,6GB	18%	

## Layout

Clicking on the **[Layout]** icon will allow users to set the display layout of the video wall. The following tabs are available in the **[Layout]** section: Standard Mode and Asymmetrical Mode. For details on supported display layouts, see page 44.

### Standard Mode

The screenshot shows a configuration window with two tabs: "Standard Mode" (selected) and "Asymmetrical Mode". On the left, there is a "Video Card" section with a "Model(s)" field containing "E6760\_M0X" and "7660G". Below this are fields for "Horizontal Bezel (0 - 200 pixels)" set to "0", "Vertical Bezel (0 - 200 pixels)" set to "0", "Number of Columns" set to "2", "Number of Rows" set to "1", "Resolution" set to "1920x1080", and "Orientation" set to "Landscape". At the bottom of this section are "Show ID" and "Show Bezel Bar" buttons. On the right, a "Screen" area displays a 2x1 grid of two blue video cards labeled "1" and "2" within a 3840x1080 resolution frame. An "Apply" button is located at the bottom right of the screen area.

In Standard Mode, the settings for a symmetrical video wall layout can be configured (see page 44 for supported symmetrical video wall layouts). The information and settings available include:

- ◆ **Video Card Model(s):** Displays the video card model number(s).
- ◆ **Horizontal Bezel:** Allows configuration of the horizontal bezel of the video wall. To enable editing, you must first click Show Bezel Bar. The users may then input the desired size (0-200 pixels) or use the on-screen slider.
- ◆ **Vertical Bezel:** Allows configuration of the vertical bezel of the video wall. To enable editing, you must first click Show Bezel Bar. The user may then input the desired size (0-200 pixels) or use the on-screen slider.
- ◆ **Number of Columns:** Allows the user to set the number of columns in the video wall.
- ◆ **Number of Rows:** Allows the user to set the number of rows in the video wall.
- ◆ **Resolution:** Allows the user to set the desired resolution of the video wall.
- ◆ **Orientation:** Allows the user to set the desired orientation of the video wall.

- ◆ **EDID Override:** Allows the user to override default EDID settings and customize the video wall's refresh rate. If the video wall is operating normally, it is strongly suggested that the user does not enable EDID Override.
- ◆ **Refresh Rate:** If EDID Override is selected, the user may customize the video wall's refresh rate.
- ◆ **Show/Hide ID:** Shows or hides each screen's ID number on the video wall.
- ◆ **Show/Hide Bezel Bar:** Shows or hides the bezel bar settings and on-screen slider.
- ◆ **Apply:** Once the user has selected your desired settings, click on **Apply**.

## Asymmetrical Mode

In Asymmetrical Mode, the settings for an asymmetrical (or non-standard) video wall layout can be configured. The information and settings available include:

- ◆ **Virtual Size:** Allows you to customize the screen's resolution.
- ◆ **Scale:** Allows you to resize the screen while maintaining its resolution.
- ◆ **Max. Ports:** Displays the maximum ports available for the video wall.
- ◆ **Used Ports:** Displays the number of ports in use.
- ◆ **Screen List:** Displays settings for each screen in the video wall. For details on editing these settings, see page 30.
- ◆ **Add Screen:** If ports are available (see **Max. Ports** and **Used Ports** above), additional screens can be included in the video wall.

---

**Note:** In Asymmetrical Mode, the maximum number of screens is 8.

---

- ◆ **Delete:** To delete a screen, select it and click on Delete.
- ◆ **Apply:** Once you have selected your desired settings, click on Apply.

- ◆ **Splice Canvas:** Displays a virtual mockup of all screens in the video wall. By double-clicking on a screen in the Splice Canvas window or on a row in the Screen List, individual settings for the selected screen become available:

Standard Mode Asymmetrical Mode

Screen ID  
2

Position X

Position Y

Resolution

Rotation


Save Cancel

Splice Canvas

- ◆ **Screen ID:** The screen's identifying number (see **Show/Hide ID**, page 28, for details on how to show/hide screen ID numbers).
- ◆ **Position X:** The screen's position on the X axis. By default screens are at 0 on the X axis.
- ◆ **Position Y:** The screen's position on the Y axis. By default screens are at 0 on the Y axis.
- ◆ **Resolution:** The screen's resolution.
- ◆ **Rotation:** The screen's rotation. Options include 0°, 90°, 180° and 270°.
- ◆ **Save:** Saves the current screen settings.
- ◆ **Delete:** Removes the selected screen settings.
- ◆ **Apply:** Saves and applies the current screen settings.
- ◆ **Splice Canvas:** Displays a virtual mockup of all screens in the video wall.

## Logs

Clicking on the **[Logs]** icon will allow you to view and export system logs. Log types include: Playback, Information, Warning and Error. To enable system logging, set the maximum log file size and clear the log file, see *Logs*, page 37.

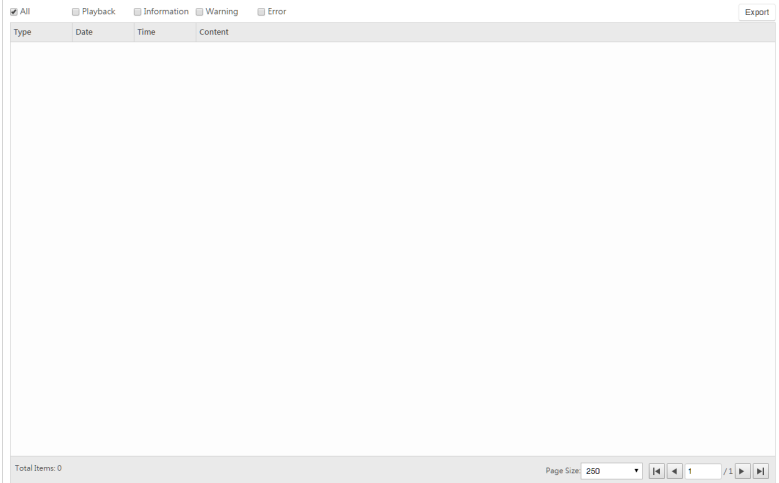

### Exporting System Logs

To export the VS1912's system logs:

1. Click on the Export button in the top right-hand corner.
2. The system log will then be downloaded to the browser's download directory.

## Configuration

Clicking on the [**Configuration**] icon will allow you to adjust important settings of the VS1912. The following tabs are available in the [**Configuration**] section: Power, Playback, Register Information, Server Information, Account, Network, Date/Time, Log and Firmware.

### Power

The *Power* page allows you to configure the VS1912's Power Schedule as well as Reboot and Shutdown the unit.

The screenshot shows the 'Power' configuration page with several tabs: Power, Playback, Register Information, Server Information, Account, Network, Date/Time, Log, and Firmware. Below the tabs are buttons for 'Reboot' and 'Shutdown'. The 'Power Schedule' section includes a dropdown menu for 'Action' (set to 'Shutdown') and a dropdown for 'Frequency' (set to 'Sunday'). There is an 'Add' button to the right. Below these is a table with columns 'Action', 'Frequency', and 'Time'. At the bottom are 'Edit' and 'Remove' buttons.

To add an entry to the Power Schedule:

1. Select the desired Action from the drop-down menu.

This screenshot shows the 'Power Schedule' form with the 'Action' dropdown menu open. The menu options are 'Shutdown', 'Power On', and 'Reboot'. The 'Shutdown' option is highlighted in blue. The 'Frequency' dropdown is set to 'Sunday' and the 'Time' field is '07:36'. The 'Add' button is visible to the right. Below the form are 'Edit' and 'Remove' buttons.

2. Select the desired Frequency from the drop-down menu.

This screenshot shows the 'Power Schedule' form with the 'Frequency' dropdown menu open. The menu options are 'Sunday', 'Monday', 'Tuesday', 'Wednesday', 'Thursday', 'Friday', 'Saturday', and 'Daily'. The 'Sunday' option is highlighted in blue. The 'Action' dropdown is set to 'Shutdown' and the 'Time' field is '08:32'. The 'Add' button is visible to the right. Below the form are 'Edit' and 'Remove' buttons.

- Use the sliders to choose what time you want this task to occur at, then click **Done**.

Power Schedule

Shutdown ▾ Sunday ▾ 07:36 Add

Action	Frequency
Shutdown	Sunday

**Choose Time**

Time 07:36

Hour

Minute

Today Done

Edit Remove

- Click **Add**.

Power Schedule

Shutdown ▾ Sunday ▾ Add

Action	Frequency	Time
--------	-----------	------

To Edit or Remove an entry from the Power Schedule:

- Select the entry.
- Click on either Edit or Remove at the bottom of the Power page.

Power Schedule

Shutdown ▾ Sunday ▾ 07:36 Add

Action	Frequency	Time
Shutdown	Sunday	08:32

Edit Remove

## Playback

The *Playback* page allows you to control profile playback, enable widget transparency and preview the current profile.

Power Playback Register Information Server Information Account Network Date/Time Log Firmware

Operation


Start Player Stop Player Restart Player

Transparency Settings


Enable Transparency

Start Live View

The Operation section allows you to: Start, Stop or Restart playback of the current profile.




To enable the widget transparency feature during playback, select the checkbox under Widget Transparency Settings. For more information on widgets, see page 16.




To preview the current profile:

1. Select **Start Live View**.



2. A still image of the current profile will appear every few seconds at the bottom of the Playback page.



## License

The *License* page allows you to register the VS1912 with ATEN, view and update its License Key and view and update its Name.

The screenshot shows the 'Register Information' tab selected in a navigation bar. The page contains three sections:

- Registration:** Includes an 'Apply' button and a 'Re-register' checkbox.
- License Key:** A text input field contains 'dbcf225b-623e-4181-b8cd-b273ccbe5b77', with an 'Apply' button below it.
- Player:** A text input field contains 'RS-Player', with an 'Apply' button below it.

## Server Information

The *Server Information* page allows you to view and update the VS1912's Server IP Address, Server Pairing Key and confirm its Registration Status.

The screenshot shows the 'Server Information' tab selected in a navigation bar. The page contains the following fields:

- Server IP Address:** Text input field containing 'rs1.rapidsignage.com'.
- Server Pairing Key:** Empty text input field.
- Registration Status:** Labeled 'Registration Failed'.
- Apply:** Button at the bottom.

## Account

The *Account* page allows you to change the password used when accessing the VS1912's GUI.

The screenshot shows the 'Account' tab selected in a navigation bar. The page contains the following fields:

- Username:** Text input field containing 'admin'.
- Password:** Empty text input field.
- New Password:** Empty text input field.
- Confirm Your Password:** Empty text input field.
- Apply:** Button at the bottom.

## Network

The *Network* page allows you to configure the VS1912's network settings.

Power Playback Register Information Server Information Account **Network** Date/Time Log Firmware

Network

LAN Port	DHCP	IP	Subnet Mask	Gateway	MAC
LAN1	<input checked="" type="checkbox"/>	192.168.99.159	255.255.255.0		00:00:00:00:00:03
LAN2	<input type="checkbox"/>	192.168.100.1	255.255.255.0		00:E0:4C:68:00:36

Default Gateway: LAN1

Domain Name Server Setting

Auto

DNS1:

DNS2:

Apply

In Network, double-click the DHCP, IP, Subnet Mask and Gateway fields to edit these settings. To set either of these two LAN ports as the Default Gateway, use the drop-down menu underneath this section.

---

**Note:** Check DHCP to allow the DHCP server to assign an IP address to the VS1912. Uncheck DHCP to enter your own static IP address settings for the device.

---

Domain Name Settings can be set up:

- ♦ Automatically by checking the Obtain DNS Settings Automatically option.
- ♦ Manually by entering one or two DNS server addresses in the fields at the bottom of this page.

To save your settings, click on **Apply**.

## Date/Time

The *Date/Time* page allows you to configure the VS1912's internal clock and calendar.

This can be done:

- ◆ Manually by inputting the date and time.
- ◆ Automatically by selecting Sync with Computer. The VS1912 will then copy the date and time from the connected computer.
- ◆ Automatically by selecting Use Network Time. The VS1912 will then copy the date and time from the NTP server at the selected time interval.\*

---

**Note:** This feature requires an active internet connection.


---

## Logs

The *Log* page allows you to enable system logging, set the maximum log file size and clear the log file. To view or export the log file, see *Logs*, page 31.

## Firmware

The *Firmware* allows you to view the VS1912's current firmware Version, update to newer firmware versions and Clear All Saved Data.

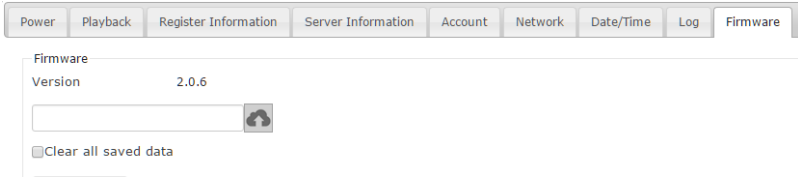

Power Playback Register Information Server Information Account Network Date/Time Log Firmware

Firmware

Version 2.0.6

Clear all saved data

To upgrade the firmware, do the following:

1. Click on the empty field to browse to the firmware upgrade file. Make sure you have the correct file for the VS1912.



2. Click on the upload button to start the upgrade process.



- 
- Note:** 1. When updating firmware, it is recommended that users log in using an incognito window in Google Chrome ([Ctrl]+[Shift]+[N]). This ensures that no errors occur due to cookies.
2. After updating the firmware, it's recommended that you clear your web browser's cache and then close and reopen the web browser. This will ensure the GUI refreshes and functions properly.
-

# Chapter 5

## RS-232 Commands

### Overview

---

In order to use the RS-232 serial interface to attach a high-end controller (such as a PC) to the VS1912, use a serial cable such as a modem cable. The end connecting to the VS1912 should have a 9-pin male connector. Connect this to the serial interface on the rear of the VS1912. Refer to number 4 on the diagram on page 8.

- 
- Note:** 1. RS-232 functionality is pending and will be available with future firmware upgrades.
2. To configure the controller serial port, see the section below.
- 

### RS-232 Serial Interface

---

The VS1912's built-in bi-directional RS-232 serial interface allows system control through a high-end controller, PC, and/or home automation / home theater software package.

#### Configuring the Serial Port

The controller's serial port should be configured as follows:

Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

This Page Intentionally Left Blank

## Safety Instructions

---

### General

- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ This product is for indoor use only.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.

- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - ◆ Liquid has been spilled into the device.
  - ◆ The device has been exposed to rain or water.
  - ◆ The device has been dropped, or the cabinet has been damaged.
  - ◆ The device exhibits a distinct change in performance, indicating a need for service.
  - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

## Technical Support

---

### International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://eservice.aten.com>
- ◆ For telephone support, see *Telephone Support*, page iv:

### North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:


- ◆ Product model number, serial number, and date of purchase.
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ◆ Any error messages displayed at the time the error occurred.
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help.

## Supported Display Layouts

### Orientation


The following video wall display layouts are supported by the VS1912:

Layout	Orientation	Resolution
8x1	Landscape / Portrait	1920x1080 / 1080x1920
6x2		
4x3		
3x4		
2x6		
1x8		

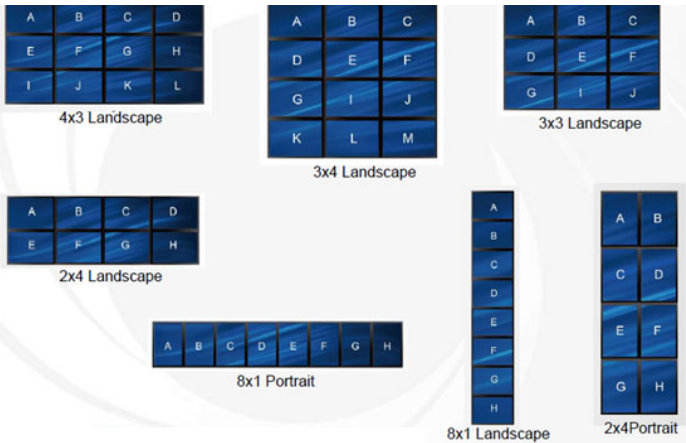

### Rotation

Only screen rotations of 0°, 90°, 180° and 270° are supported:

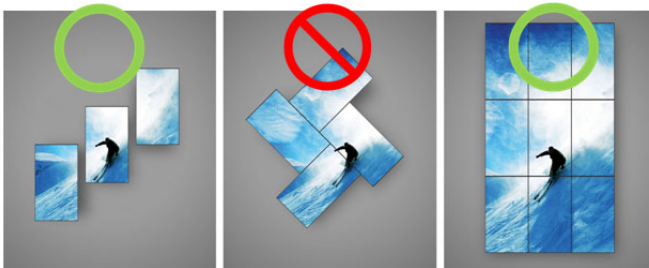

## Supported File Types

The following file types are supported during upload and playback

Media Type	Format					
Video	mp4	avi	wmv	mov	m4v	mkv
Flash	swf					
Audio	mp3	mp2	m4a	m1a	wav	
Image (Static)	jpg	jpeg	bmp	png		
Image (Animated)	gif					
Document (Office)	ppt	pptx	doc	docx	xls	xlsx
Document (Other)	pdf					
Web	htm	html				

operations:

## Playback Limitations


When using audio, video and web widgets in a profile, specific limitations exist.

### Audio


If a profile includes several audio files or videos with sound, then the audio output will feature these mixed together. To avoid this, please turn the volume off on select video and audio files manually.

To do this, follow these steps:

1. Right-click on the file in the profile canvas.
2. Click on Properties.

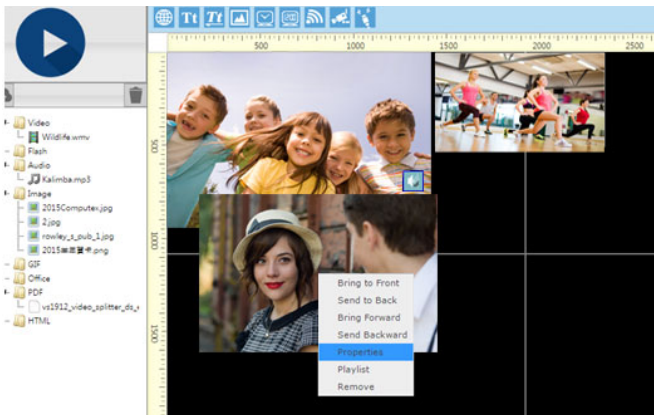

3. Change the value for Volume to 0.

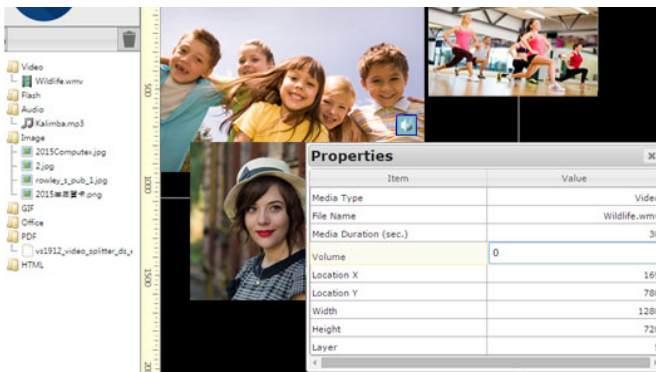


## **Video**

When using more than one screen and playing of more than one video, the following limitations apply (please note that these values are for reference only):

<b>Mode</b>	<b>Video Wall Screens</b>	<b>Max. Resolution</b>	<b>Video Files</b>	<b>Max. Bit Rate</b>
Standard	12	1920x1080/1080P	2	32
	12	1920x1080/1080P	4	8
	4	1920x1080/1080P	4	32
Asymmetrical	8	1280x720/720P	1	32
	4	1280x720/720P	2	32

## **Web Widget**

If a web widget is created with a resolution over 2048X2048, then it must be contained within one screen. If such a widget overlaps two or more screens, the following warning message will appear:

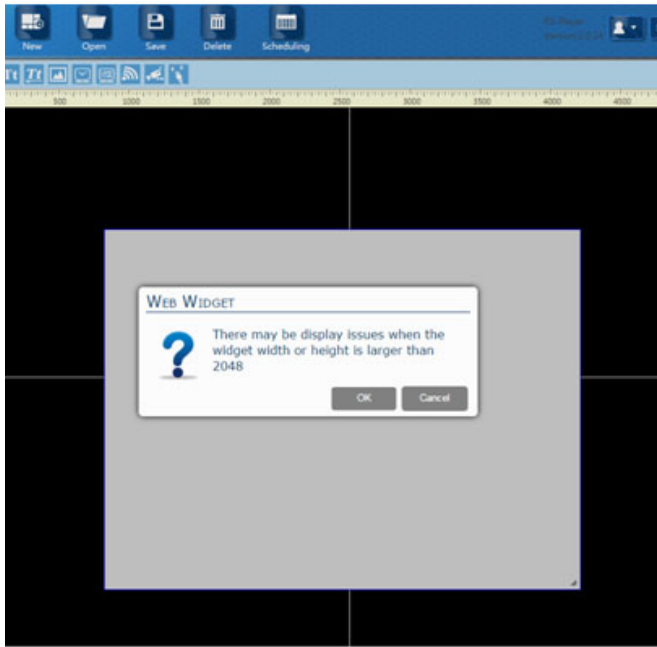

## Specifications

Function		VS1912
Video Input	Interface	1 x HDMI Type A Female
Video Output	Interface	12 x DisplayPort 1.1 Female
Video	Max. Data Rate	8.64 Gbps (2.7 Gbps per lane)
	Max. Pixel Clock	340 MHz (with DP to DVI active adapter)
	Compliance	HDMI (3D, Deep Color) DisplayPort 1.1
Audio	Output	1 x 3.5 mm Stereo Jack Female
Control	RS-232*	Connector: 2 x DB-9 Female (Black) Baud Rate: 38400–19200 Protocol: Hardware & Software Flow Control
	Ethernet	2 x RJ-45 Female
USB		2 x USB 3.0 Female 4 x USB 2.0 Female
Power	Connector	1 x 3-Prong AC Socket
	I/P Rating	100-240 VAC; 50-60 Hz; 3.0 A
	Consumption	120 VAC, 400W; 230 VAC, 400W
Environment	Operating Temp.	0–40°C
	Storage Temp.	-20–60°C
	Humidity	0–80% RH, Non-condensing
Physical Properties	Housing	Metal
	Weight	5.75 kg (Chassis Only)
	Dimensions (L x W x H)	43.00 x 27.00 x 4.40 cm
Carton Lot		3 pcs

\* RS-232 functionality is pending and will be available with future firmware upgrades.

## **ATEN Warranty Policy**

---

The warranty policy may vary by product category and region of purchase. For details, please visit ATEN's official website, select your purchase countries/ regions and then go to the Support Center, or contact your local ATEN sales representative for further assistance.

© Copyright 2026 ATEN® International Co., Ltd.  
Released: 2026-05-13

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.